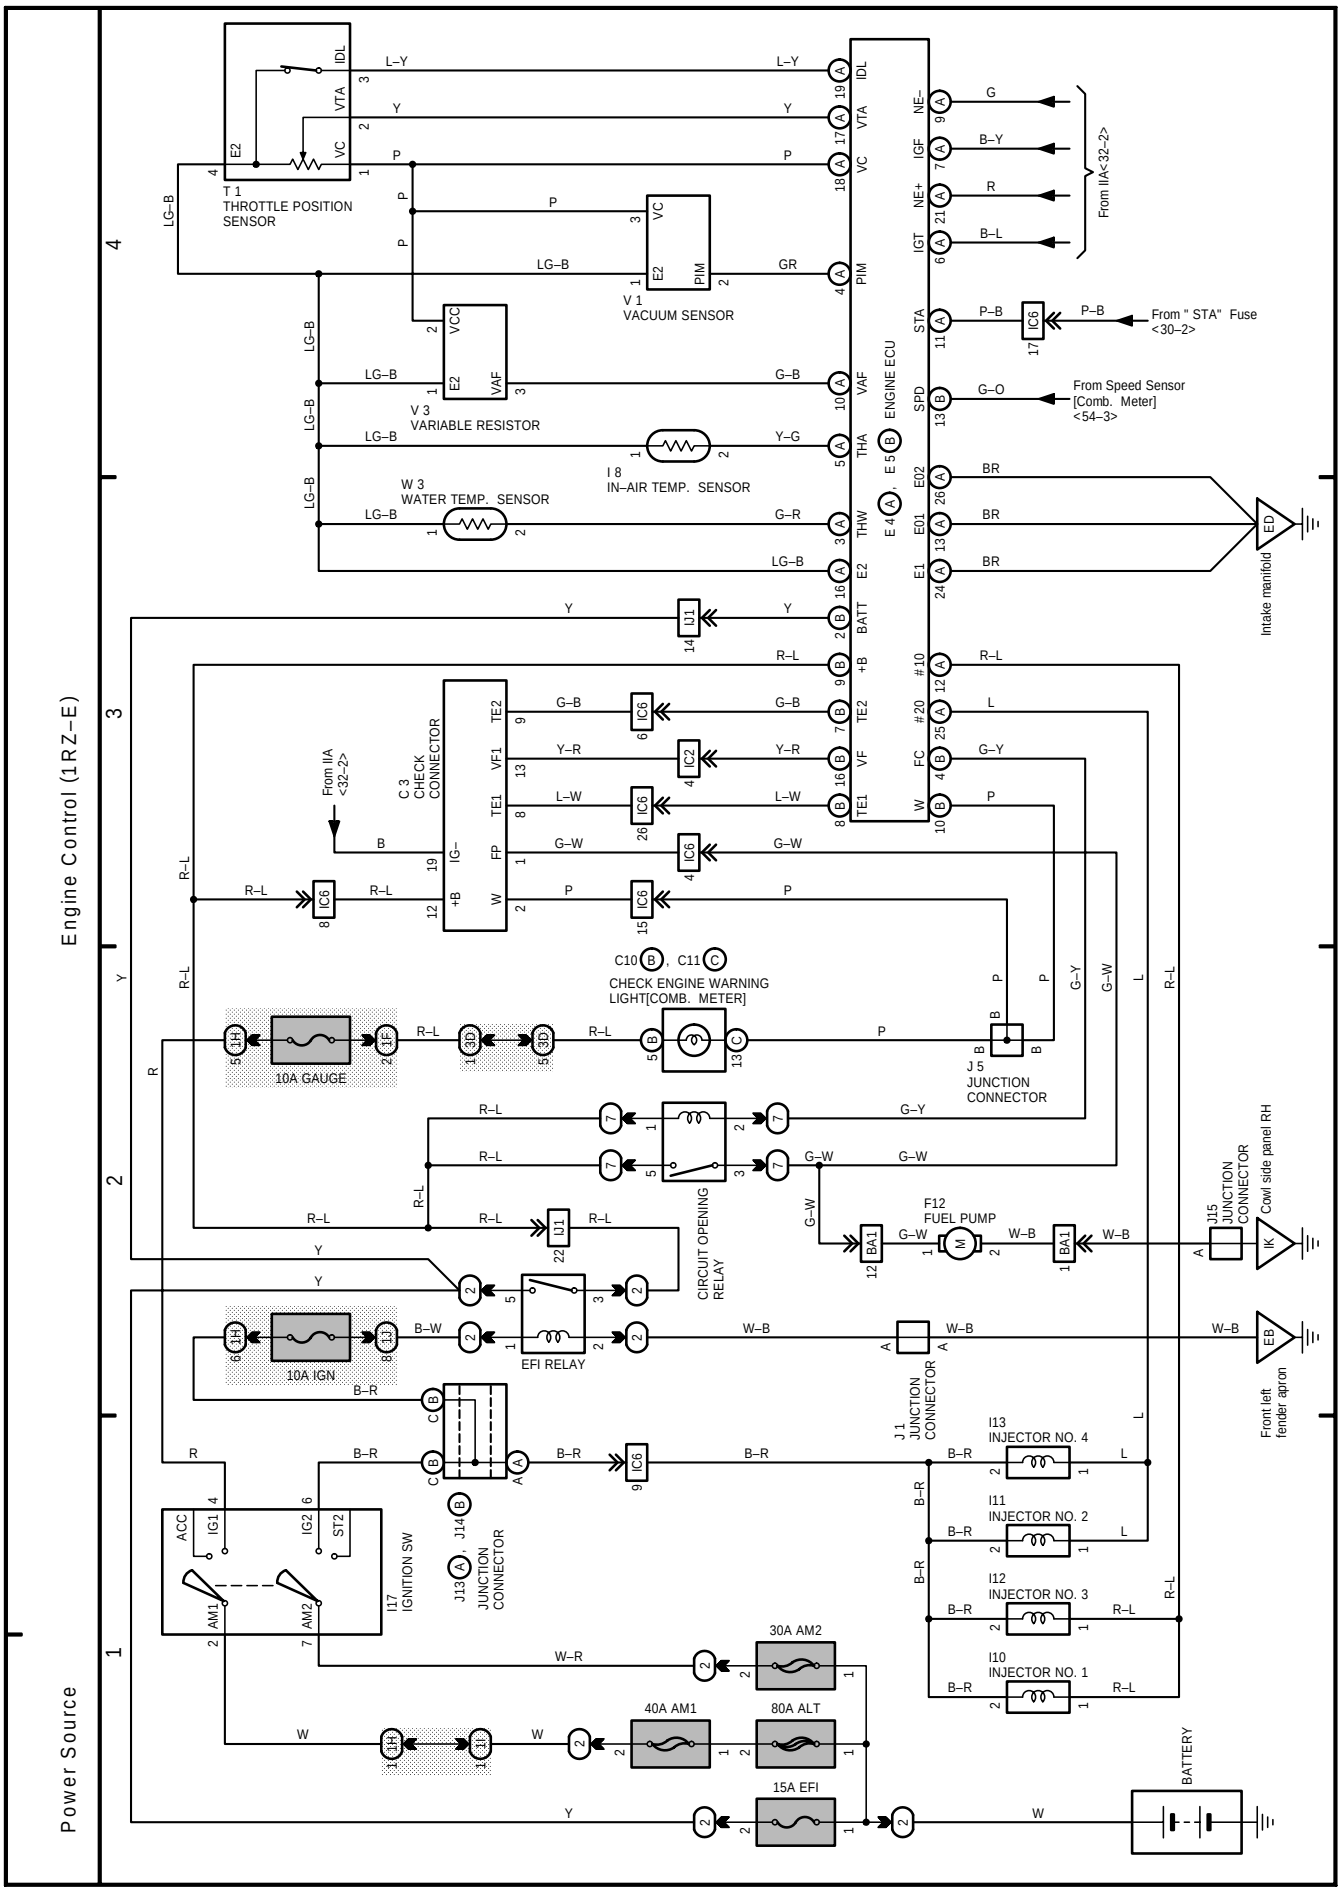

Engine Control (1RZ–E)
Power Source
34 HILUX (RHD)
T 1
THROTTLE POSITION SENSOR
V 1
VACUUM SENSOR
V 3
VARIABLE RESISTOR
I 8
IN–AIR TEMP. SENSOR
W 3
WATER TEMP. SENSOR
ENGINE ECU
C 3
CHECK CONNECTOR
From IIA <32–2>
From IIA<32–2>
From " STA" Fuse <30–2>
From Speed Sensor [Comb. Meter] <54–3>
Intake manifold
C10 , C11
CHECK ENGINE WARNING LIGHT[COMB. METER]
10A GAUGE
J 5
JUNCTION CONNECTOR
F12
FUEL PUMP
CIRCUIT OPENING RELAY
J15
JUNCTION CONNECTOR
Cowl side panel RH
10A IGN
EFI RELAY
Front left fender apron
J 1
JUNCTION CONNECTOR
I13
INJECTOR NO. 4
I11
INJECTOR NO. 2
I12
INJECTOR NO. 3
I10
INJECTOR NO. 1
I17
IGNITION SW
J13 , J14
JUNCTION CONNECTOR
30A AM2
40A AM1
80A ALT
15A EFI
BATTERY