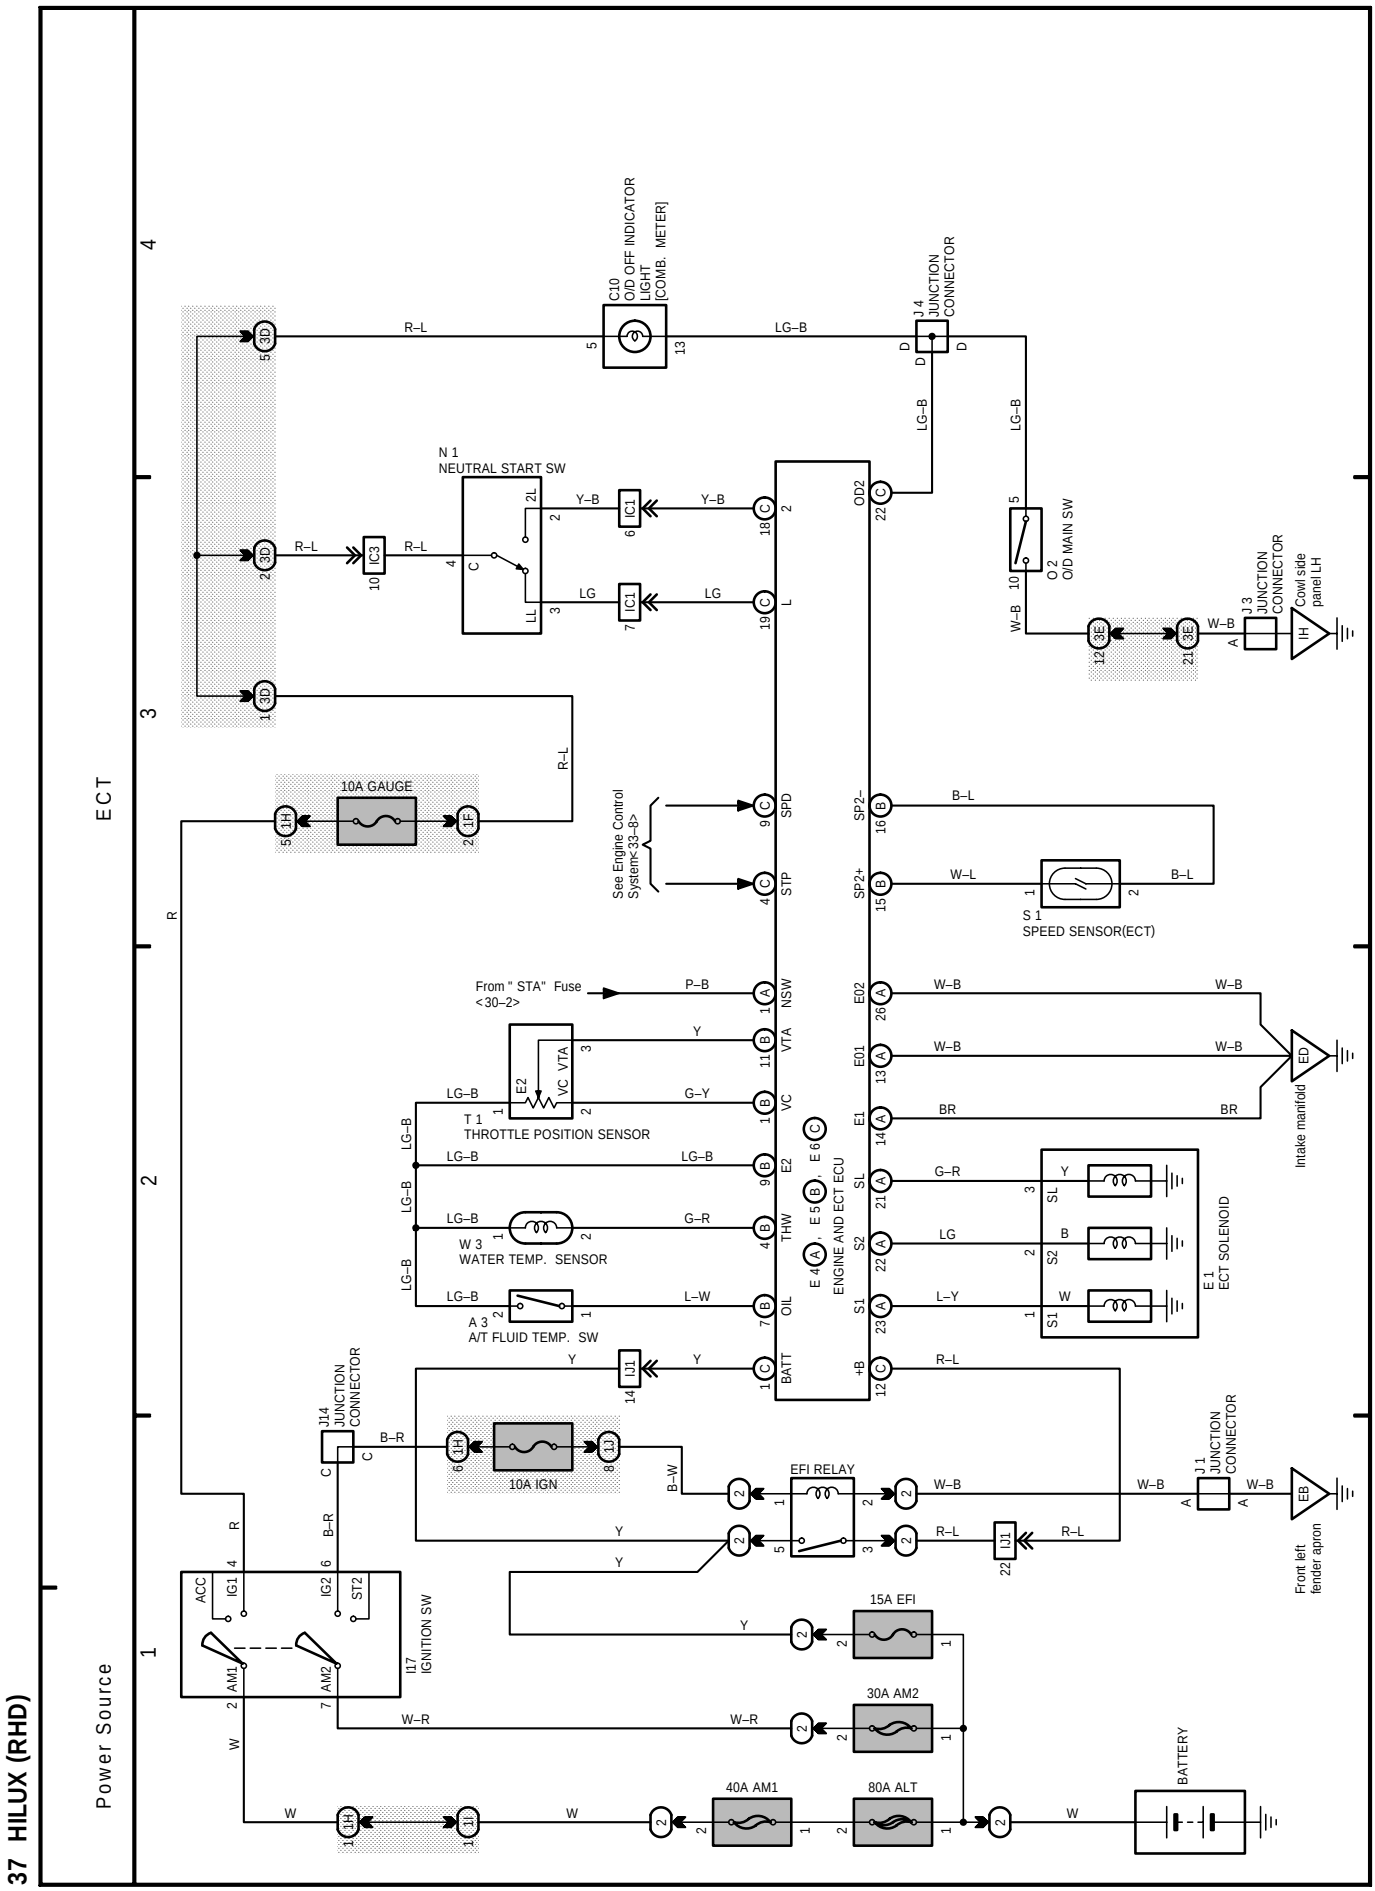

37 HILUX (RHD)
Power Source
ECT
1
2
3
4
C10 O/D OFF INDICATOR LIGHT [COMB. METER]
J4 JUNCTION CONNECTOR
N 1 NEUTRAL START SW
O 2 O/D MAIN SW
J3 JUNCTION CONNECTOR
Cowl side panel LH
10A GAUGE
See Engine Control System<33-8>
S 1 SPEED SENSOR(ECT)
From " STA" Fuse <30-2>
T 1 THROTTLE POSITION SENSOR
W 3 WATER TEMP. SENSOR
A 3 A/T FLUID TEMP. SW
E 4 , E 5 , E 6 ENGINE AND ECT ECU
E 1 ECT SOLENOID
Intake manifold
J14 JUNCTION CONNECTOR
10A IGN
EFI RELAY
J1 JUNCTION CONNECTOR
Front left fender apron
I17 IGNITION SW
15A EFI
30A AM2
40A AM1
80A ALT
BATTERY