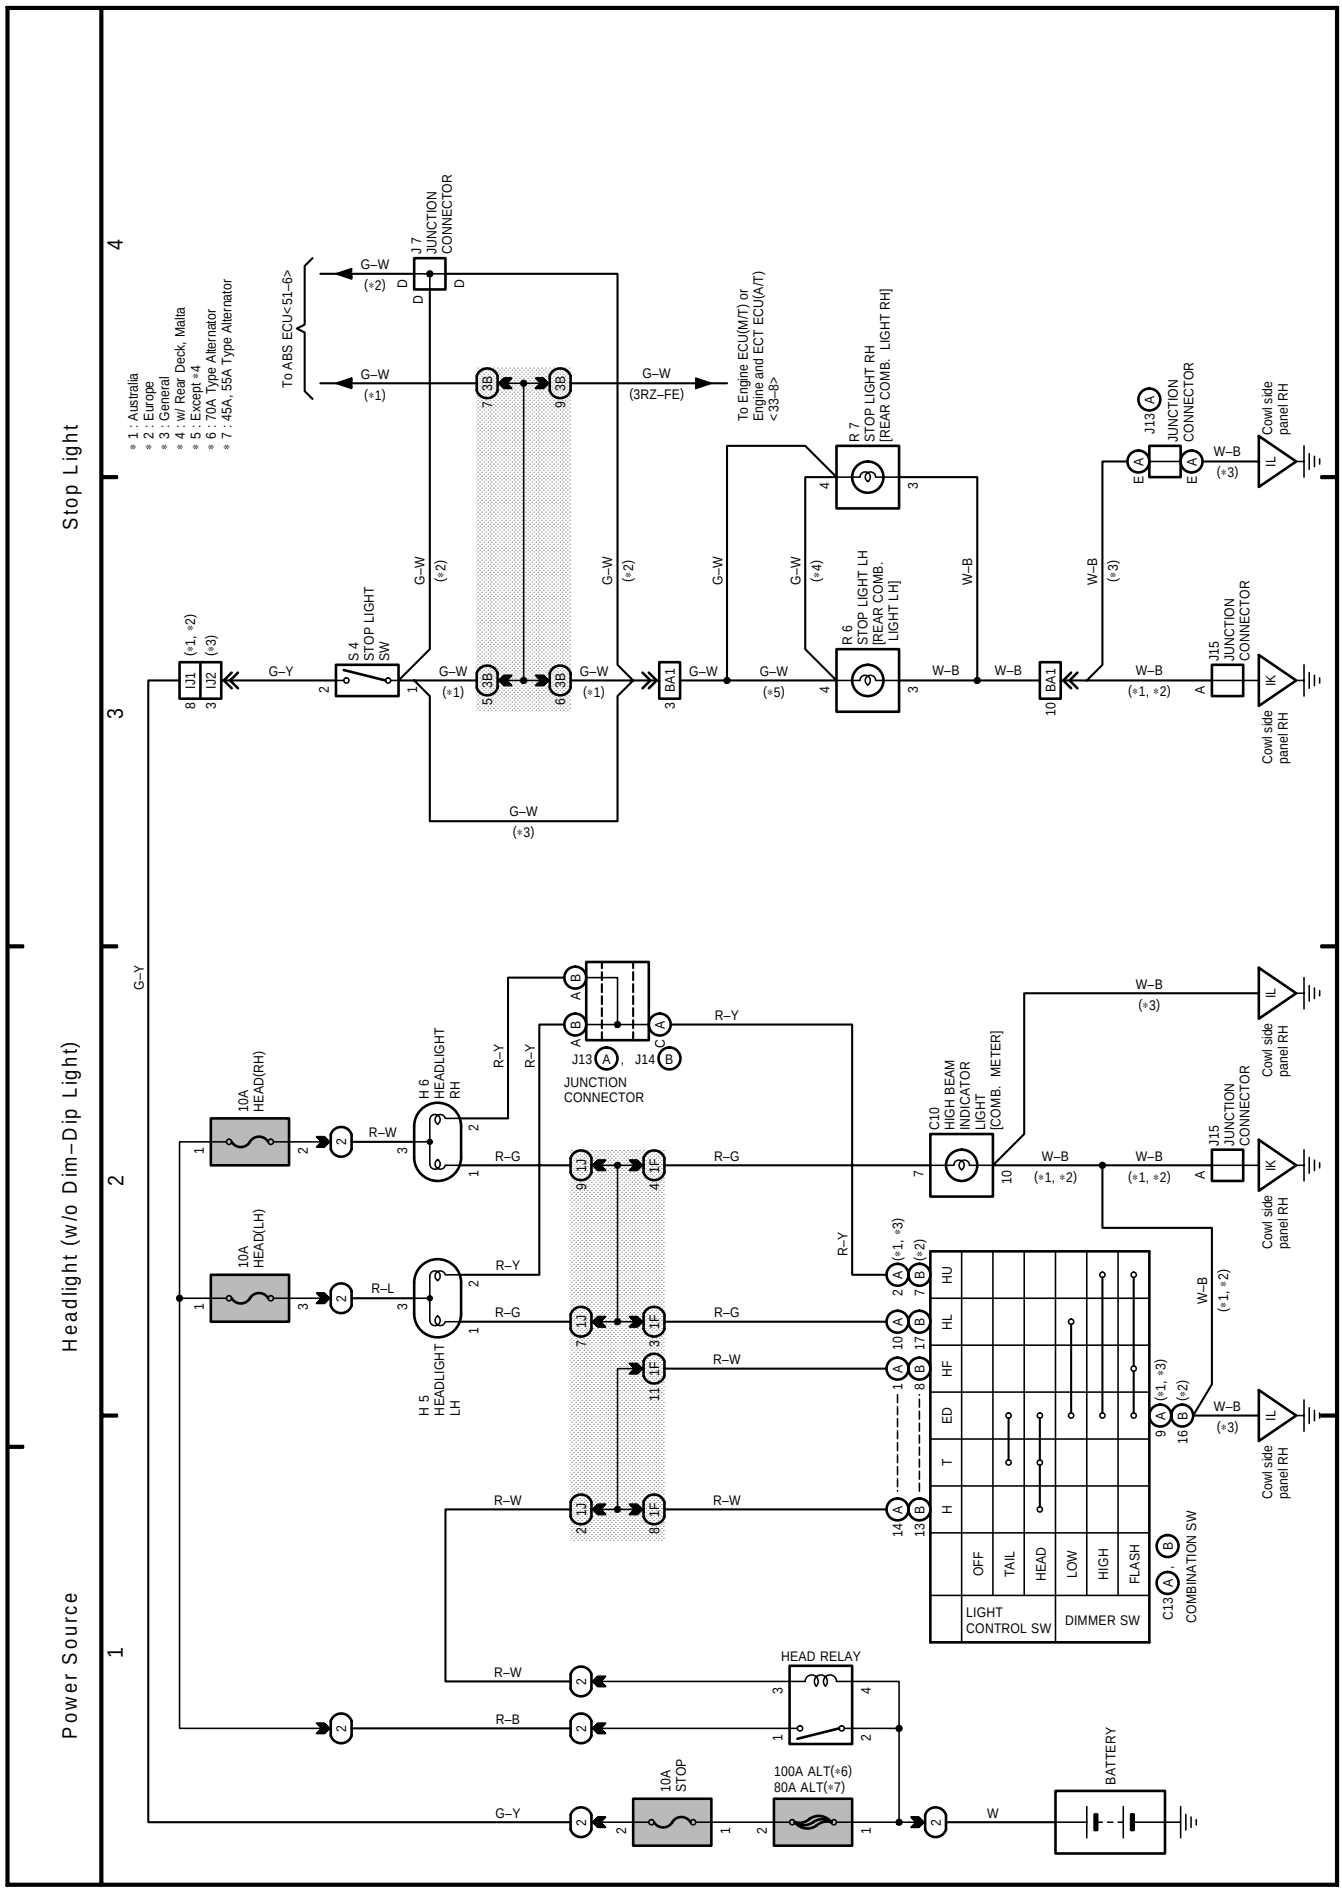

Power Source
Headlight (w/o Dim–Dip Light)
Stop Light
1
2
3
4
*1 : Australia
*2 : Europe
*3 : General
*4 : w/ Rear Deck, Malta
*5 : Except *4
*6 : 70A Type Alternator
*7 : 45A, 55A Type Alternator
To ABS ECU<51–6>
J 7 JUNCTION CONNECTOR
To Engine ECU(M/T) or Engine and ECT ECU(A/T) <33–8>
S 4 STOP LIGHT SW
R 7 STOP LIGHT RH [REAR COMB. LIGHT RH]
R 6 STOP LIGHT LH [REAR COMB. LIGHT LH]
J13 JUNCTION CONNECTOR
J15 JUNCTION CONNECTOR
Cowl side panel RH
10A HEAD(RH)
10A HEAD(LH)
H 6 HEADLIGHT RH
H 5 HEADLIGHT LH
J13 , J14 JUNCTION CONNECTOR
C10 HIGH BEAM INDICATOR LIGHT [COMB. METER]
LIGHT CONTROL SW
DIMMER SW
OFF
TAIL
HEAD
LOW
HIGH
FLASH
C13 COMBINATION SW
HEAD RELAY
10A STOP
100A ALT(*6) 80A ALT(*7)
BATTERY