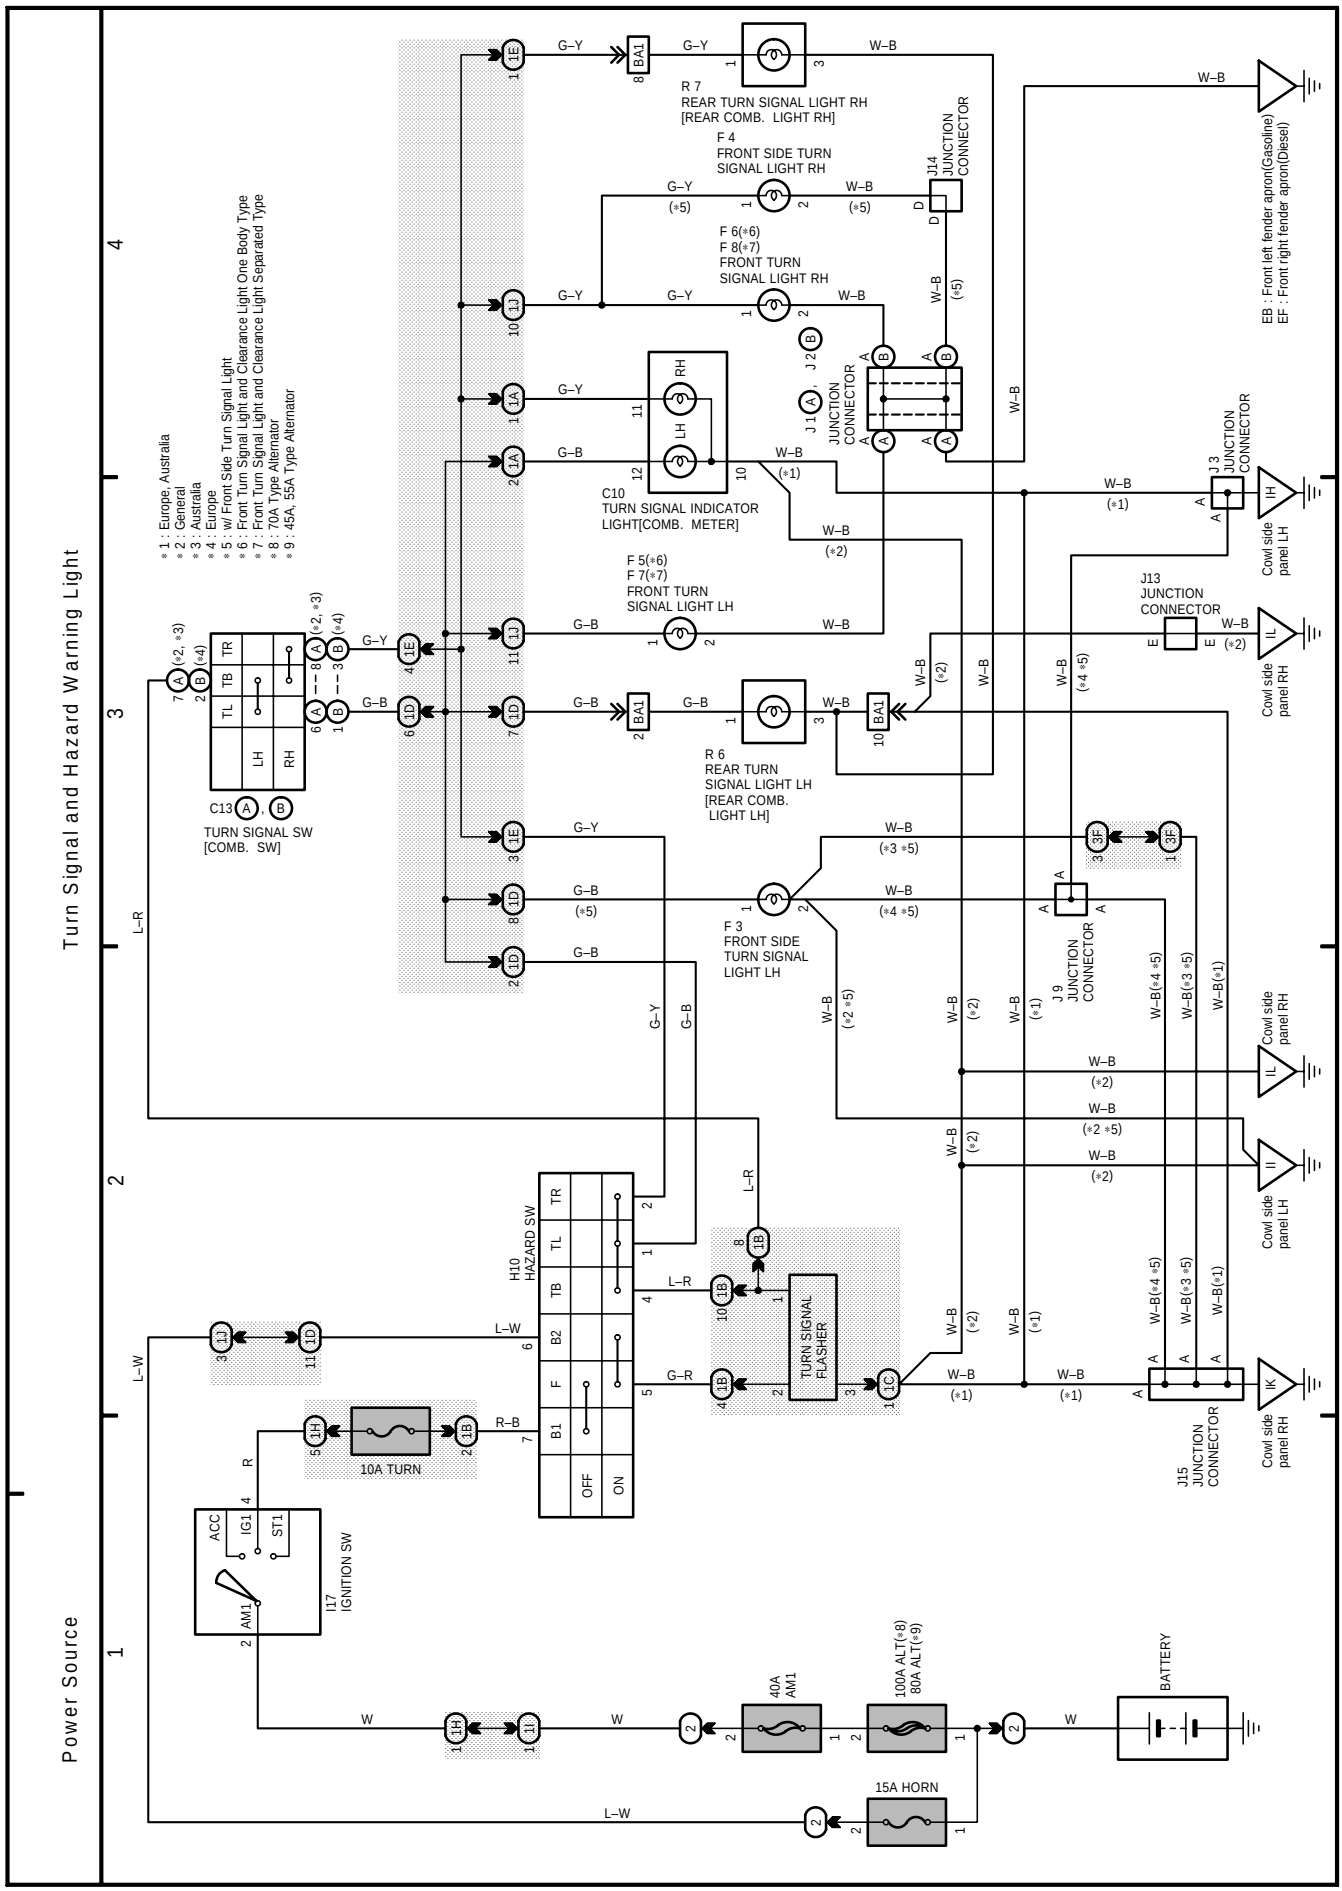

Power Source
Turn Signal and Hazard Warning Light
* 1 : Europe, Australia
* 2 : General
* 3 : Australia
* 4 : Europe
* 5 : w/ Front Side Turn Signal Light
* 6 : Front Turn Signal Light and Clearance Light One Body Type
* 7 : Front Turn Signal Light and Clearance Light Separated Type
* 8 : 70A Type Alternator
* 9 : 45A, 55A Type Alternator
R 7
REAR TURN SIGNAL LIGHT RH
[REAR COMB. LIGHT RH]
F 4
FRONT SIDE TURN
SIGNAL LIGHT RH
F 6(*6)
F 8(*7)
FRONT TURN
SIGNAL LIGHT RH
C10
TURN SIGNAL INDICATOR
LIGHT[COMB. METER]
F 5(*6)
F 7(*7)
FRONT TURN
SIGNAL LIGHT LH
R 6
REAR TURN
SIGNAL LIGHT LH
[REAR COMB.
LIGHT LH]
F 3
FRONT SIDE
TURN SIGNAL
LIGHT LH
C13
TURN SIGNAL SW
[COMB. SW]
H10
HAZARD SW
TURN SIGNAL
FLASHER
I17
IGNITION SW
10A TURN
40A
AM1
100A ALT(*8)
80A ALT(*9)
15A HORN
BATTERY
J1
JUNCTION
CONNECTOR
J2
JUNCTION
CONNECTOR
J3
JUNCTION
CONNECTOR
J9
JUNCTION
CONNECTOR
J13
JUNCTION
CONNECTOR
J14
JUNCTION
CONNECTOR
J15
JUNCTION
CONNECTOR
EB : Front left fender apron(Gasoline)
EF : Front right fender apron(Diesel)
Cowl side
panel LH
Cowl side
panel RH