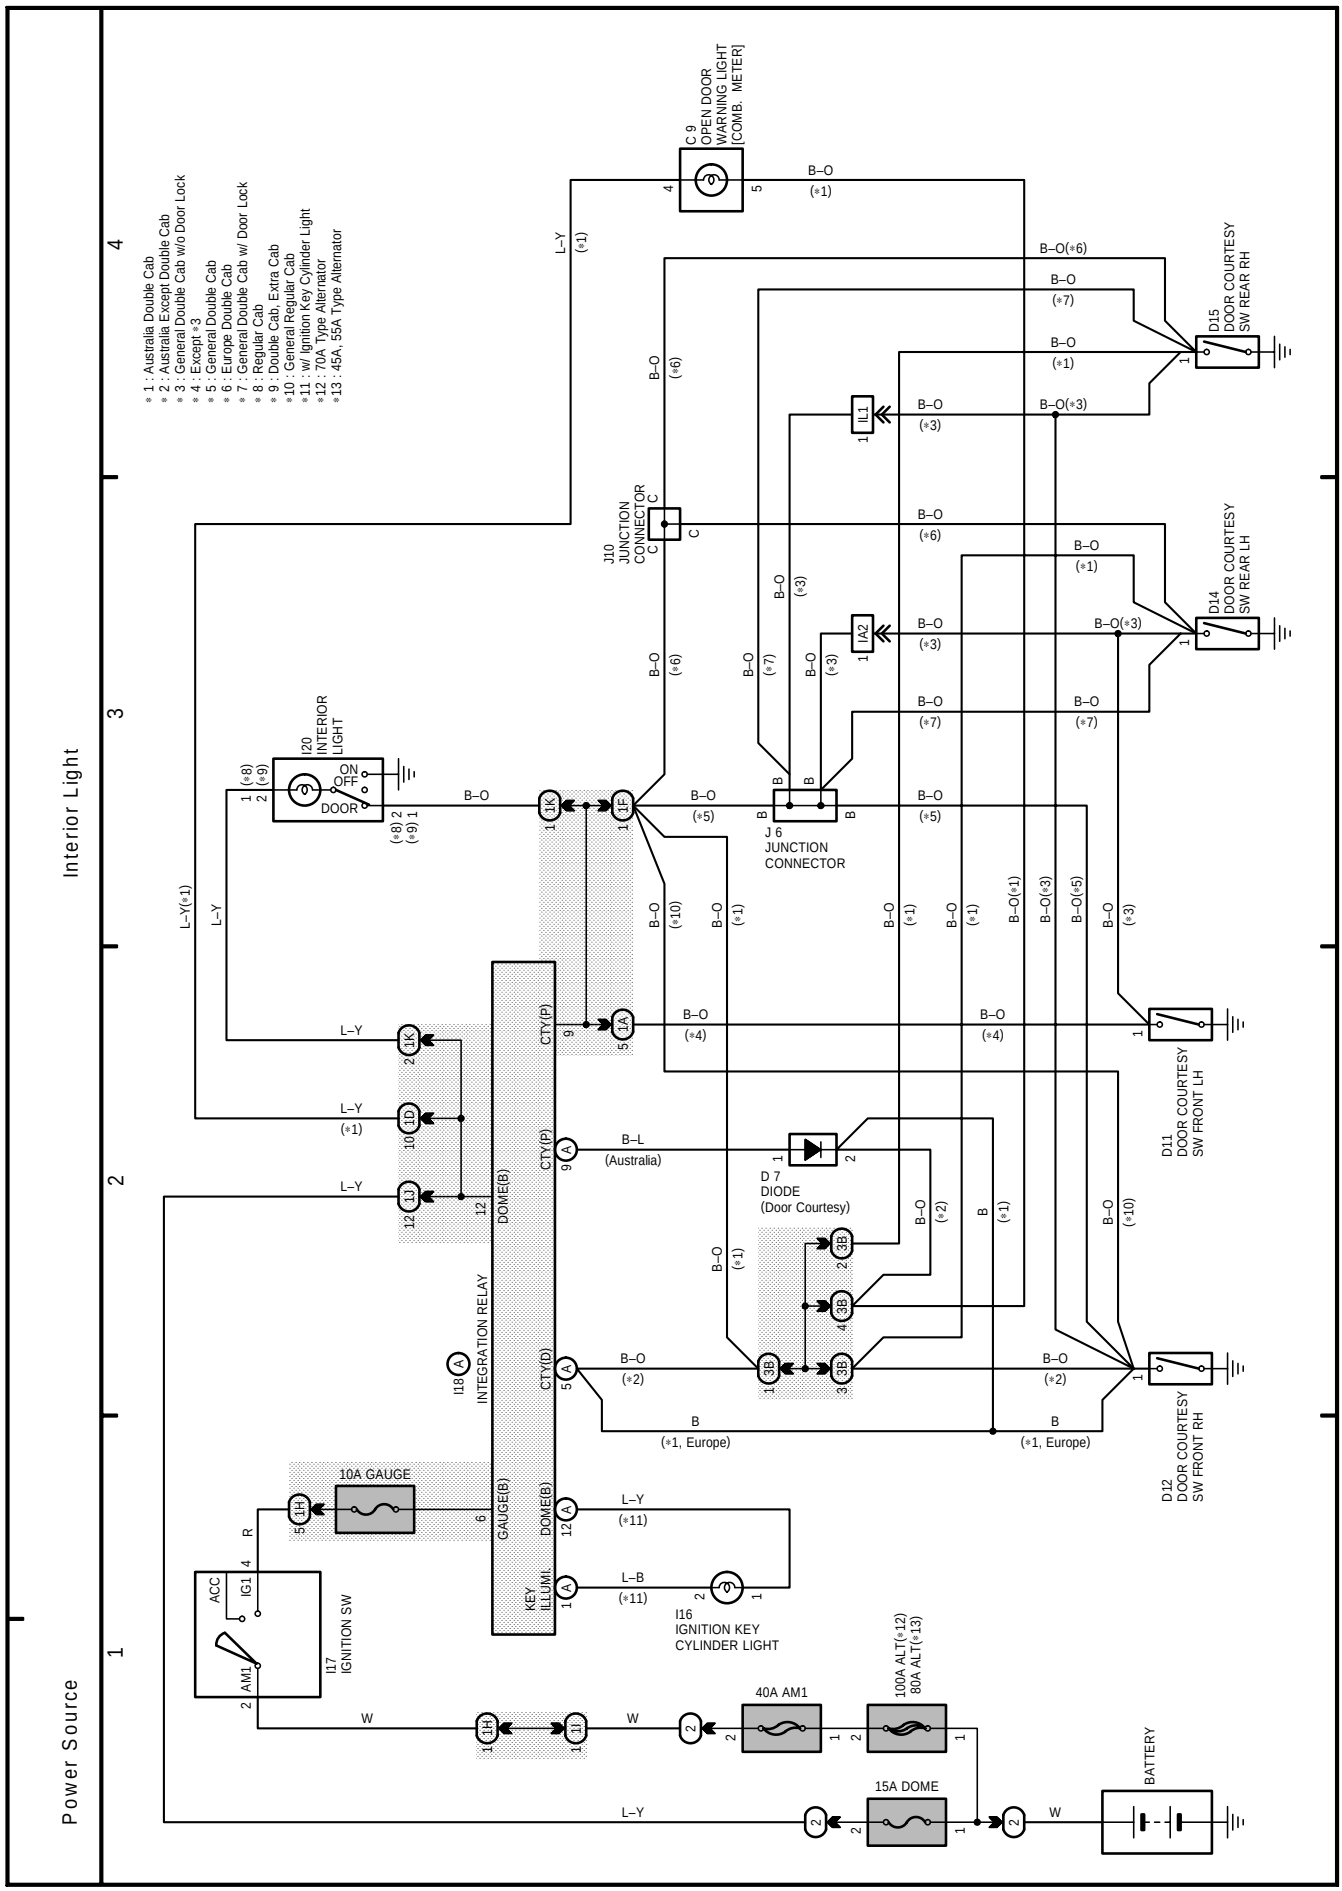

Power Source
Interior Light
1
2
3
4
* 1 : Australia Double Cab
* 2 : Australia Except Double Cab
* 3 : General Double Cab w/o Door Lock
* 4 : Except * 3
* 5 : General Double Cab
* 6 : Europe Double Cab
* 7 : General Double Cab w/ Door Lock
* 8 : Regular Cab
* 9 : Double Cab, Extra Cab
*10 : General Regular Cab
*11 : w/ Ignition Key Cylinder Light
*12 : 70A Type Alternator
*13 : 45A, 55A Type Alternator
C 9 OPEN DOOR WARNING LIGHT [COMB. METER]
J10 JUNCTION CONNECTOR C
J 6 JUNCTION CONNECTOR
I20 INTERIOR LIGHT
ON
OFF
DOOR
D15 DOOR COURTESY SW REAR RH
D14 DOOR COURTESY SW REAR LH
D11 DOOR COURTESY SW FRONT LH
D12 DOOR COURTESY SW FRONT RH
D 7 DIODE (Door Courtesy)
I18 INTEGRATION RELAY
CTY(P)
CTY(D)
DOME(B)
GAUGE(B)
KEY ILLUMI.
10A GAUGE
I17 IGNITION SW
ACC
IG1
AM1
I16 IGNITION KEY CYLINDER LIGHT
40A AM1
100A ALT(*12) 80A ALT(*13)
15A DOME
BATTERY
B–O
L–Y
L–Y(*1)
B–L
(Australia)
B
(*1, Europe)
L–B
W
R