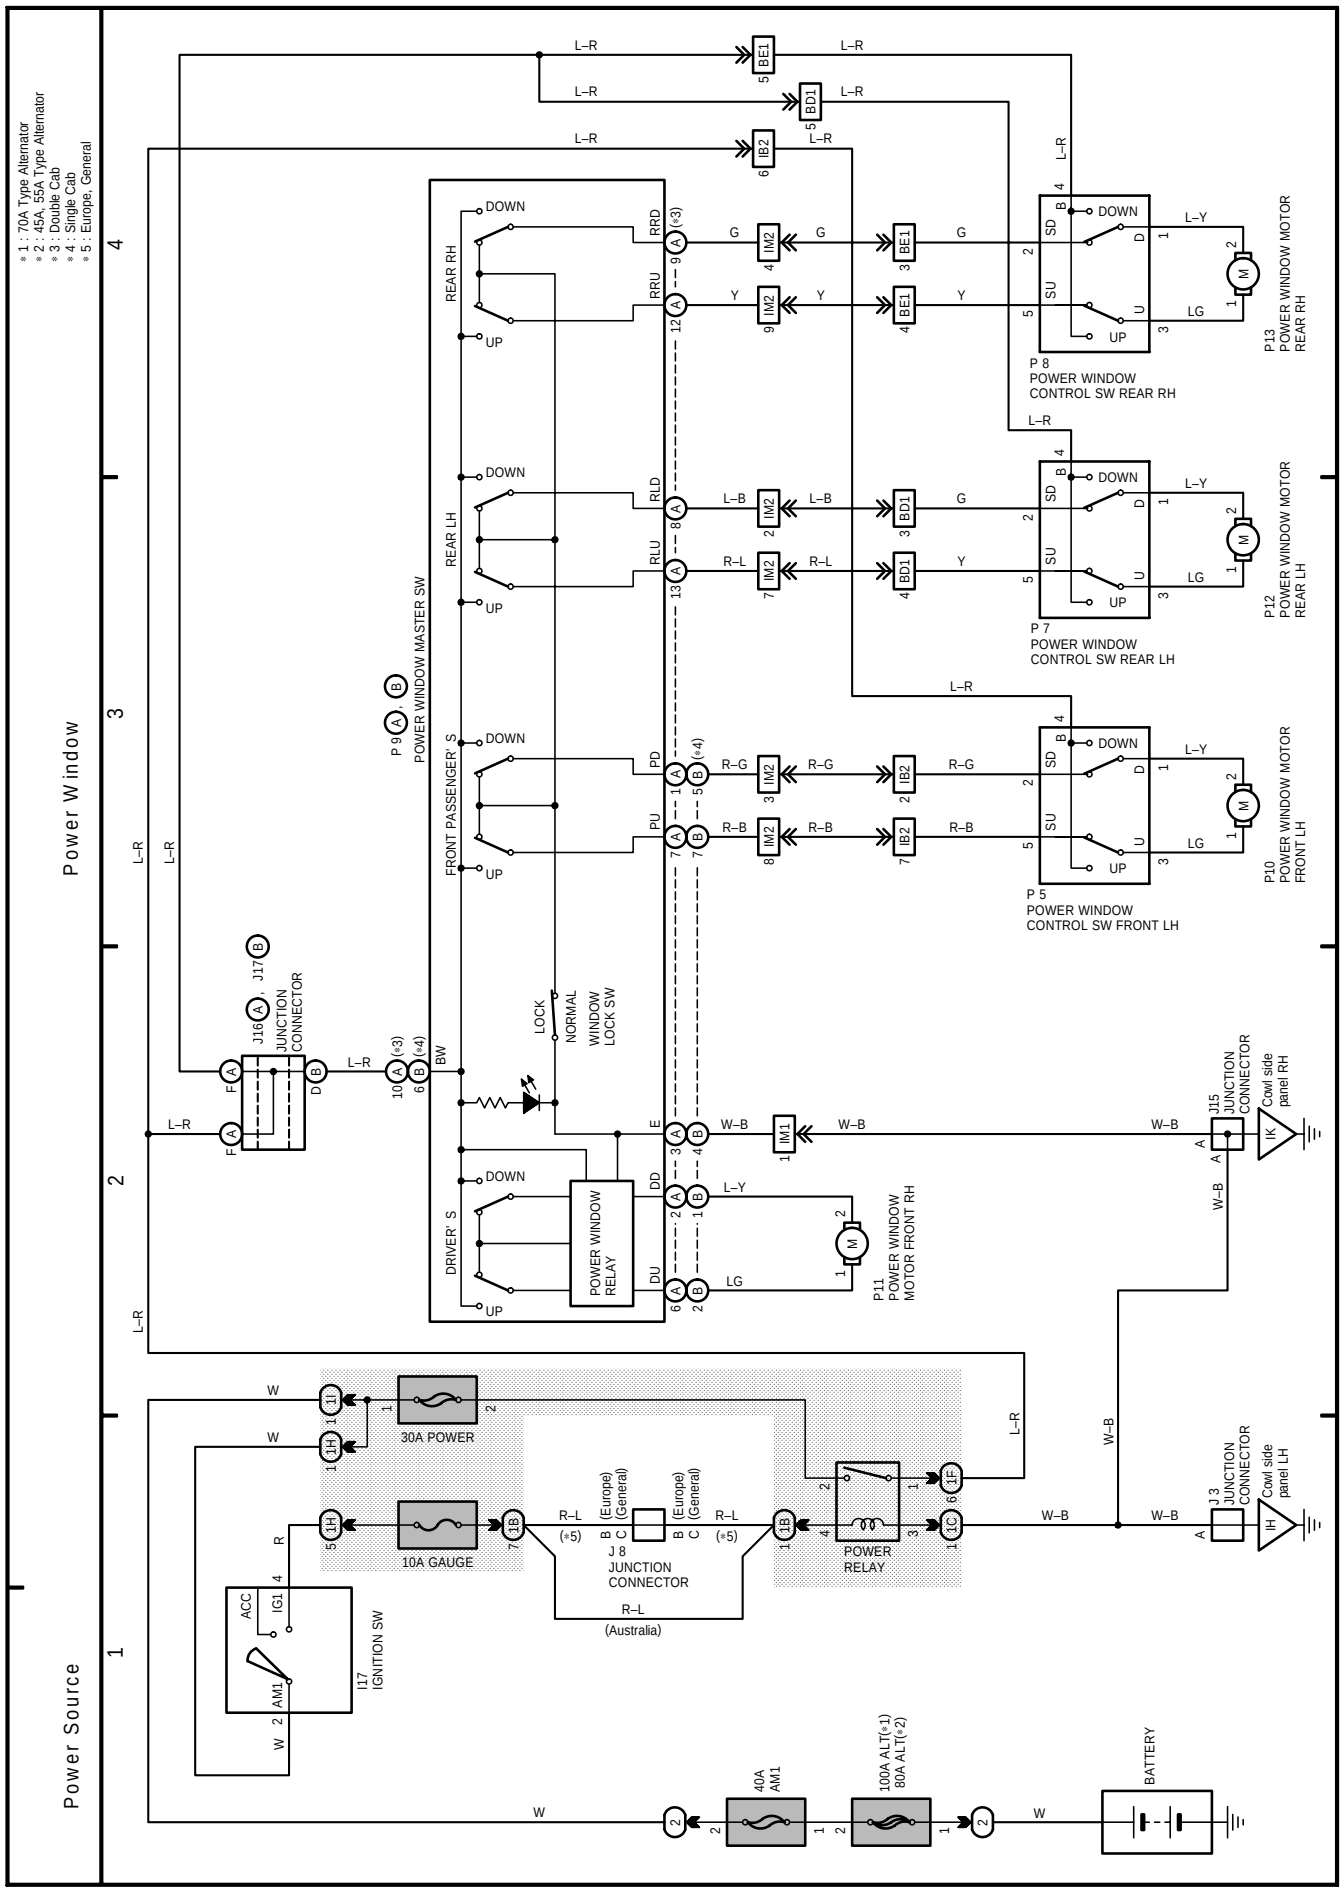

* 1 : 70A Type Alternator
* 2 : 45A, 55A Type Alternator
* 3 : Double Cab
* 4 : Single Cab
* 5 : Europe, General
Power Source
Power Window
1
2
3
4
BATTERY
100A ALT(*1)
80A ALT(*2)
40A
AM1
I17
IGNITION SW
ACC
IG1
AM1
30A POWER
10A GAUGE
POWER
RELAY
J 8
JUNCTION
CONNECTOR
(Europe)
(General)
(Australia)
J 3
JUNCTION
CONNECTOR
Cowl side
panel LH
J15
JUNCTION
CONNECTOR
Cowl side
panel RH
J16
J17
JUNCTION
CONNECTOR
POWER WINDOW MASTER SW
DRIVER' S
FRONT PASSENGER' S
REAR LH
REAR RH
DOWN
UP
LOCK
NORMAL
WINDOW
LOCK SW
POWER WINDOW
RELAY
P 5
POWER WINDOW
CONTROL SW FRONT LH
P 7
POWER WINDOW
CONTROL SW REAR LH
P 8
POWER WINDOW
CONTROL SW REAR RH
P10
POWER WINDOW MOTOR
FRONT LH
P11
POWER WINDOW
MOTOR FRONT RH
P12
POWER WINDOW MOTOR
REAR LH
P13
POWER WINDOW MOTOR
REAR RH
L–R
W–B
L–Y
LG
R–G
R–B
L–B
R–L
G
Y
W
R