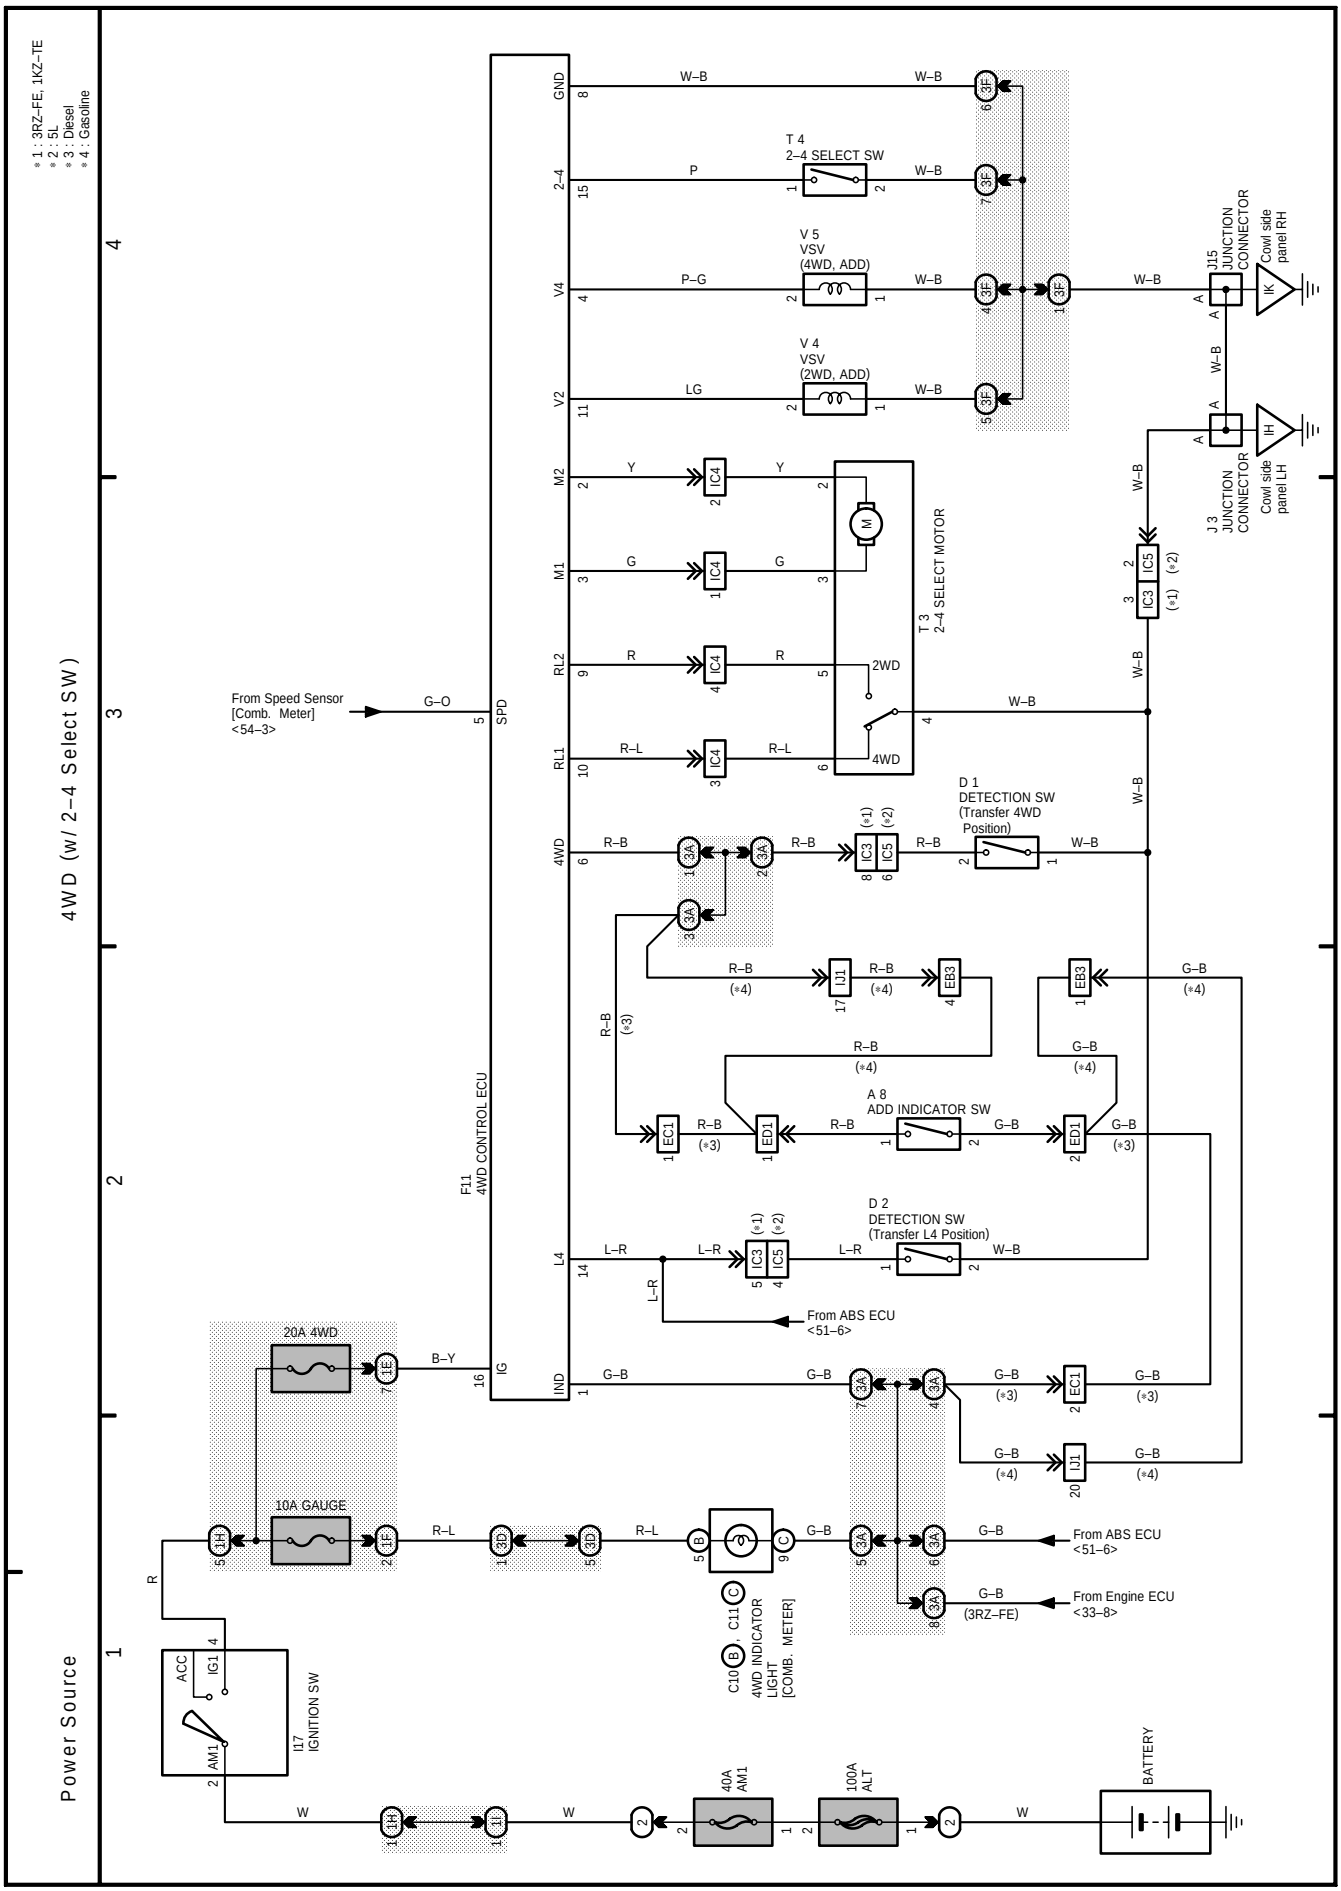

*1 : 3RZ–FE, 1KZ–TE
*2 : 5L
*3 : Diesel
*4 : Gasoline
4WD (w/ 2–4 Select SW)
Power Source
49 HILUX (RHD)
T 4
2–4 SELECT SW
V 5
VSV
(4WD, ADD)
V 4
VSV
(2WD, ADD)
T 3
2–4 SELECT MOTOR
2WD
4WD
D 1
DETECTION SW
(Transfer 4WD
Position)
D 2
DETECTION SW
(Transfer L4 Position)
A 8
ADD INDICATOR SW
J15
JUNCTION
CONNECTOR
Cowl side
panel RH
J 3
JUNCTION
CONNECTOR
Cowl side
panel LH
From Speed Sensor
[Comb. Meter]
<54–3>
F11
4WD CONTROL ECU
From ABS ECU
<51–6>
From Engine ECU
<33–8>
20A 4WD
10A GAUGE
I17
IGNITION SW
C10 (B), C11 (C)
4WD INDICATOR
LIGHT
[COMB. METER]
40A
AM1
100A
ALT
BATTERY