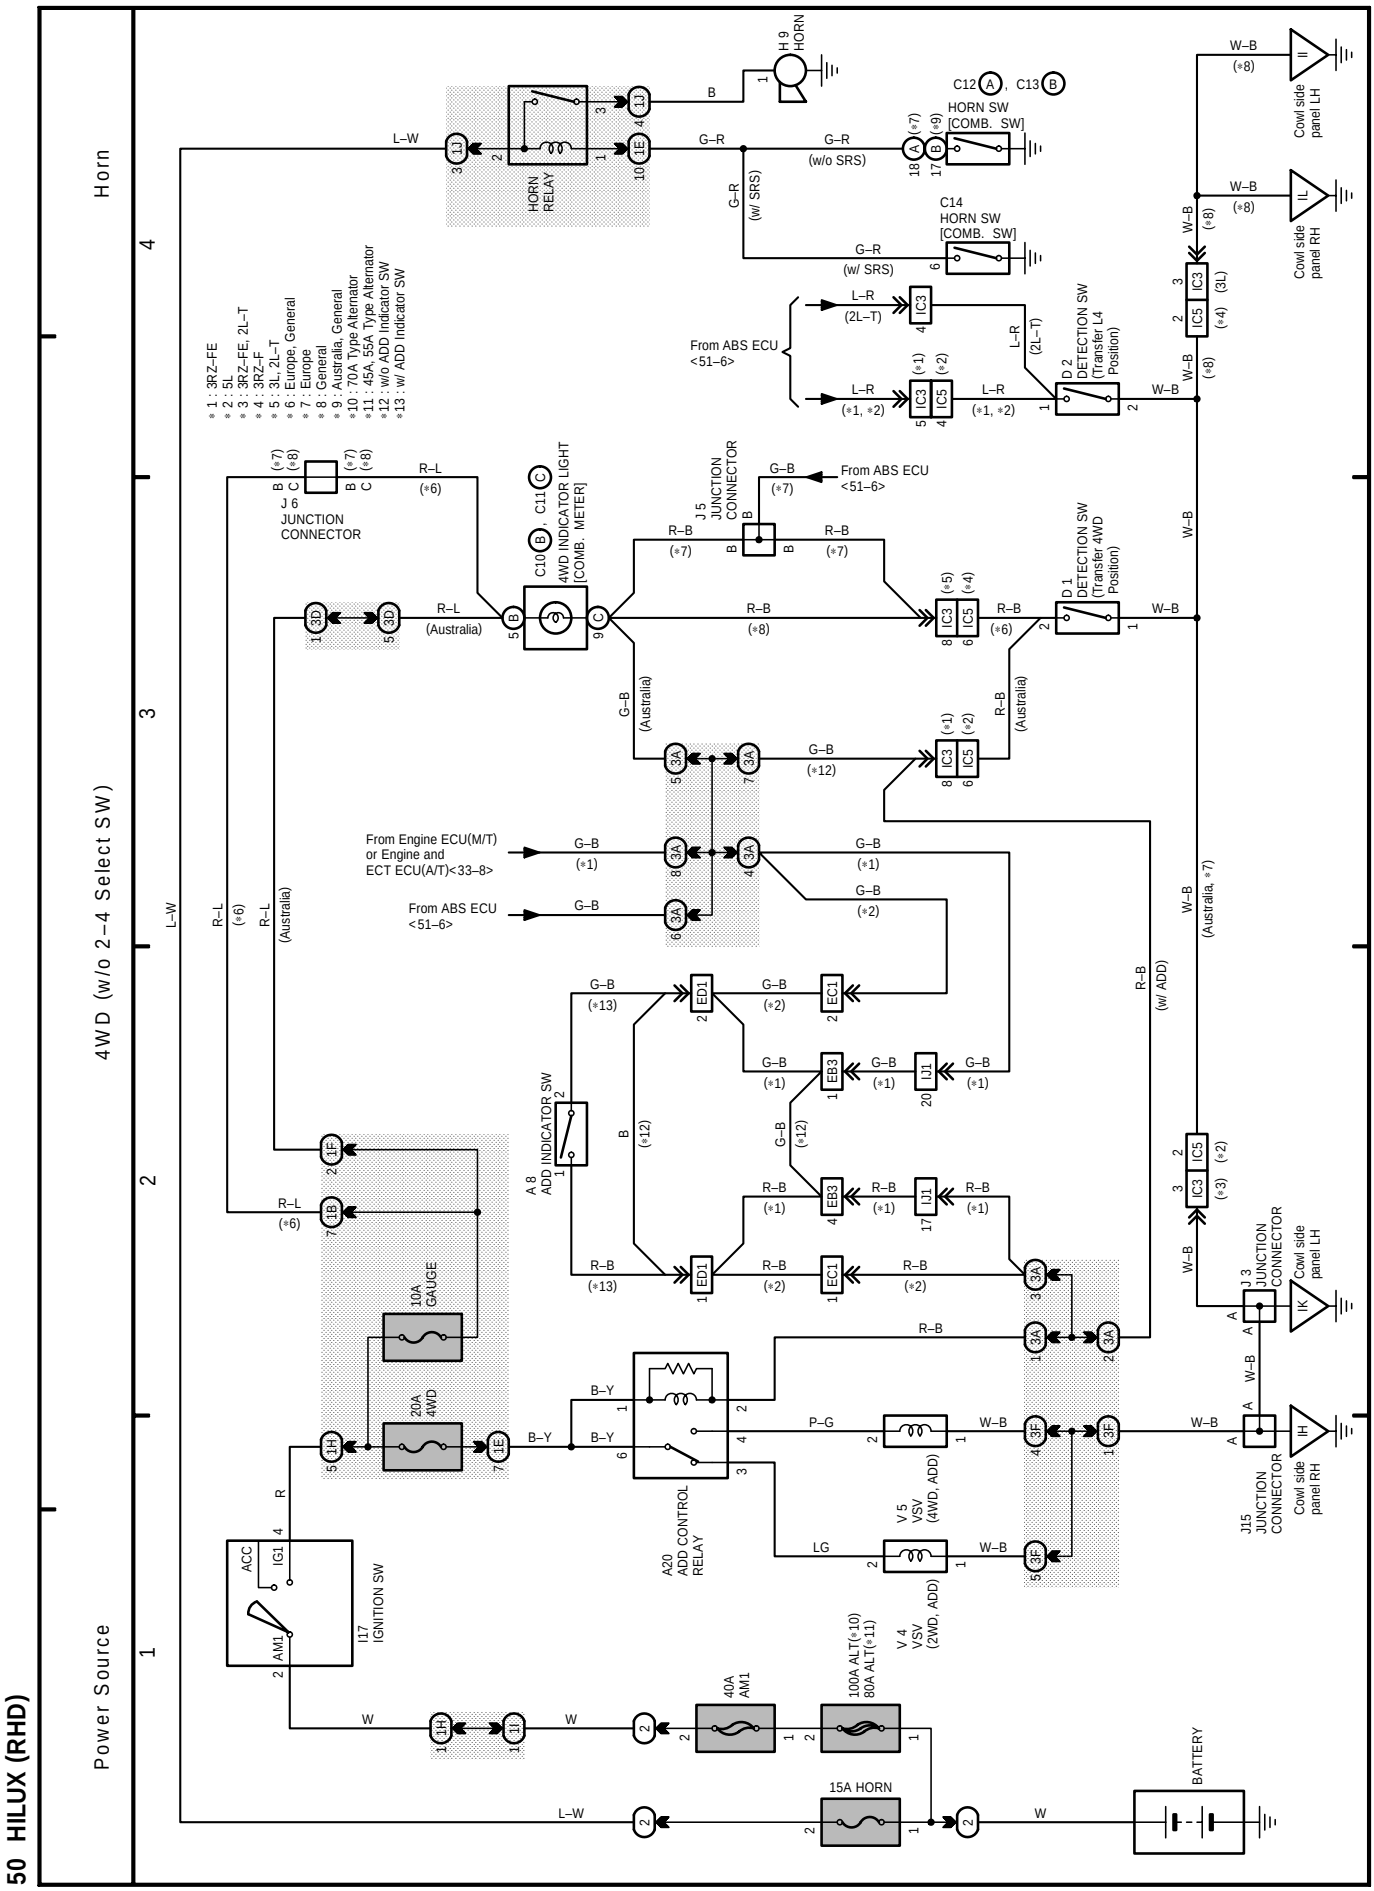

50 HILUX (RHD)
Power Source
4WD (w/o 2–4 Select SW)
Horn
1
2
3
4
* 1 : 3RZ–FE
* 2 : 5L
* 3 : 3RZ–FE, 2L–T
* 4 : 3RZ–F
* 5 : 3L, 2L–T
* 6 : Europe, General
* 7 : Europe
* 8 : General
* 9 : Australia, General
*10 : 70A Type Alternator
*11 : 45A, 55A Type Alternator
*12 : w/o ADD Indicator SW
*13 : w/ ADD Indicator SW
H 9 HORN
HORN RELAY
HORN SW [COMB. SW]
C14 HORN SW [COMB. SW]
C12, C13
Cowl side panel LH
Cowl side panel RH
From ABS ECU <51–6>
D 2 DETECTION SW (Transfer L4 Position)
D 1 DETECTION SW (Transfer 4WD Position)
J 6 JUNCTION CONNECTOR
J 5 JUNCTION CONNECTOR
C10, C11 4WD INDICATOR LIGHT [COMB. METER]
A 8 ADD INDICATOR SW
From Engine ECU(M/T) or Engine and ECT ECU(A/T)<33–8>
10A GAUGE
20A 4WD
A20 ADD CONTROL RELAY
V 5 VSV (4WD, ADD)
V 4 VSV (2WD, ADD)
I17 IGNITION SW
ACC
IG1
AM1
40A AM1
100A ALT(*10) 80A ALT(*11)
15A HORN
BATTERY
J3 JUNCTION CONNECTOR
J15 JUNCTION CONNECTOR
L–W
R–L
G–R
G–B
R–B
B–Y
P–G
L–R
W–B
W
LG
B