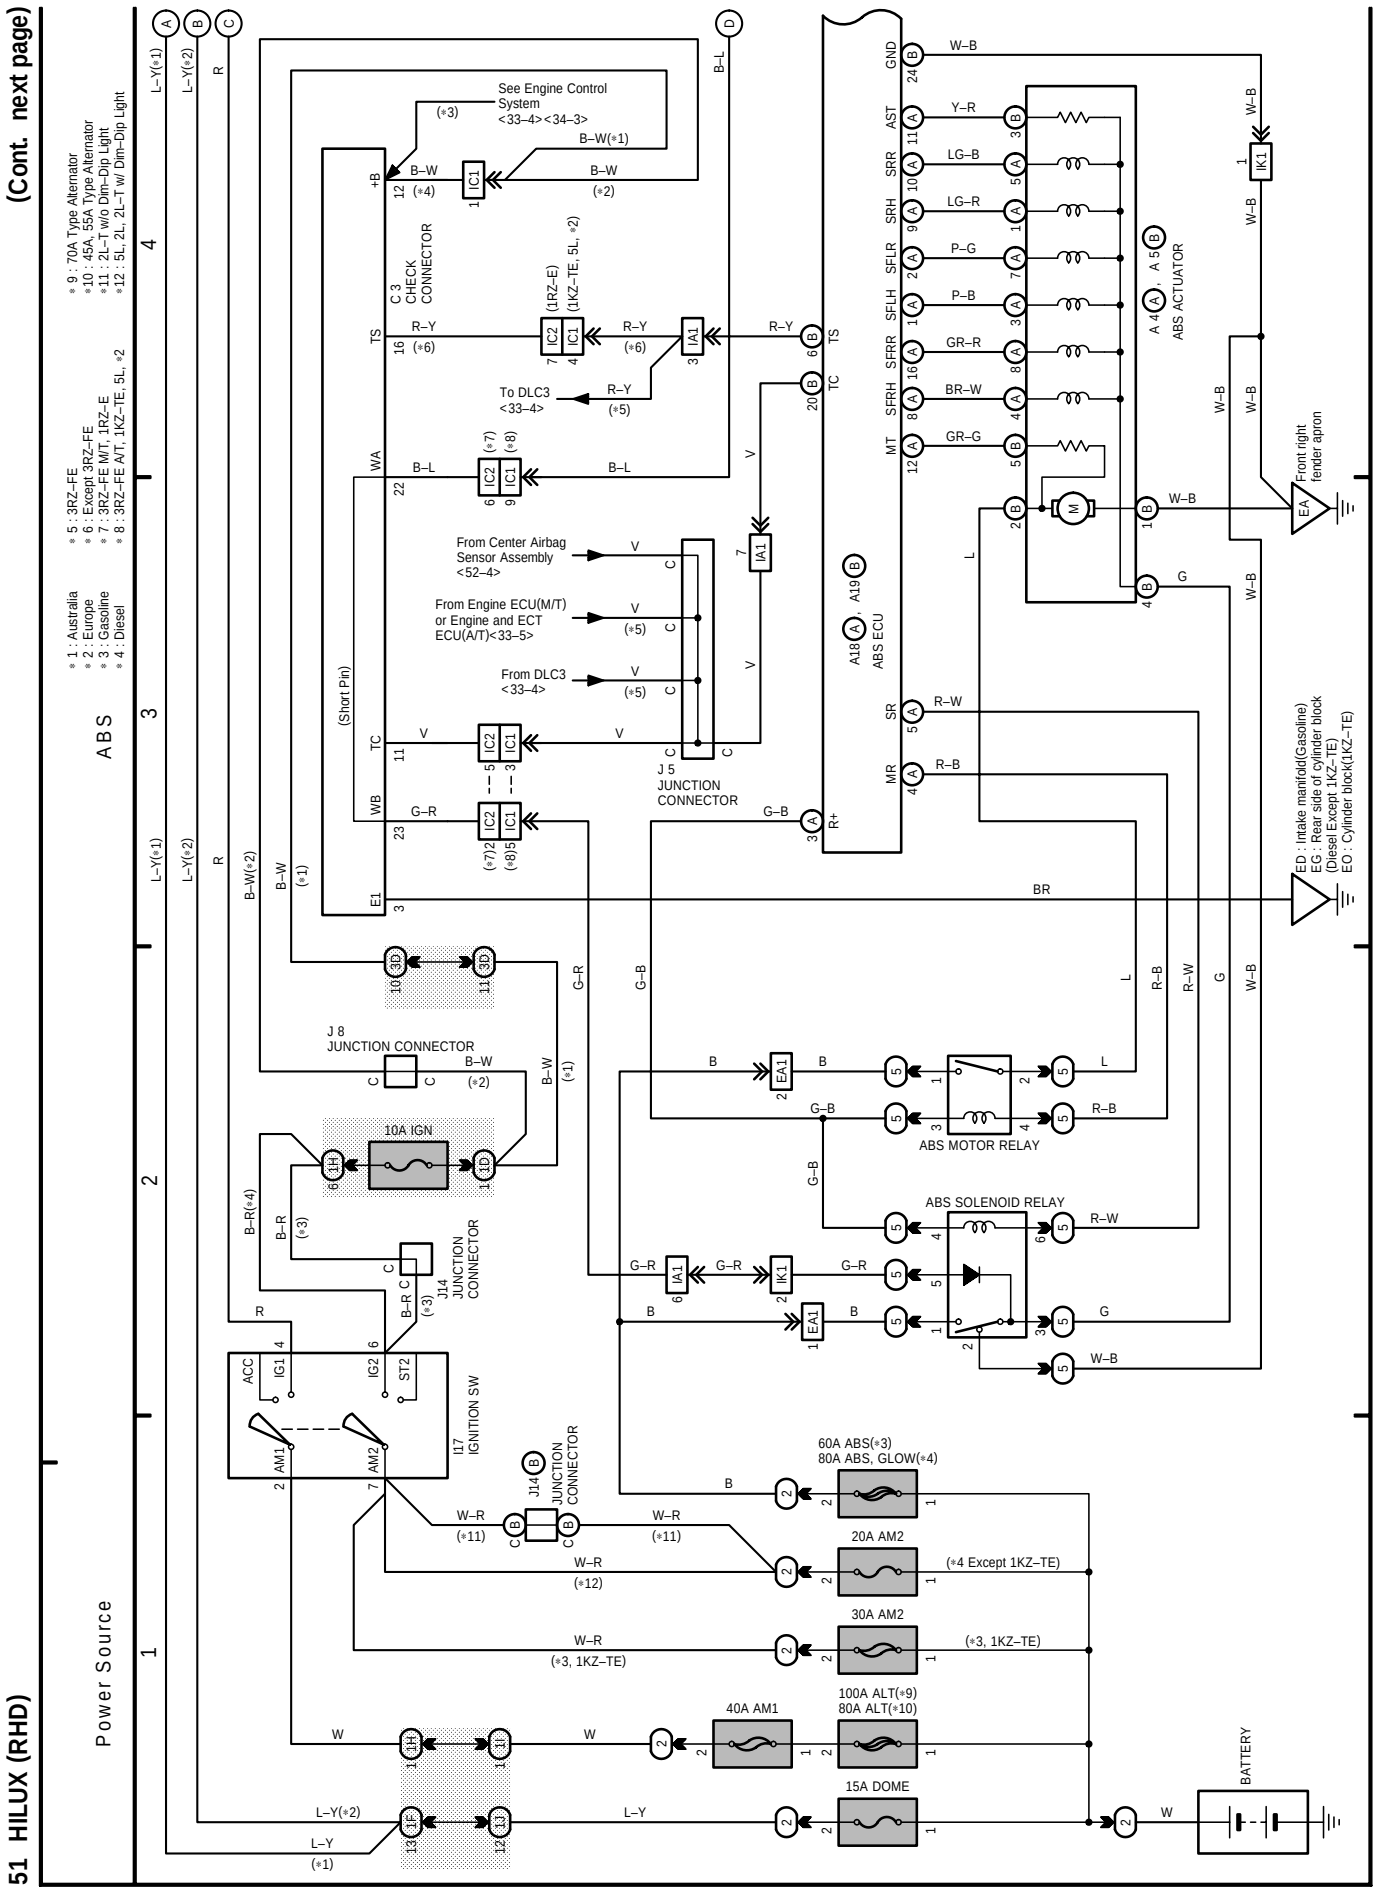
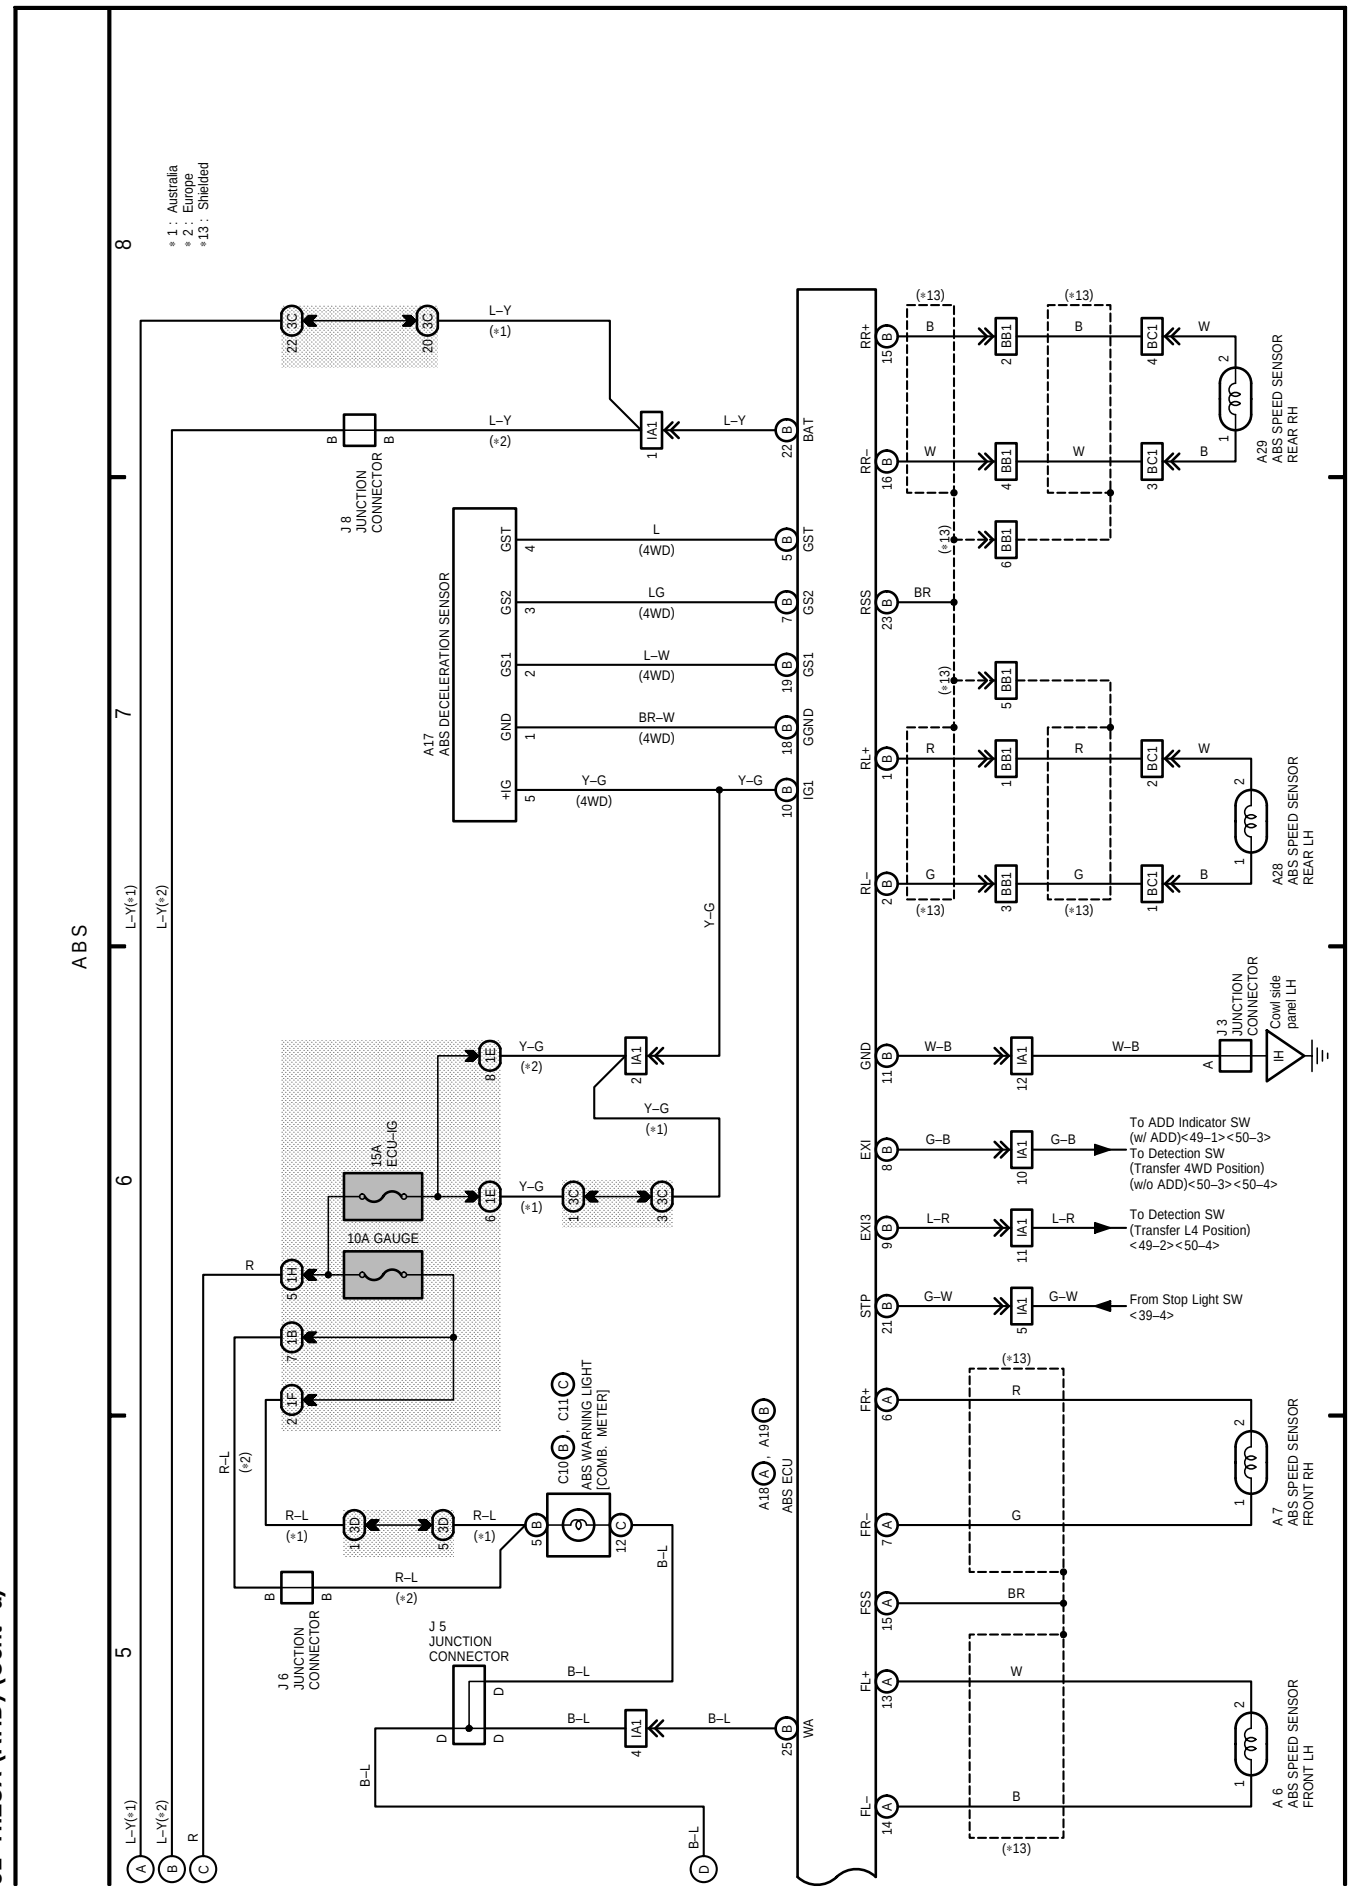

(Cont. next page)
51 HILUX (RHD)
Power Source
ABS
1
2
3
4
* 1 : Australia
* 2 : Europe
* 3 : Gasoline
* 4 : Diesel
* 5 : 3RZ–FE
* 6 : Except 3RZ–FE
* 7 : 3RZ–FE M/T, 1RZ–E
* 8 : 3RZ–FE A/T, 1KZ–TE, 5L, *2
* 9 : 70A Type Alternator
*10 : 45A, 55A Type Alternator
*11 : 2L–T w/o Dim–Dip Light
*12 : 5L, 2L, 2L–T w/ Dim–Dip Light
See Engine Control System <33–4><34–3>
C 3 CHECK CONNECTOR
(1RZ–E) (1KZ–TE, 5L, *2)
To DLC3 <33–4>
From Center Airbag Sensor Assembly <52–4>
From Engine ECU(M/T) or Engine and ECT ECU(A/T)<33–5>
From DLC3 <33–4>
(Short Pin)
J 5 JUNCTION CONNECTOR
A18, A19 ABS ECU
A 4, A 5 ABS ACTUATOR
M
Front right fender apron
EA
ED : Intake manifold(Gasoline)
EG : Rear side of cylinder block (Diesel Except 1KZ–TE)
EO : Cylinder block(1KZ–TE)
J 8 JUNCTION CONNECTOR
10A IGN
ABS MOTOR RELAY
ABS SOLENOID RELAY
J14 JUNCTION CONNECTOR
I17 IGNITION SW
ACC
IG1
IG2
ST2
AM1
AM2
60A ABS(*3) 80A ABS, GLOW(*4)
20A AM2
(*4 Except 1KZ–TE)
30A AM2
(*3, 1KZ–TE)
40A AM1
100A ALT(*9) 80A ALT(*10)
15A DOME
BATTERY


ABS
* 1 : Australia
* 2 : Europe
*13 : Shielded
A17 ABS DECELERATION SENSOR
GST
GS2
GS1
GND
+IG
L (4WD)
LG (4WD)
L–W (4WD)
BR–W (4WD)
Y–G (4WD)
J 8 JUNCTION CONNECTOR
J 6 JUNCTION CONNECTOR
J 5 JUNCTION CONNECTOR
J 3 JUNCTION CONNECTOR
Cowl side panel LH
15A ECU–IG
10A GAUGE
A18 A, A19 B ABS ECU
C10 B, C11 C ABS WARNING LIGHT [COMB. METER]
BAT
GST
GS2
GS1
GGND
IG1
WA
RR+
RR–
RSS
RL+
RL–
GND
EXI
EXI3
STP
FR+
FR–
FSS
FL+
FL–
To ADD Indicator SW (w/ ADD)<49–1><50–3>
To Detection SW (Transfer 4WD Position) (w/o ADD)<50–3><50–4>
To Detection SW (Transfer L4 Position) <49–2><50–4>
From Stop Light SW <39–4>
A29 ABS SPEED SENSOR REAR RH
A28 ABS SPEED SENSOR REAR LH
A 7 ABS SPEED SENSOR FRONT RH
A 6 ABS SPEED SENSOR FRONT LH