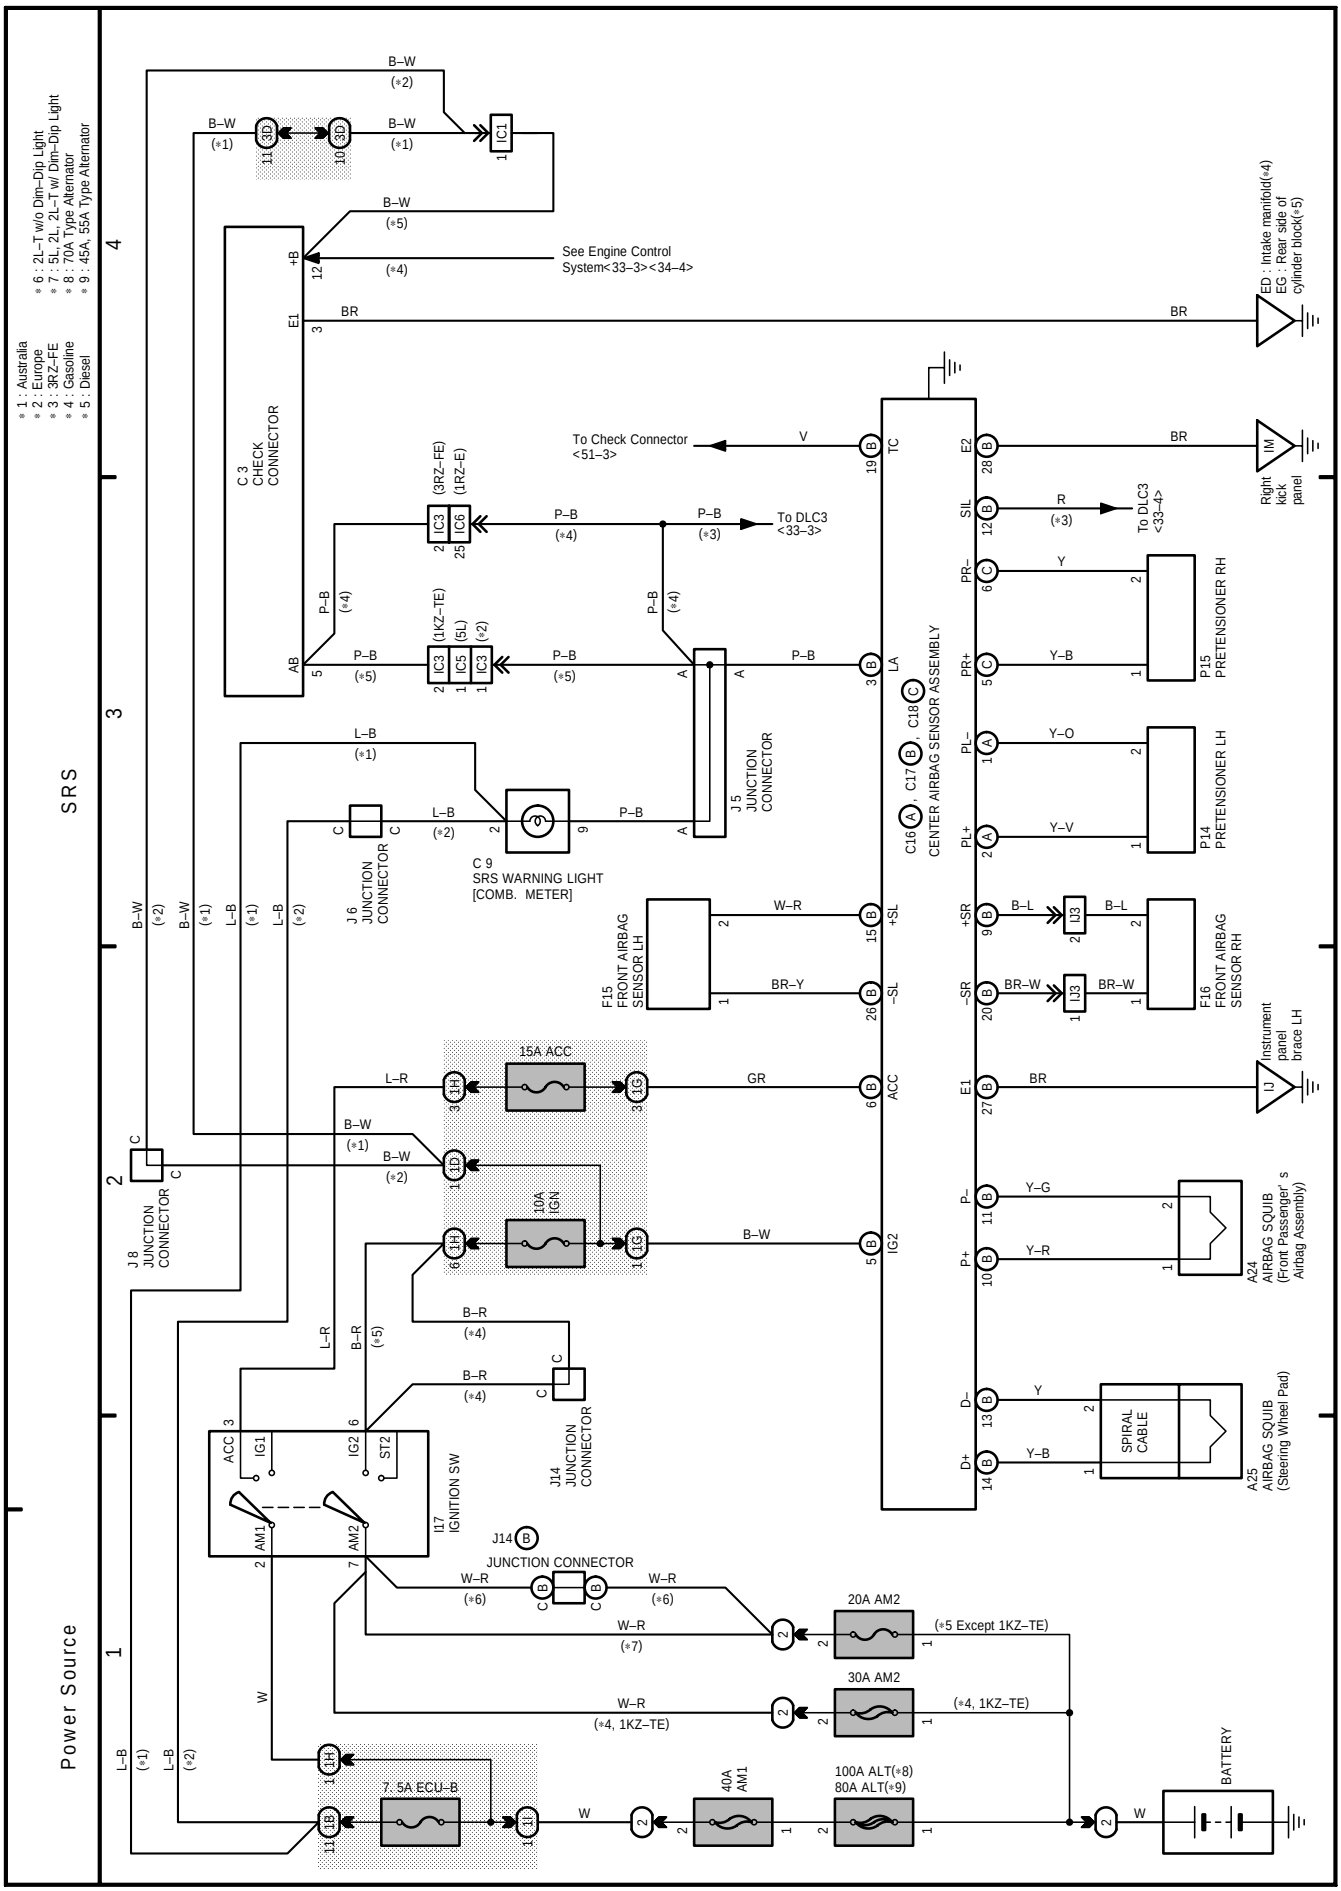

* 1 : Australia
* 2 : Europe
* 3 : 3RZ-FE
* 4 : Gasoline
* 5 : Diesel
* 6 : 2L-T w/o Dim-Dip Light
* 7 : 5L, 2L, 2L-T w/ Dim-Dip Light
* 8 : 70A Type Alternator
* 9 : 45A, 55A Type Alternator
SRS
Power Source
C 3 CHECK CONNECTOR
See Engine Control System<33-3><34-4>
To Check Connector <51-3>
To DLC3 <33-3>
To DLC3 <33-4>
ED : Intake manifold(*4) EG : Rear side of cylinder block(*5)
Right kick panel
P15 PRETENSIONER RH
P14 PRETENSIONER LH
C16, C17, C18 CENTER AIRBAG SENSOR ASSEMBLY
J5 JUNCTION CONNECTOR
J6 JUNCTION CONNECTOR
C 9 SRS WARNING LIGHT [COMB. METER]
F15 FRONT AIRBAG SENSOR LH
F16 FRONT AIRBAG SENSOR RH
Instrument panel brace LH
J8 JUNCTION CONNECTOR
15A ACC
10A IGN
A24 AIRBAG SQUIB (Front Passenger's Airbag Assembly)
J14 JUNCTION CONNECTOR
I17 IGNITION SW
SPIRAL CABLE
A25 AIRBAG SQUIB (Steering Wheel Pad)
20A AM2
30A AM2
7.5A ECU-B
40A AM1
100A ALT(*8) 80A ALT(*9)
BATTERY