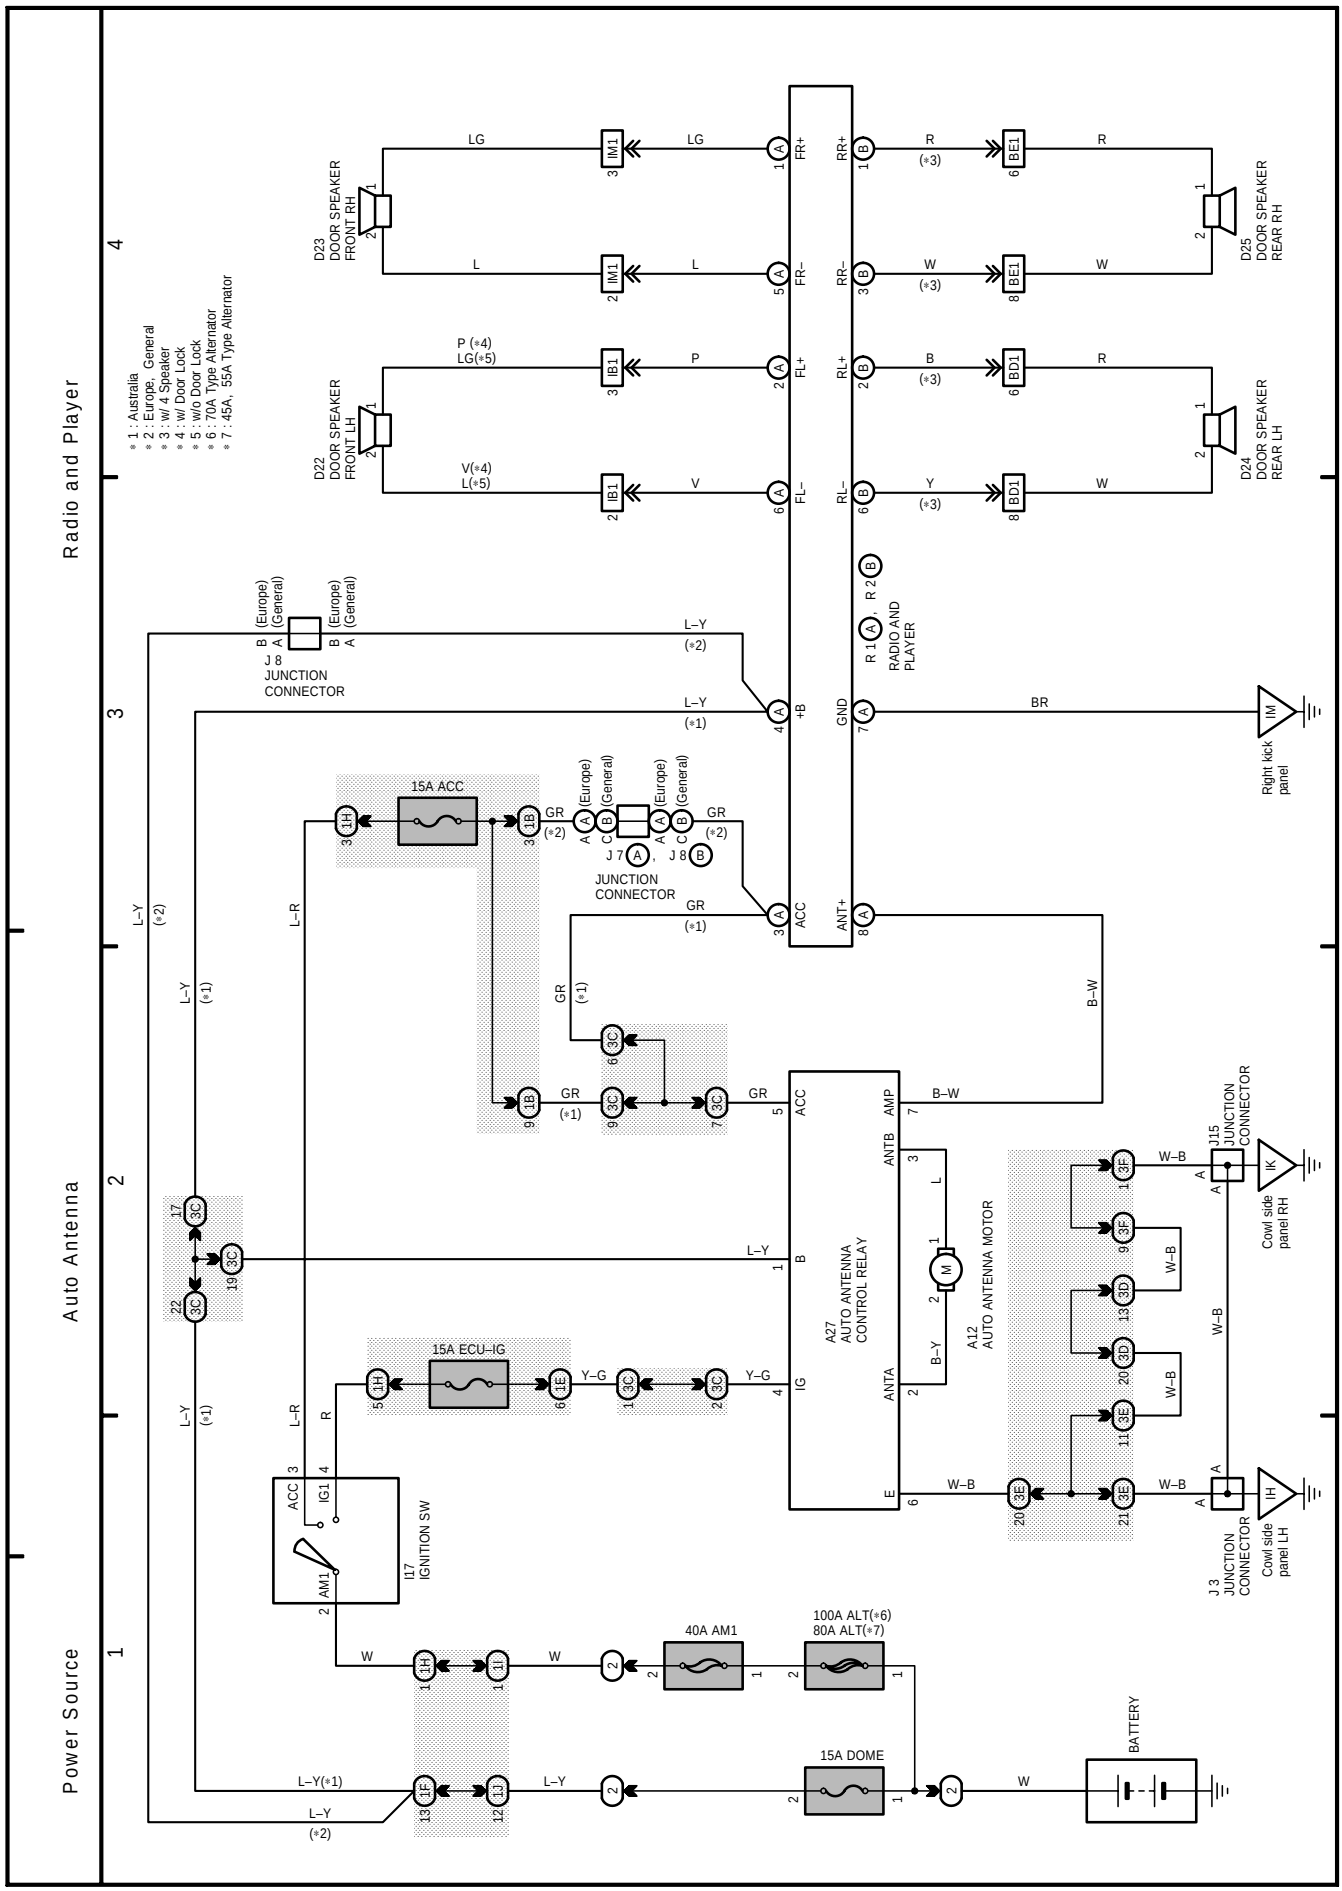
53 HILUX (RHD)


Power Source
Auto Antenna
Radio and Player
1
2
3
4
* 1 : Australia
* 2 : Europe, General
* 3 : w/ 4 Speaker
* 4 : w/ Door Lock
* 5 : w/o Door Lock
* 6 : 70A Type Alternator
* 7 : 45A, 55A Type Alternator
D23 DOOR SPEAKER FRONT RH
D22 DOOR SPEAKER FRONT LH
D25 DOOR SPEAKER REAR RH
D24 DOOR SPEAKER REAR LH
J 8 JUNCTION CONNECTOR
R 1 (A), R 2 (B) RADIO AND PLAYER
Right kick panel
15A ACC
J 7 (A), J 8 (B) JUNCTION CONNECTOR
A27 AUTO ANTENNA CONTROL RELAY
A12 AUTO ANTENNA MOTOR
J15 JUNCTION CONNECTOR
Cowl side panel RH
J3 JUNCTION CONNECTOR
Cowl side panel LH
I17 IGNITION SW
15A ECU–IG
40A AM1
100A ALT(*6)
80A ALT(*7)
15A DOME
BATTERY