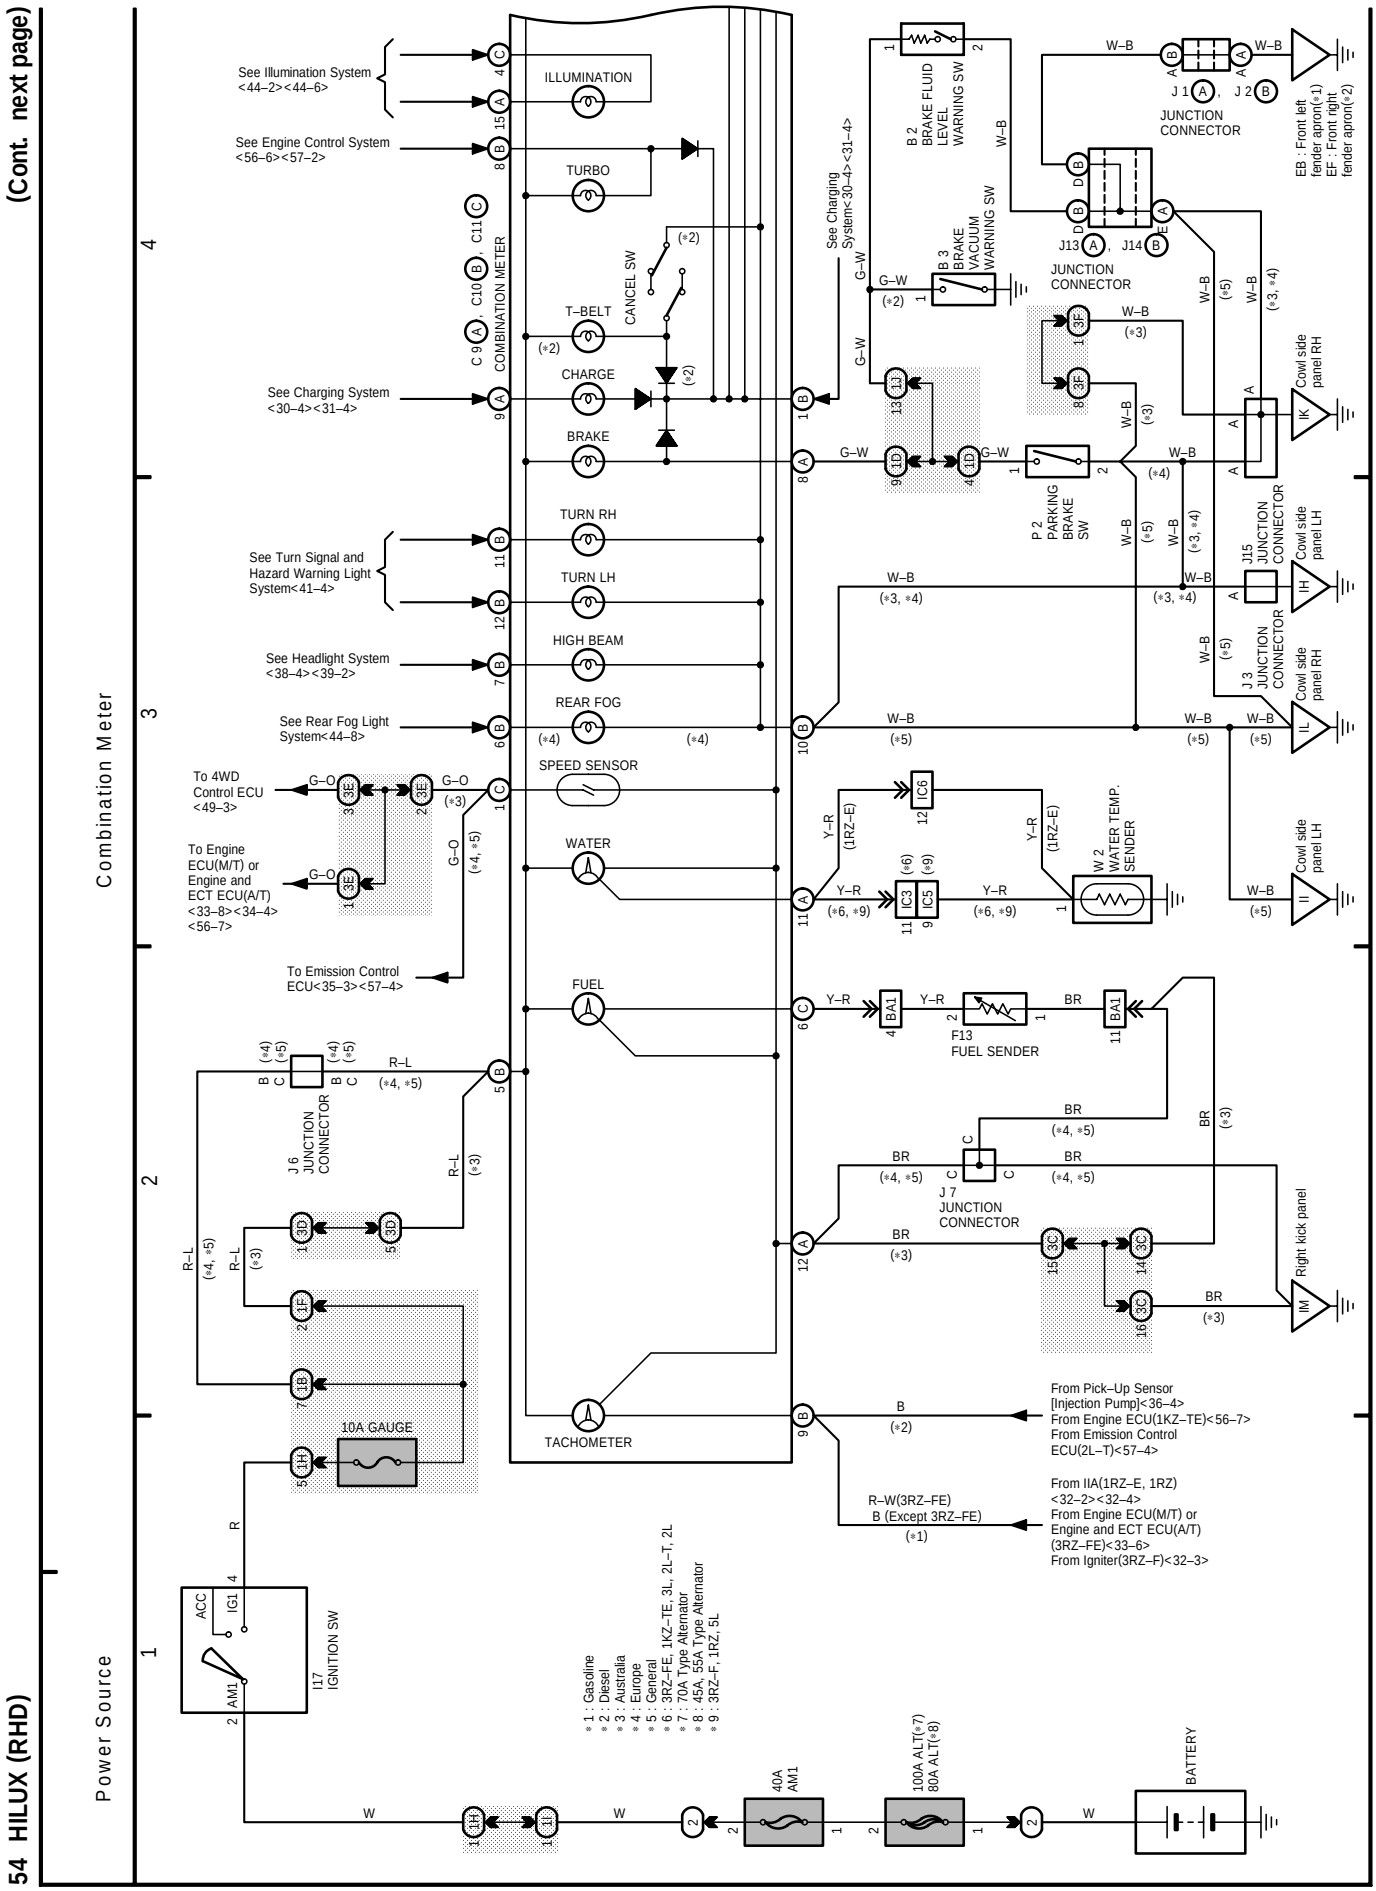
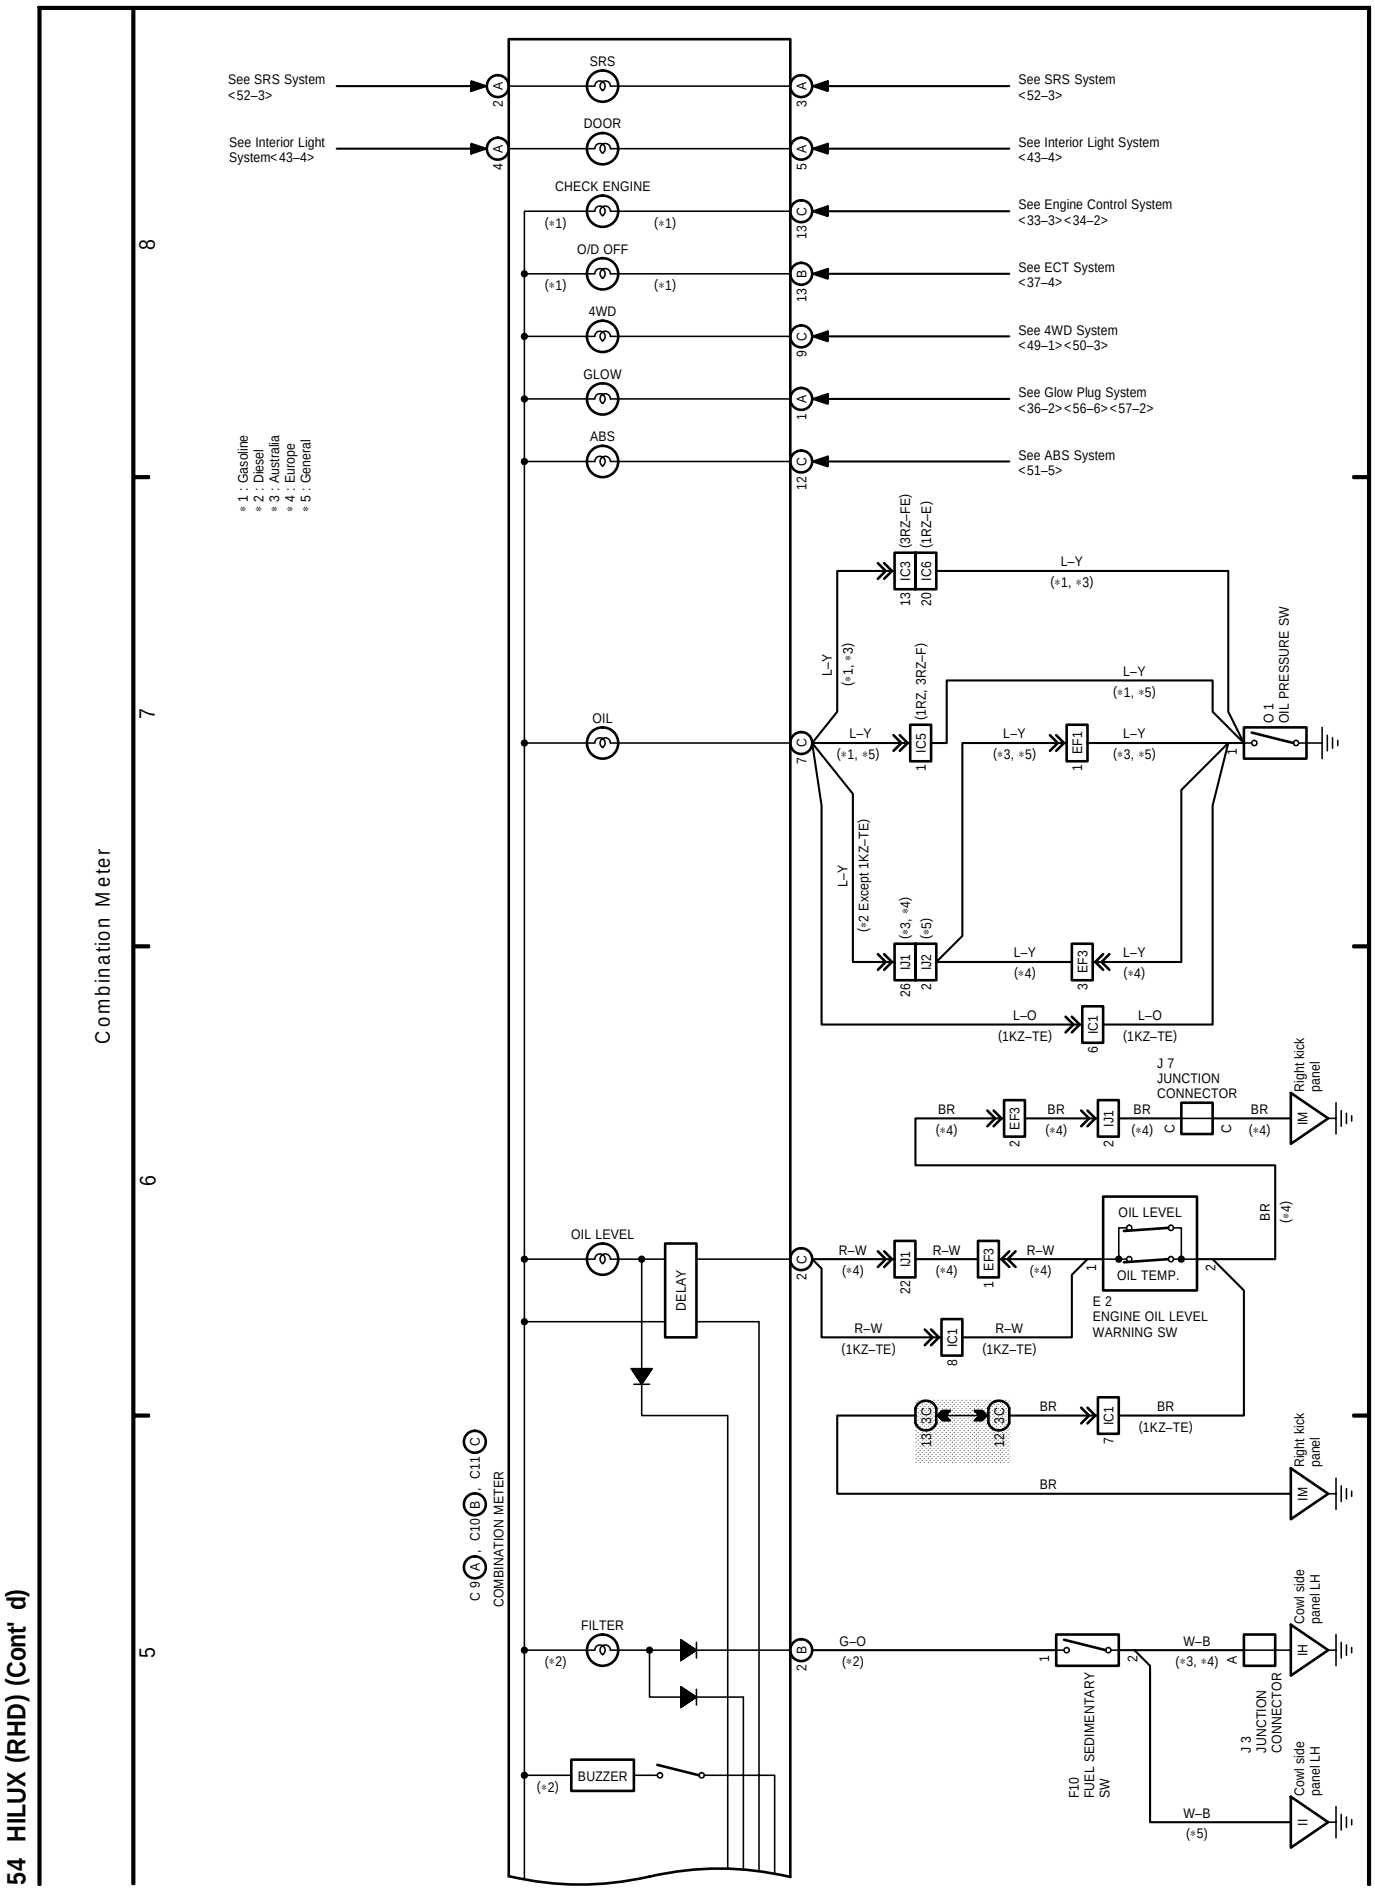

(Cont. next page)
54 HILUX (RHD)
Power Source
Combination Meter
1
2
3
4
See Illumination System <44–2><44–6>
See Engine Control System <56–6><57–2>
See Charging System <30–4><31–4>
See Turn Signal and Hazard Warning Light System<41–4>
See Headlight System <38–4><39–2>
See Rear Fog Light System<44–8>
To 4WD Control ECU <49–3>
To Engine ECU(M/T) or Engine and ECT ECU(A/T) <33–8><34–4><56–7>
To Emission Control ECU<35–3><57–4>
ILLUMINATION
TURBO
T–BELT
CHARGE
BRAKE
TURN RH
TURN LH
HIGH BEAM
REAR FOG
SPEED SENSOR
WATER
FUEL
TACHOMETER
CANCEL SW
COMBINATION METER
10A GAUGE
I17 IGNITION SW
ACC
IG1
AM1
B 2 BRAKE FLUID LEVEL WARNING SW
B 3 BRAKE VACUUM WARNING SW
P 2 PARKING BRAKE SW
F13 FUEL SENDER
W 2 WATER TEMP. SENDER
JUNCTION CONNECTOR
J 1
J 2
J13
J14
J15
J 3
J 6
J 7
EB : Front left fender apron(*1)
EF : Front right fender apron(*2)
Cowl side panel RH
Cowl side panel LH
Right kick panel
From Pick–Up Sensor [Injection Pump]<36–4>
From Engine ECU(1KZ–TE)<56–7>
From Emission Control ECU(2L–T)<57–4>
From IIA(1RZ–E, 1RZ)<32–2><32–4>
From Engine ECU(M/T) or Engine and ECT ECU(A/T)(3RZ–FE)<33–6>
From Igniter(3RZ–F)<32–3>
R–W(3RZ–FE)
B (Except 3RZ–FE)
40A AM1
100A ALT(*7)
80A ALT(*8)
BATTERY
* 1 : Gasoline
* 2 : Diesel
* 3 : Australia
* 4 : Europe
* 5 : General
* 6 : 3RZ–FE, 1KZ–TE, 3L, 2L–T, 2L
* 7 : 70A Type Alternator
* 8 : 45A, 55A Type Alternator
* 9 : 3RZ–F, 1RZ, 5L


54 HILUX (RHD) (Cont' d)
Combination Meter
See SRS System <52–3>
See Interior Light System<43–4>
SRS
DOOR
CHECK ENGINE
O/D OFF
4WD
GLOW
ABS
(*1)
See SRS System <52–3>
See Interior Light System <43–4>
See Engine Control System <33–3><34–2>
See ECT System <37–4>
See 4WD System <49–1><50–3>
See Glow Plug System <36–2><56–6><57–2>
See ABS System <51–5>
*1 : Gasoline
*2 : Diesel
*3 : Australia
*4 : Europe
*5 : General
OIL
OIL LEVEL
FILTER
BUZZER
DELAY
(3RZ–FE)
(1RZ–E)
(1RZ, 3RZ–F)
(2 Except 1KZ–TE)
(1KZ–TE)
L–Y
(*1, *3)
(*1, *5)
(*3, *5)
L–O
O 1
OIL PRESSURE SW
E 2
ENGINE OIL LEVEL WARNING SW
OIL TEMP.
F10
FUEL SEDIMENTARY SW
J 3
JUNCTION CONNECTOR
J 7
JUNCTION CONNECTOR
Right kick panel
Cowl side panel LH
COMBINATION METER
C9, C10, C11
R–W
G–O
W–B
BR
(*2)
(*4)
(*5)