
Position of Parts in Engine Compartment

[LHD : 2KD–FTV]

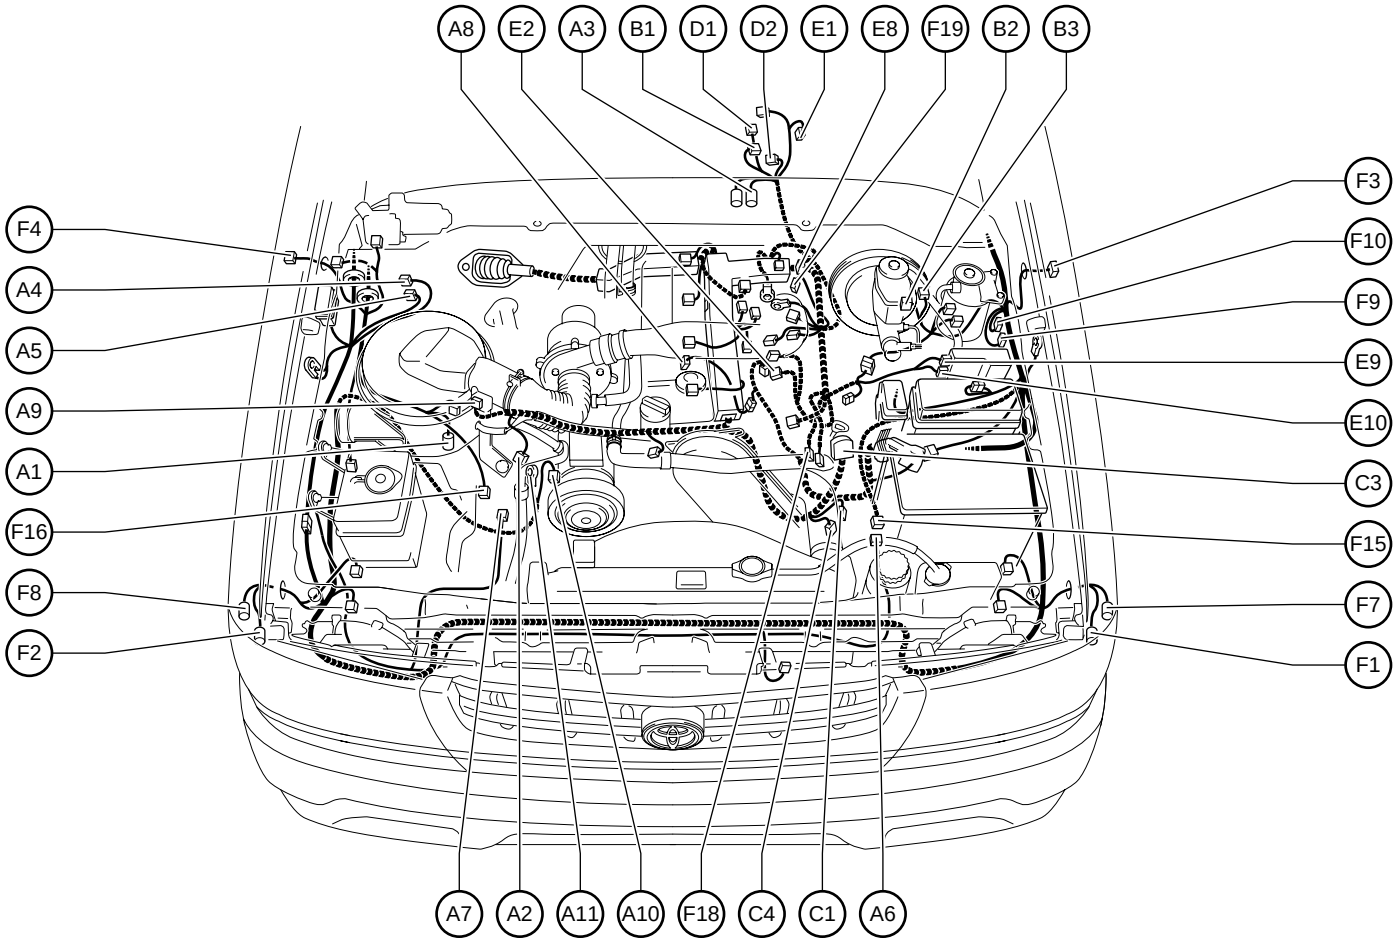

A 1 A/C Dual Pressure SW
A 2 A/C Lock Sensor
A/C Magnetic Clutch
A 3 A/T Fluid Temp. SW
A 4 ABS Actuator
A 5 ABS Actuator
A 6 ABS Speed Sensor Front LH
A 7 ABS Speed Sensor Front RH
A 8 ADD Indicator SW
A 9 Air Flow Meter
A 10 Alternator
A 11 Alternator

B 1 Back–Up Light SW
B 2 Brake Fluid Level Warning SW
B 3 Brake Vacuum Warning SW

C 1 Camshaft Position Sensor
C 3 Check Connector
C 4 Crankshaft Position Sensor

D 1 Detection SW (Transfer 4WD Position)
D 2 Detection SW (Transfer L4 Position)

E 1 ECT Solenoid
E 2 Engine Oil Level Warning SW
E 8 EGR Valve Position Sensor
E 9 Electric Driver Unit
E 10 Electric Driver Unit

F 1 Front Clearance Light LH
F 2 Front Clearance Light RH
F 3 Front Side Turn Signal Light LH
F 4 Front Side Turn Signal Light RH
F 7 Front Turn Signal Light LH
F 8 Front Turn Signal Light RH
F 9 Fuel Heater
F 10 Fuel Sedimentary SW
F 15 Front Airbag Sensor LH
F 16 Front Airbag Sensor RH
F 18 Fuel Temp. Sensor
F 19 Fuel Pressure Sensor