
# Position of Parts in Engine Compartment

## [LHD : 2KD–FTV]

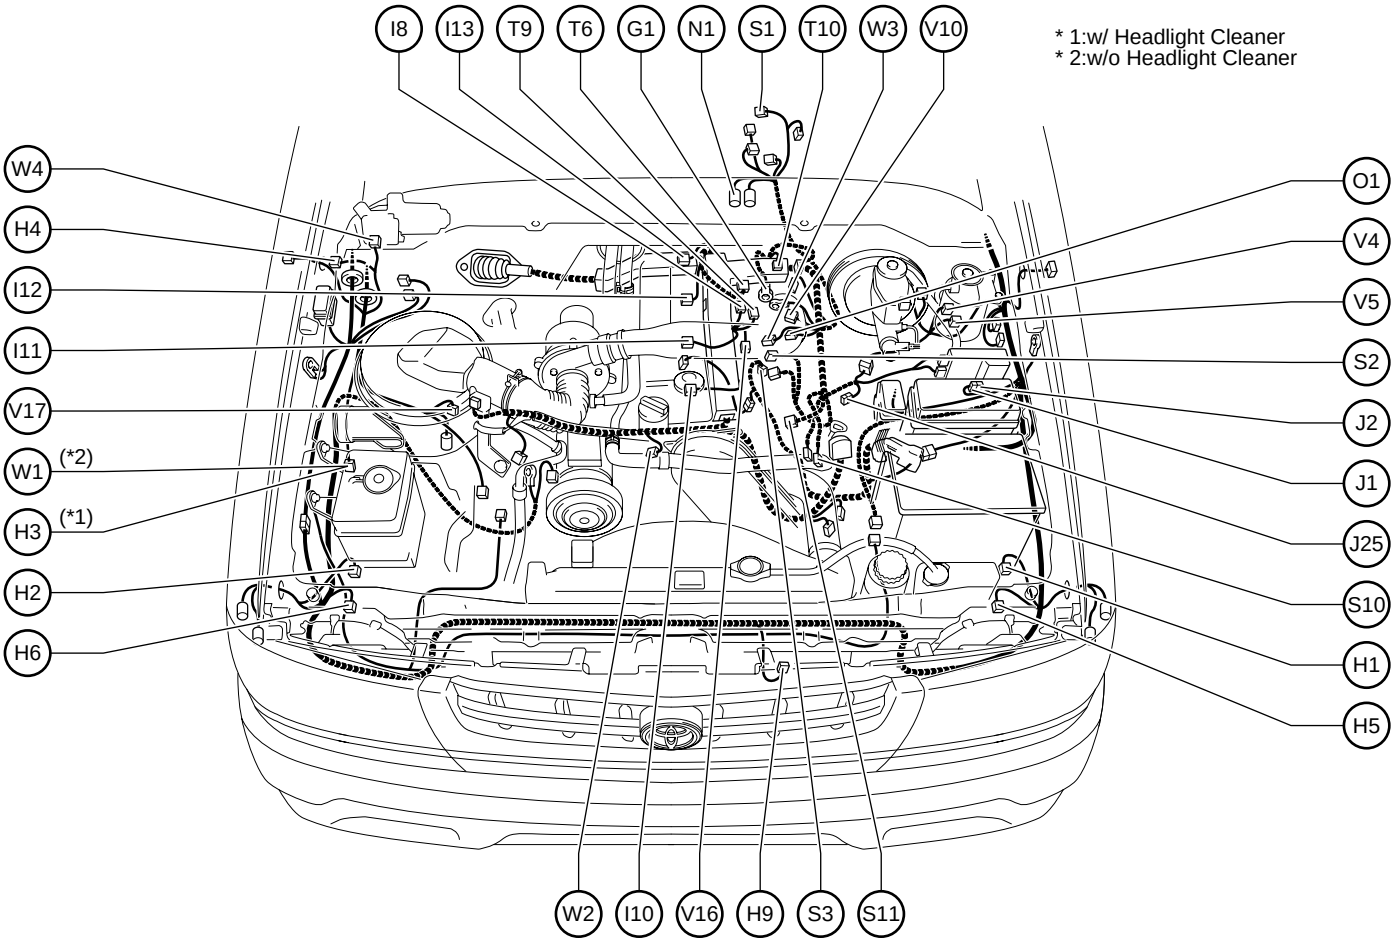


G 1 Glow Plug

H 1 Headlight Beam Level Control Actuator LH
H 2 Headlight Beam Level Control Actuator RH
H 3 Headlight Cleaner Motor and Washer Motor
H 4 Headlight Cleaner Relay
H 5 Headlight LH
H 6 Headlight RH
H 9 Horn

I 8 Intake Air Temp. Sensor
I 10 Injector No.1
I 11 Injector No.2
I 12 Injector No.3
I 13 Injector No.4

J 1 Junction Connector
J 2 Junction Connector
J 25 Junction Connector

N 1 Back–Up Light SW
Neutral Start SW

O 1 Oil Pressure SW

S 1 Speed Sensor (ECT)
S 2 Starter
S 3 Starter
S 10 Suction Control Valve
S 11 Suction Control Valve No.2

T 6 Turbo Pressure Sensor
T 9 Throttle Open SW
T 10 Throttle Control Motor

V 4 VSV (2WD, ADD)
V 5 VSV (4WD, ADD)
V 10 VRV (EGR)
V 16 VSV (Pressure Charge Valve)
V 17 VSV (Exhaust Gas Control)

W 1 Washer Motor
W 2 Water Temp. Sender
W 3 Water Temp. Sensor
W 4 Wiper Motor