
Position of Parts in Instrument Panel

[LHD]

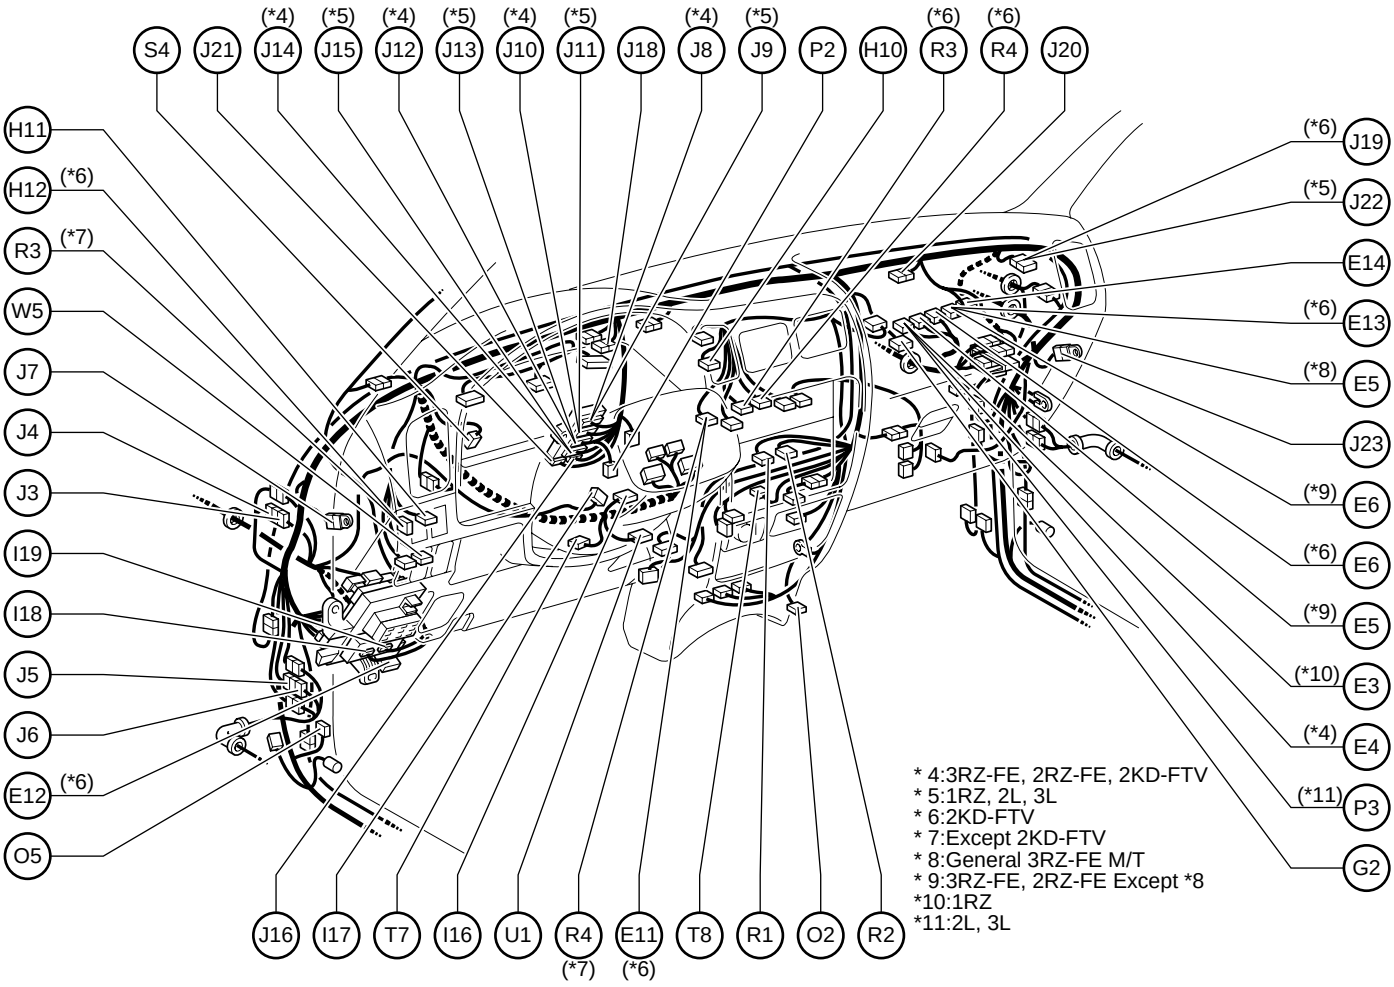

E 3 Emission Control ECU
E 4 Engine and ECT ECU (A/T)
Engine ECU (M/T)
E 5 Engine and ECT ECU (A/T)
Engine ECU (M/T)
E 6 Engine and ECT ECU (A/T)
Engine ECU (M/T)
E 11 ECT Pattern Select SW
E 12 EDU Relay
E 13 Engine and ECT ECU (A/T)
Engine ECU (M/T)
E 14 Engine and ECT ECU (A/T)
Engine ECU (M/T)

G 2 Glove Box Light

H 10 Hazard SW
H 11 Headlight Beam Level Control SW
H 12 Headlight Cleaner SW
Washer Motor

I 16 Ignition Key Cylinder Light
I 17 Ignition SW
I 18 Integration Relay
I 19 Integration Relay

J 3 Junction Connector
J 4 Junction Connector
J 5 Junction Connector
J 6 Junction Connector
J 7 Junction Connector
J 8 Junction Connector
J 9 Junction Connector
J 10 Junction Connector
J 11 Junction Connector
J 12 Junction Connector
J 13 Junction Connector
J 14 Junction Connector
J 15 Junction Connector
J 16 Junction Connector
J 18 Junction Connector
J 19 Junction Connector
J 20 Junction Connector
J 21 Junction Connector
J 22 Junction Connector
J 23 Junction Connector

O 2 A/T Shift Lever Illumination
O/D Main SW
O 5 Oil Monitor ECU

P 2 Parking Brake SW
P 3 Pre–Heating Timer

R 1 Radio and Player
R 2 Radio and Player
R 3 Rear Fog Light SW
R 4 Rear Window Defogger SW

S 4 Stop Light SW

T 7 Transponder Key Amplifier
T 8 Transponder Key Computer

U 1 Unlock Warning SW

W 5 Warm Up SW