
Position of Parts in Body

[LHD : Double Cab]

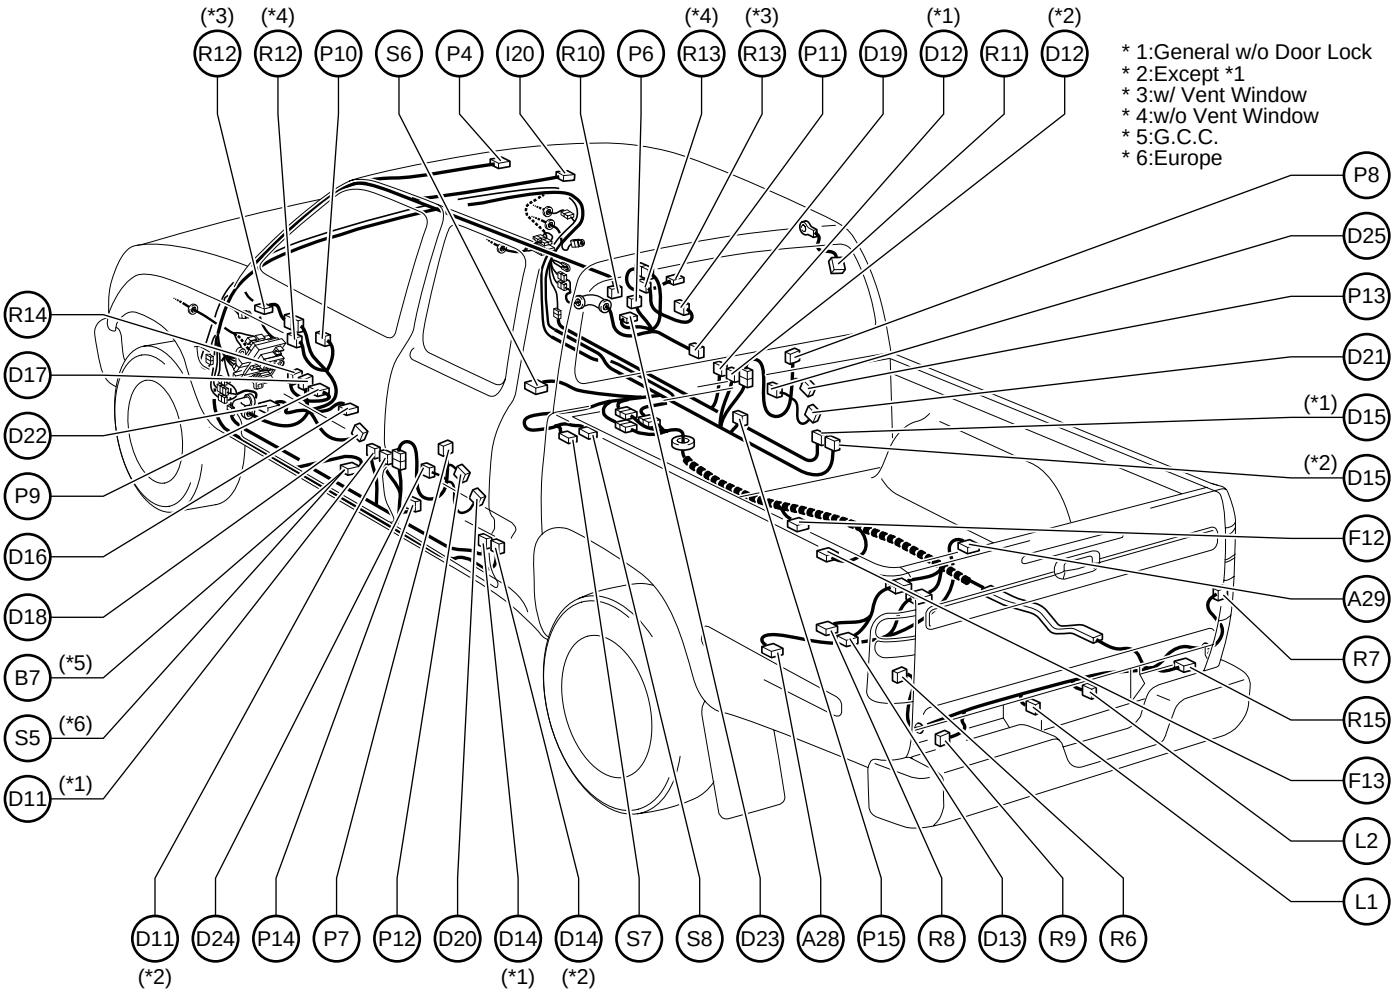

A28 ABS Speed Sensor Rear LH
A29 ABS Speed Sensor Rear RH

B 7 Buckle SW

D11 Door Courtesy SW Front LH
D12 Door Courtesy SW Front RH
D13 Detection SW (Rear Diff. Lock)
D14 Door Courtesy SW Rear LH
D15 Door Courtesy SW Rear RH
D16 Door Key Lock and Unlock SW
D17 Door Lock Control SW
D18 Door Lock Motor Front LH
D19 Door Lock Motor Front RH
D20 Door Lock Motor Rear LH
D21 Door Lock Motor Rear RH
D22 Door Speaker Front LH
D23 Door Speaker Front RH
D24 Door Speaker Rear LH
D25 Door Speaker Rear RH

F12 Fuel Pump
F13 Fuel Sender

I 20 Interior Light

L 1 License Plate Light LH
L 2 License Plate Light RH

P 4 Personal Light
P 6 Power Window Control SW Front RH
P 7 Power Window Control SW Rear LH
P 8 Power Window Control SW Rear RH
P 9 Power Window Master SW
P10 Power Window Motor Front LH
P11 Power Window Motor Front RH
P12 Power Window Motor Rear LH
P13 Power Window Motor Rear RH
P14 Pretensioner LH
P15 Pretensioner RH

R 6 Rear Combination Light LH
R 7 Rear Combination Light RH
R 8 Rear Diff. Lock Motor
R 9 Rear Fog Light
R10 Rear Window Defogger
R11 Rear Window Defogger
R12 Remote Control Mirror LH
R13 Remote Control Mirror RH
R14 Remote Control Mirror SW
R15 Reverse Warning Buzzer

S 5 Seat Heater (Driver's Seat)
S 6 Seat Heater (Front Passenger's Seat)
S 7 Seat Heater SW (Driver's Seat)
S 8 Seat Heater SW (Front Passenger's Seat)