
Position of Parts in Engine Compartment

[RHD : 3RZ–FE]

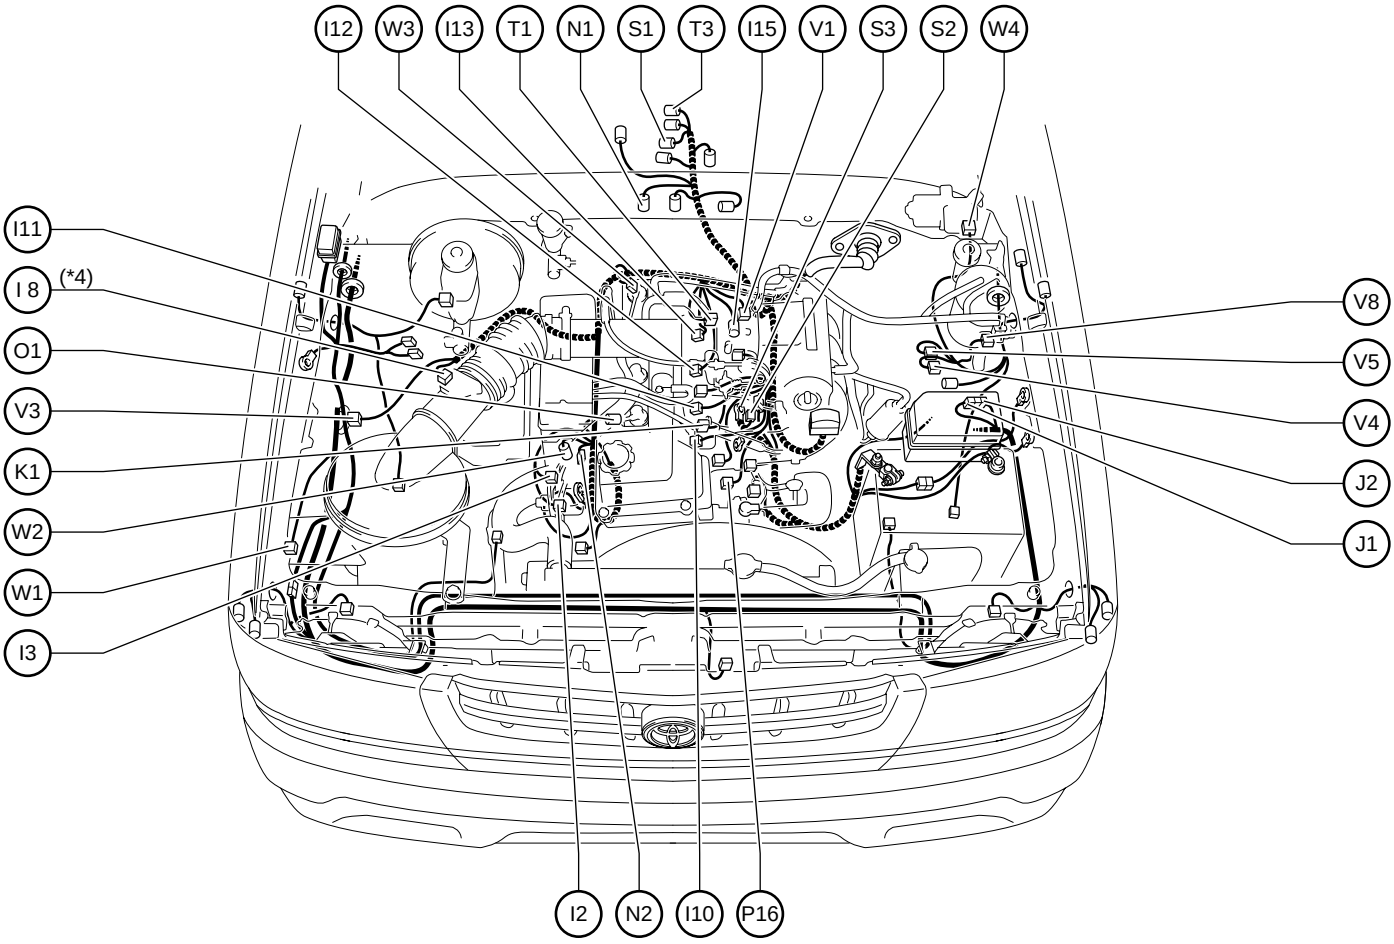

I 2 Ignition Coil and Igniter No.1
I 3 Ignition Coil and Igniter No.2
I 8 Intake Air Temp. Sensor
I 10 Injector No.1
I 11 Injector No.2
I 12 Injector No.3
I 13 Injector No.4
I 15 ISC Valve

J 1 Junction Connector
J 2 Junction Connector

K 1 Knock Sensor

N 1 Back–Up Light SW
Neutral Start SW
N 2 Noise Filter

O 1 Oil Pressure SW

P 16 Power Steering Oil Pressure SW

S 1 Speed Sensor (ECT)
S 2 Starter
S 3 Starter

T 1 Throttle Position Sensor
T 3 2–4 Select Motor

V 1 Vacuum Sensor
V 3 Variable Resistor
V 4 VSV (2WD, ADD)
V 5 VSV (4WD, ADD)
V 8 VSV (EVAP)

W 1 Washer Motor
W 2 Water Temp. Sender
W 3 Water Temp. Sensor
W 4 Wiper Motor