
Position of Parts in Engine Compartment

[RHD : 1KZ–TE]

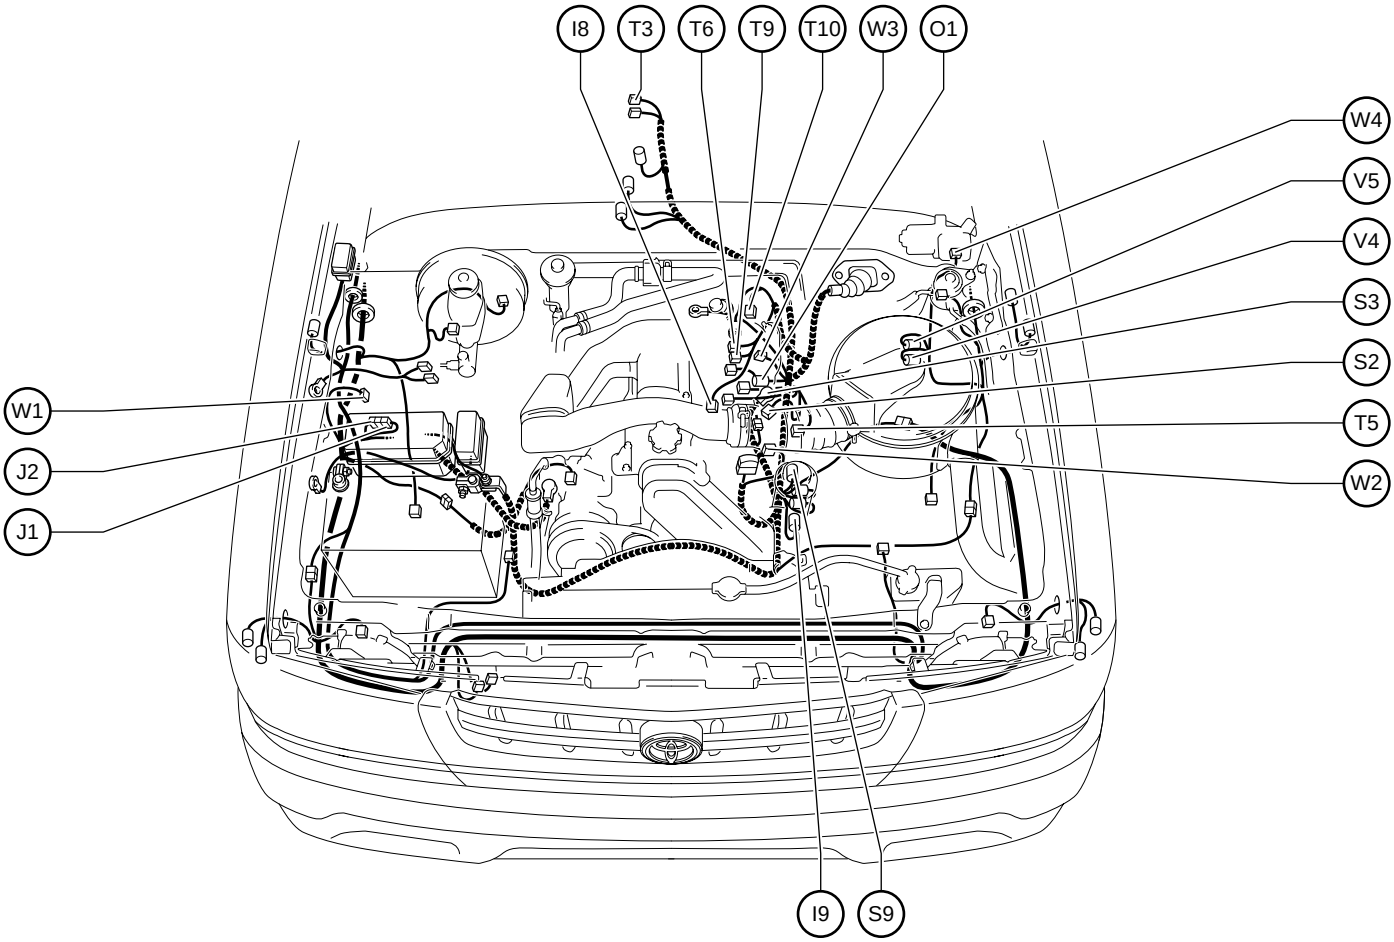

I 8 Intake Air Temp. Sensor
I 9 Injection Pump

J 1 Junction Connector
J 2 Junction Connector

O 1 Oil Pressure SW

S 2 Starter
S 3 Starter
S 9 Spill Control Valve

T 3 2–4 Select Motor
T 5 Timing Control Valve
T 6 Turbo Pressure Sensor
T 9 Throttle Open SW
T 10 Throttle Control Motor

V 4 VSV (2WD, ADD)
V 5 VSV (4WD, ADD)

W 1 Washer Motor
W 2 Water Temp. Sender
W 3 Water Temp. Sensor
W 4 Wiper Motor