
Position of Parts in Engine Compartment

[RHD : 5L–E]

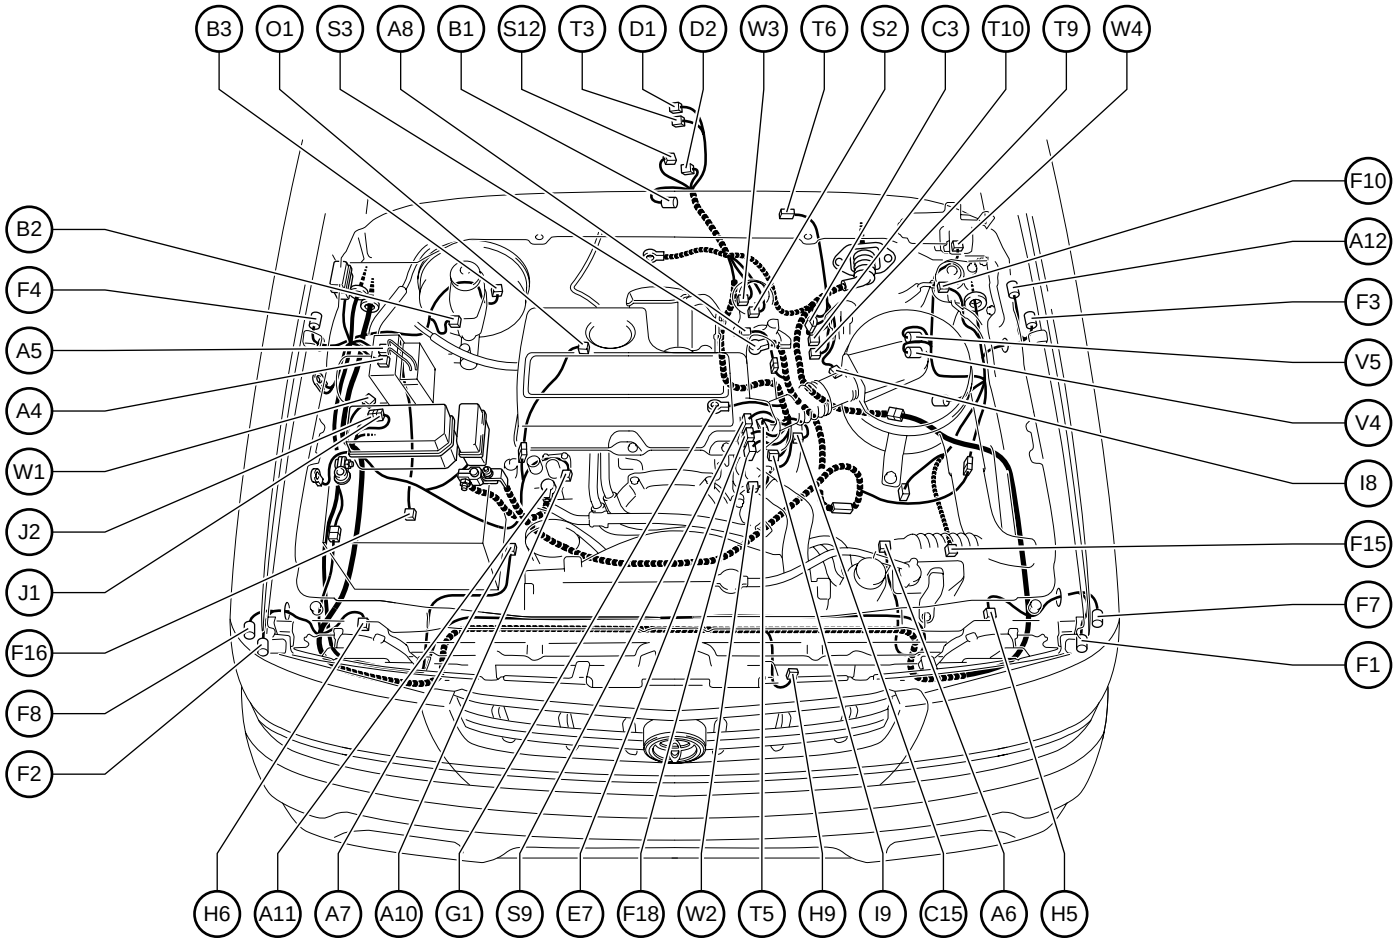

A 4 ABS Actuator
A 5 ABS Actuator
A 6 ABS Speed Sensor Front LH
A 7 ABS Speed Sensor Front RH
A 8 ADD Indicator SW
A10 Alternator
A11 Alternator
A12 Auto Antenna Motor

B 1 Back–Up Light SW
B 2 Brake Fluid Level Warning SW
B 3 Brake Vacuum Warning SW

C 3 Check Connector
C15 Crankshaft Position Sensor

D 1 Detection SW (Transfer 4WD Position)
D 2 Detection SW (Transfer L4 Position)

E 7 Engine Speed Sensor

F 1 Front Clearance Light LH
F 2 Front Clearance Light RH
F 3 Front Side Turn Signal Light LH
F 4 Front Side Turn Signal Light RH
F 7 Front Turn Signal Light LH
F 8 Front Turn Signal Light RH
F10 Fuel Sedimentary SW
F15 Front Airbag Sensor LH
F16 Front Airbag Sensor RH
F18 Fuel Temp. Sensor

G 1 Glow Plug

H 5 Headlight LH
H 6 Headlight RH
H 9 Horn

I 8 Intake Air Temp. Sensor
I 9 Injection Pump

J 1 Junction Connector
J 2 Junction Connector

O 1 Oil Pressure SW

S 2 Starter
S 3 Starter
S 9 Spill Control Valve
S12 Speed Sensor (Combination Meter)

T 3 2–4 Select Motor
T 5 Timing Control Valve
T 6 Turbo Pressure Sensor
T 9 Throttle Open SW
T10 Throttle Control Motor

V 4 VSV (2WD, ADD)
V 5 VSV (4WD, ADD)

W 1 Washer Motor
W 2 Water Temp. Sender
W 3 Water Temp. Sensor
W 4 Wiper Motor