
Position of Parts in Engine Compartment

[RHD : 3L, 2L]

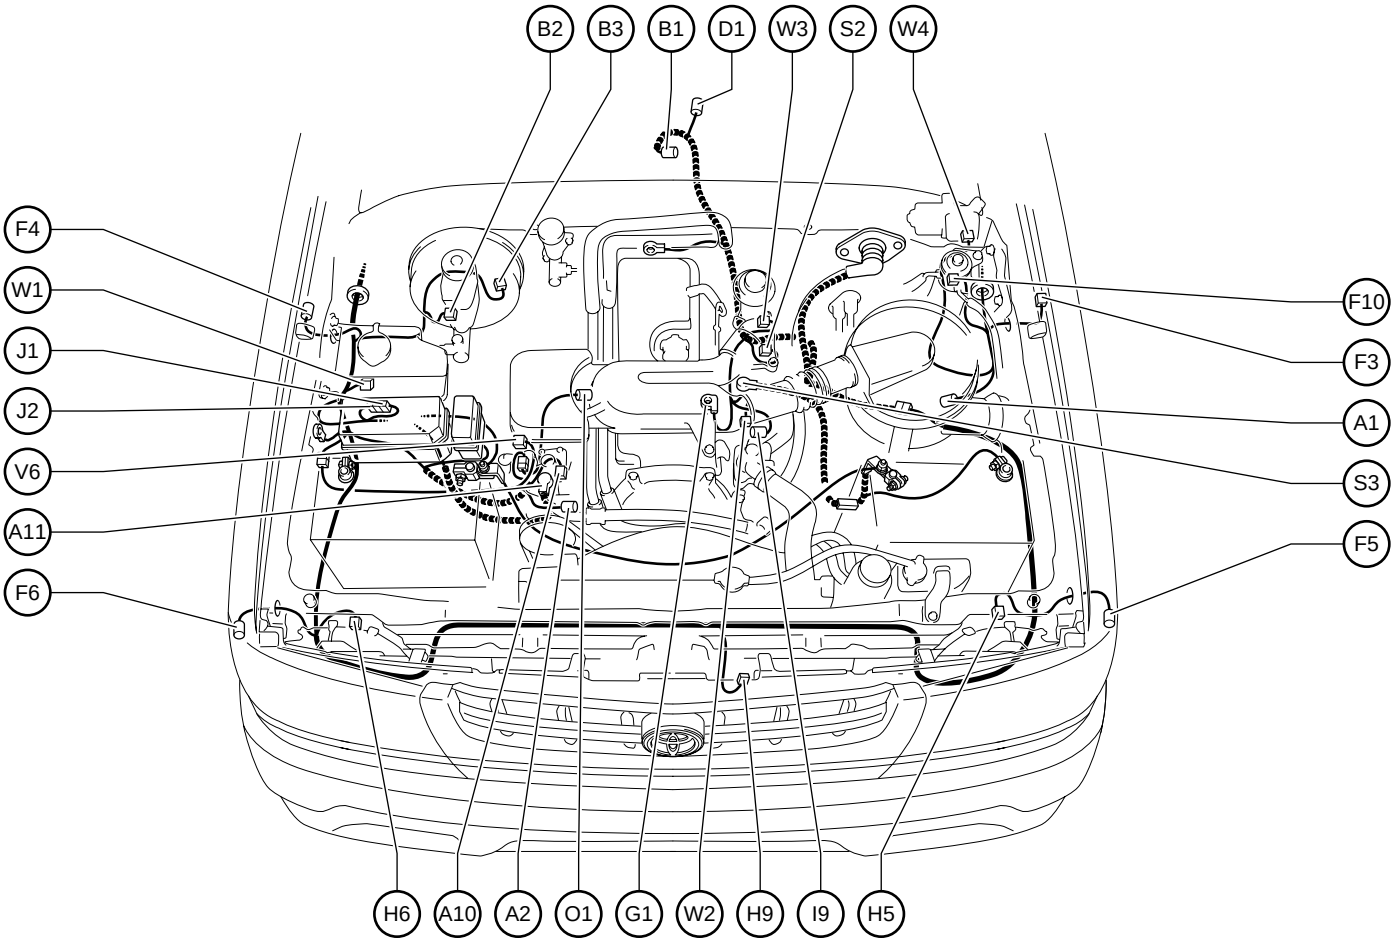

A 1 A/C Dual Pressure SW
A 2 A/C Magnetic Clutch
A 10 Alternator
A 11 Alternator

B 1 Back–Up Light SW
B 2 Brake Fluid Level Warning SW
B 3 Brake Vacuum Warning SW

D 1 Detection SW (Transfer 4WD Position)

F 3 Front Side Turn Signal Light LH
F 4 Front Side Turn Signal Light RH
F 5 Front Turn Signal Light and Clearance Light LH
F 6 Front Turn Signal Light and Clearance Light RH
F 10 Fuel Sedimentary SW

G 1 Glow Plug

H 5 Headlight LH
H 6 Headlight RH
H 9 Horn

I 9 Injection Pump

J 1 Junction Connector
J 2 Junction Connector

O 1 Oil Pressure SW

S 2 Starter
S 3 Starter

V 6 VSV (A/C Idle–Up)

W 1 Washer Motor
W 2 Water Temp. Sender
W 3 Water Temp. Sensor
W 4 Wiper Motor