
Connector Joining Wire Harness and Wire Harness

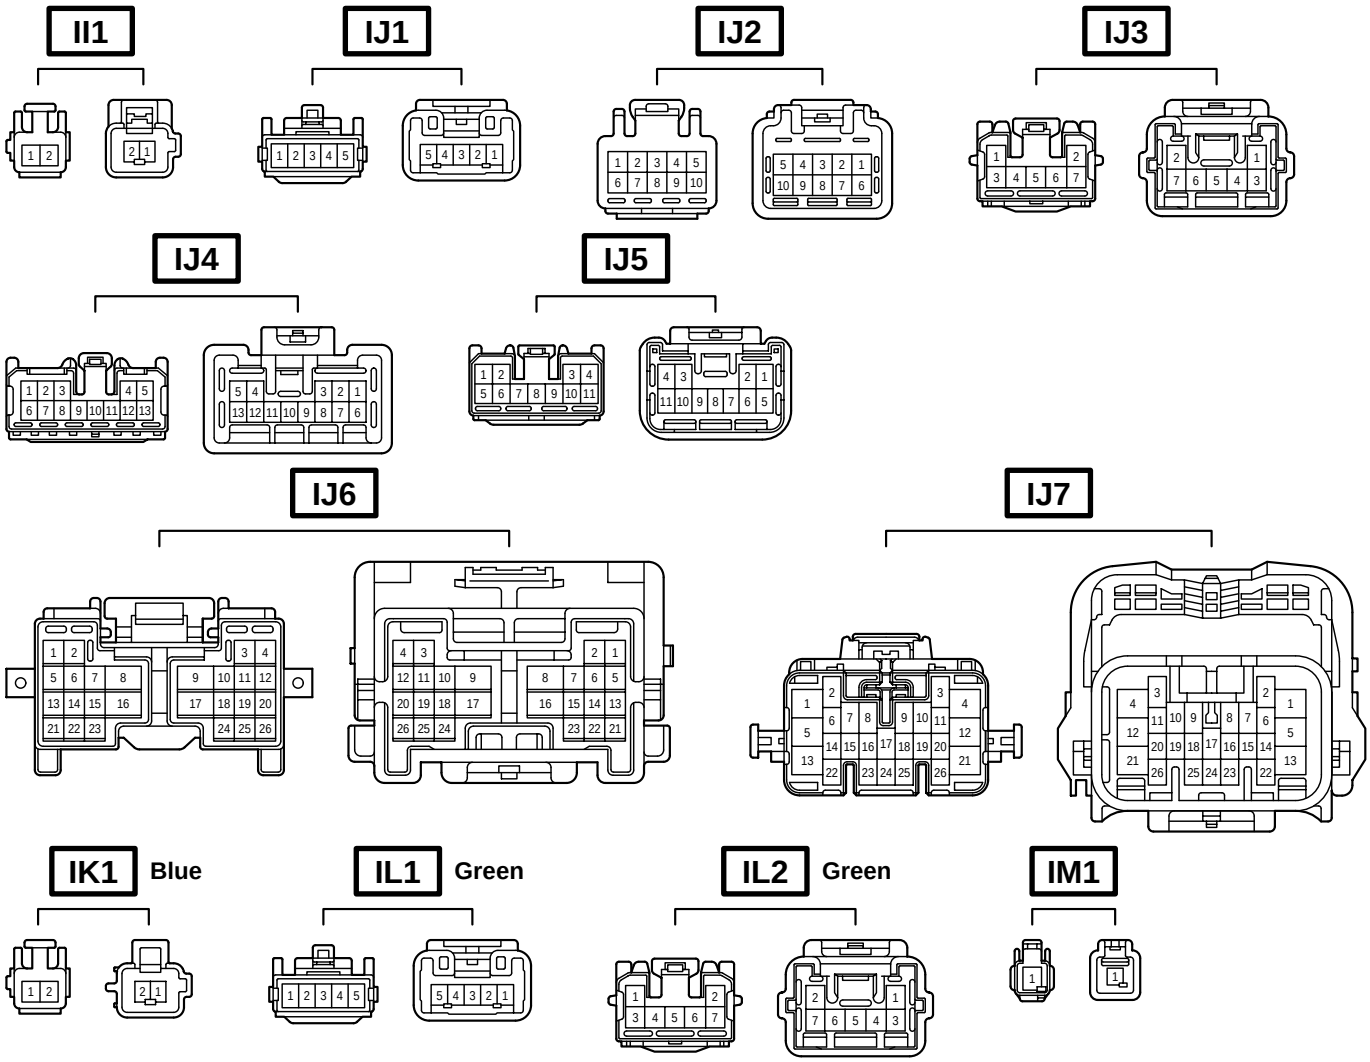

Code	Joining Wire Harness and Wire Harness (Connector Location)
II1	Cowl Wire and Cowl No.3 Wire (Behind the Ashtray)
IJ1	Engine Wire and Cowl Wire (Behind the Glove Box)
IJ2	
IJ3	
IJ4	
IJ5	
IJ6	
IJ7	
IK1	Engine Room No.2 Wire and Cowl No.3 Wire (Behind the Glove Box)
IL1	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IL2	
IM1	Cowl Wire and Cowl No.3 Wire (Cowl Side Panel RH)