
Connector Joining Wire Harness and Wire Harness

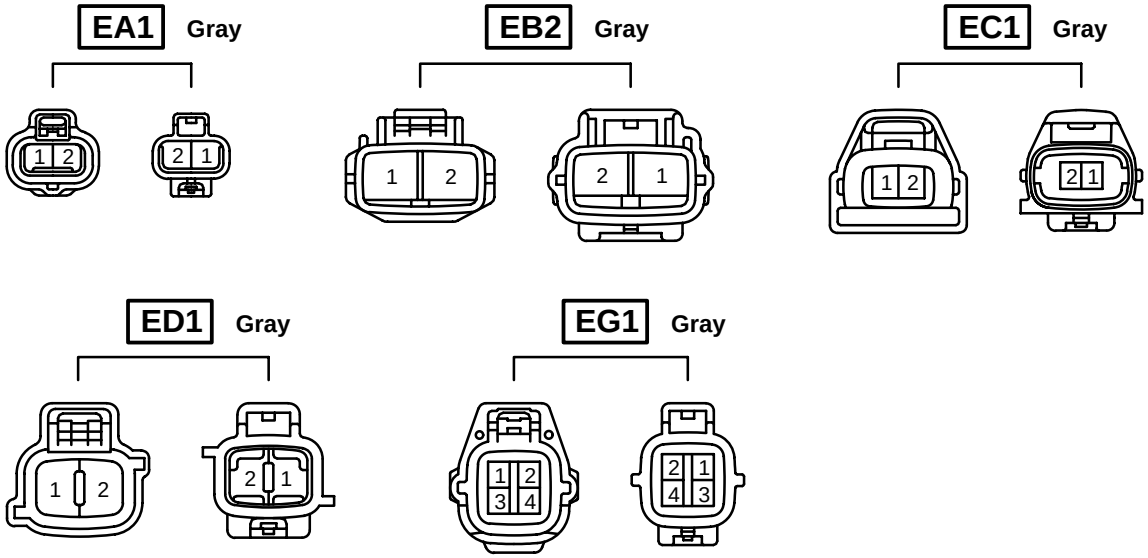

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Room No.2 Wire and Engine Room Main Wire (Front Right Fender Apron)
EB2	Engie Room Main Wire and Engine Wire (Near the Engine Room R/B)
EC1	Engine No.2 Wire and Cowl Wire (Near the Engine Room R/B)
ED1	Engine No.2 Wire and Differential Wire (Near the Starter)
EG1	Alternator Wire and Engine Room Main Wire (Near the Engine Room R/B)