
Connector Joining Wire Harness and Wire Harness

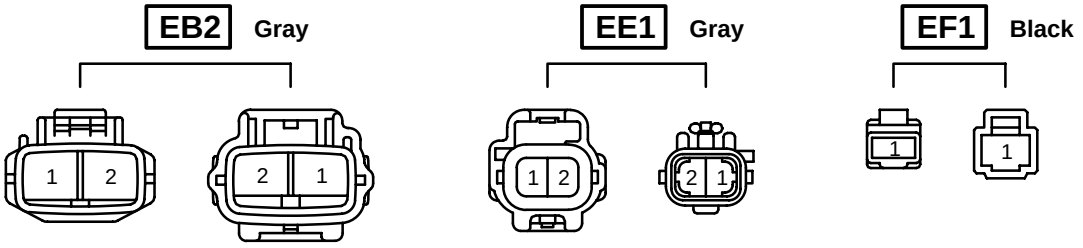

Code	Joining Wire Harness and Wire Harness (Connector Location)
EB2	Engine Room Main Wire and Engine Wire (Near the Engine Room R/B)
EE1	Engine Room Main Wire and A/C Sub Wire (Near the Battery)
EF1	Engine No.4 Wire and Engine Room Main Wire (Near the Alternator)