
## Connector Joining Wire Harness and Wire Harness

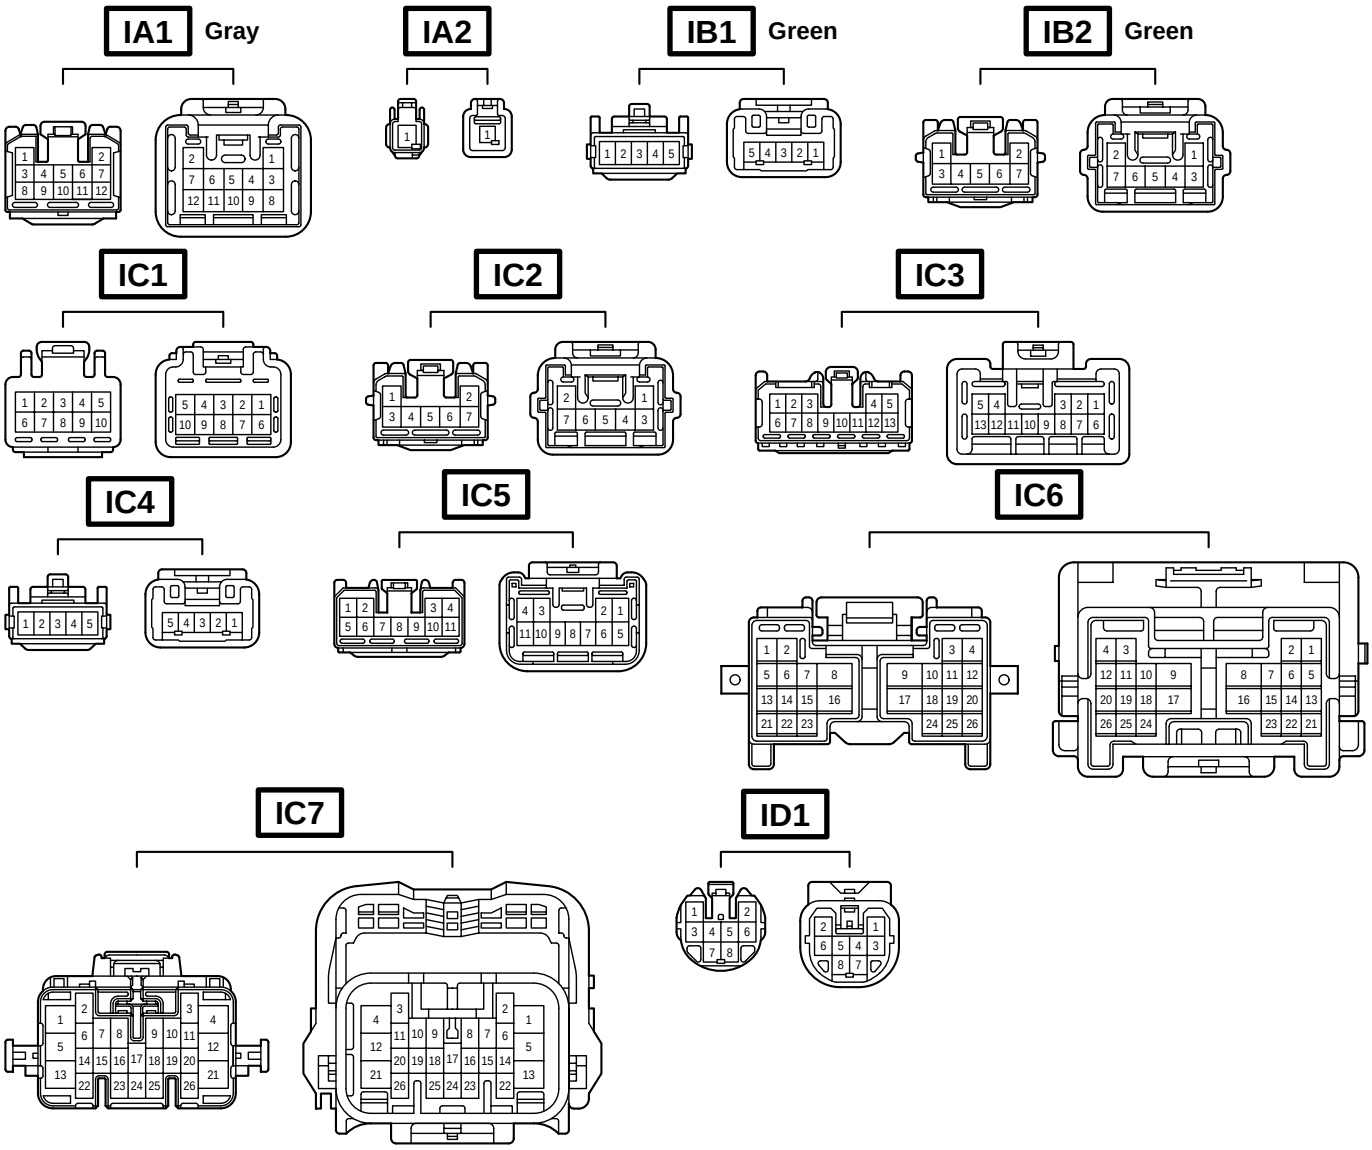


| Code | Joining Wire Harness and Wire Harness (Connector Location) |
|---|---|
| IA1 | Cowl Wire and Cowl No.3 Wire (Left Kick Panel) |
| IA2 | |
| IB1 | Front Door LH Wire and Cowl Wire (Left Kick Panel) |
| IB2 | |
| IC1 | Engine Wire and Cowl Wire (Behind the Glove Box) |
| IC2 | |
| IC3 | |
| IC4 | |
| IC5 | |
| IC6 | |
| IC7 | |
| ID1 | Cowl Wire and A/C Sub Wire (Near the A/C Unit) |