
Connector Joining Wire Harness and Wire Harness

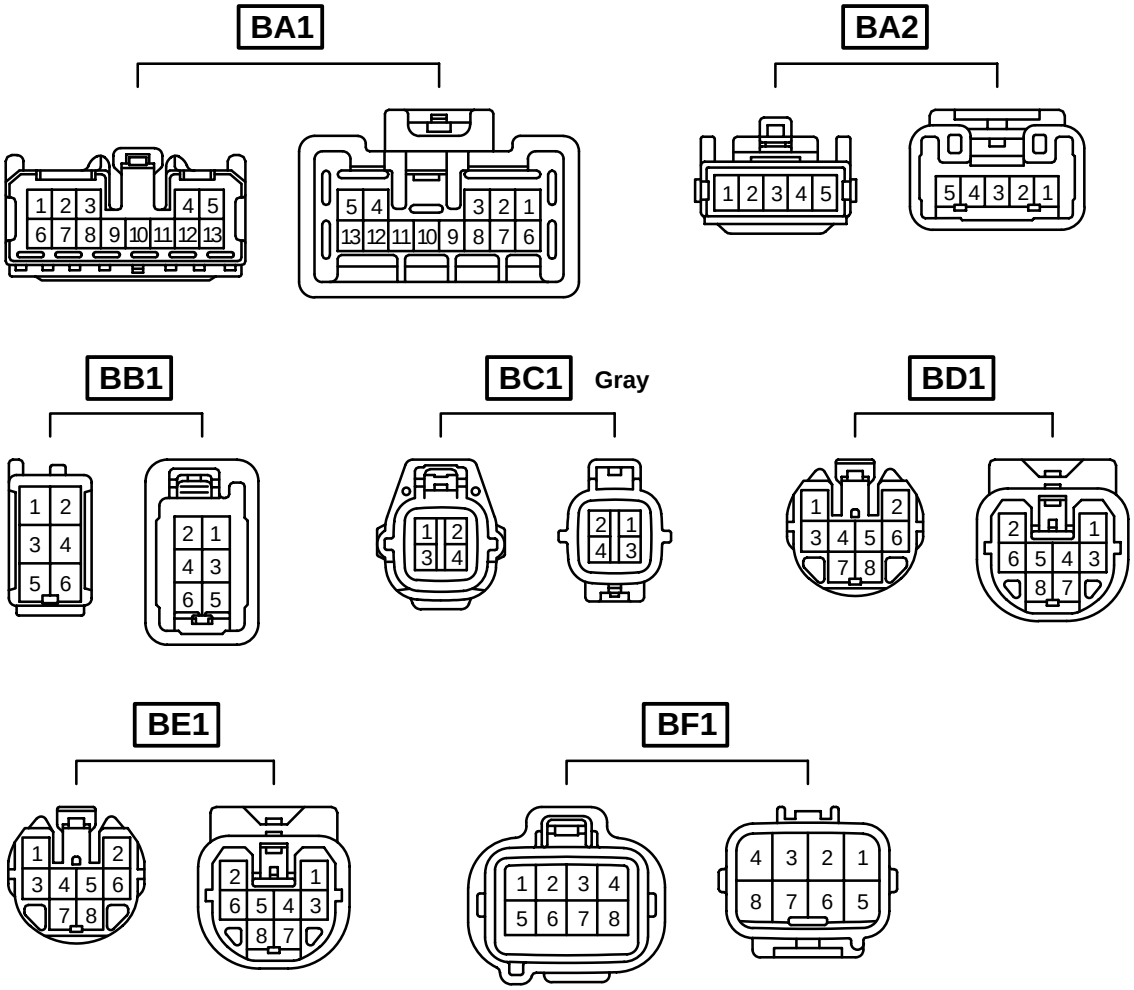

Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Frame Wire and Cowl Wire (Under the Driver's Seat)
BA2	
BB1	Frame Wire and Cowl No.3 Wire (Under the Driver's Seat)
BC1	Frame Wire and Speed Sensor Wire (Near the No.5 Cross Member)
BD1	Rear Door LH Wire and Cowl Wire (Left Center Pillar)
BE1	Rear Door RH Wire and Cowl Wire (Right Center Pillar)
BF1	Frame Wire and Differential Wire (Near the No.5 Cross Member)