
## Connector Joining Wire Harness and Wire Harness

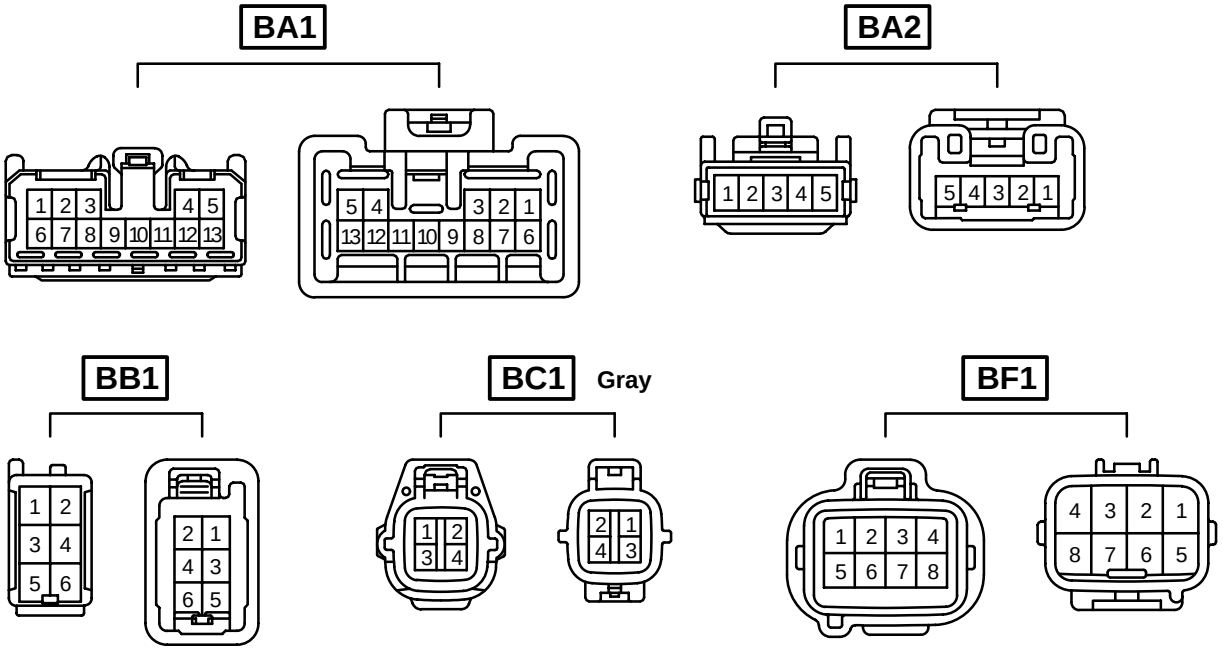


| Code | Joining Wire Harness and Wire Harness (Connector Location) |
|---|---|
| BA1 | Frame Wire and Cowl Wire (Under the Driver's Seat) |
| BA2 | |
| BB1 | Frame Wire and Cowl No.3 Wire (Under the Driver's Seat) |
| BC1 | Frame Wire and Speed Sensor Wire (Near the No.5 Cross Member) |
| BF1 | Frame Wire and Differential Wire (Near the No.5 Cross Member) |