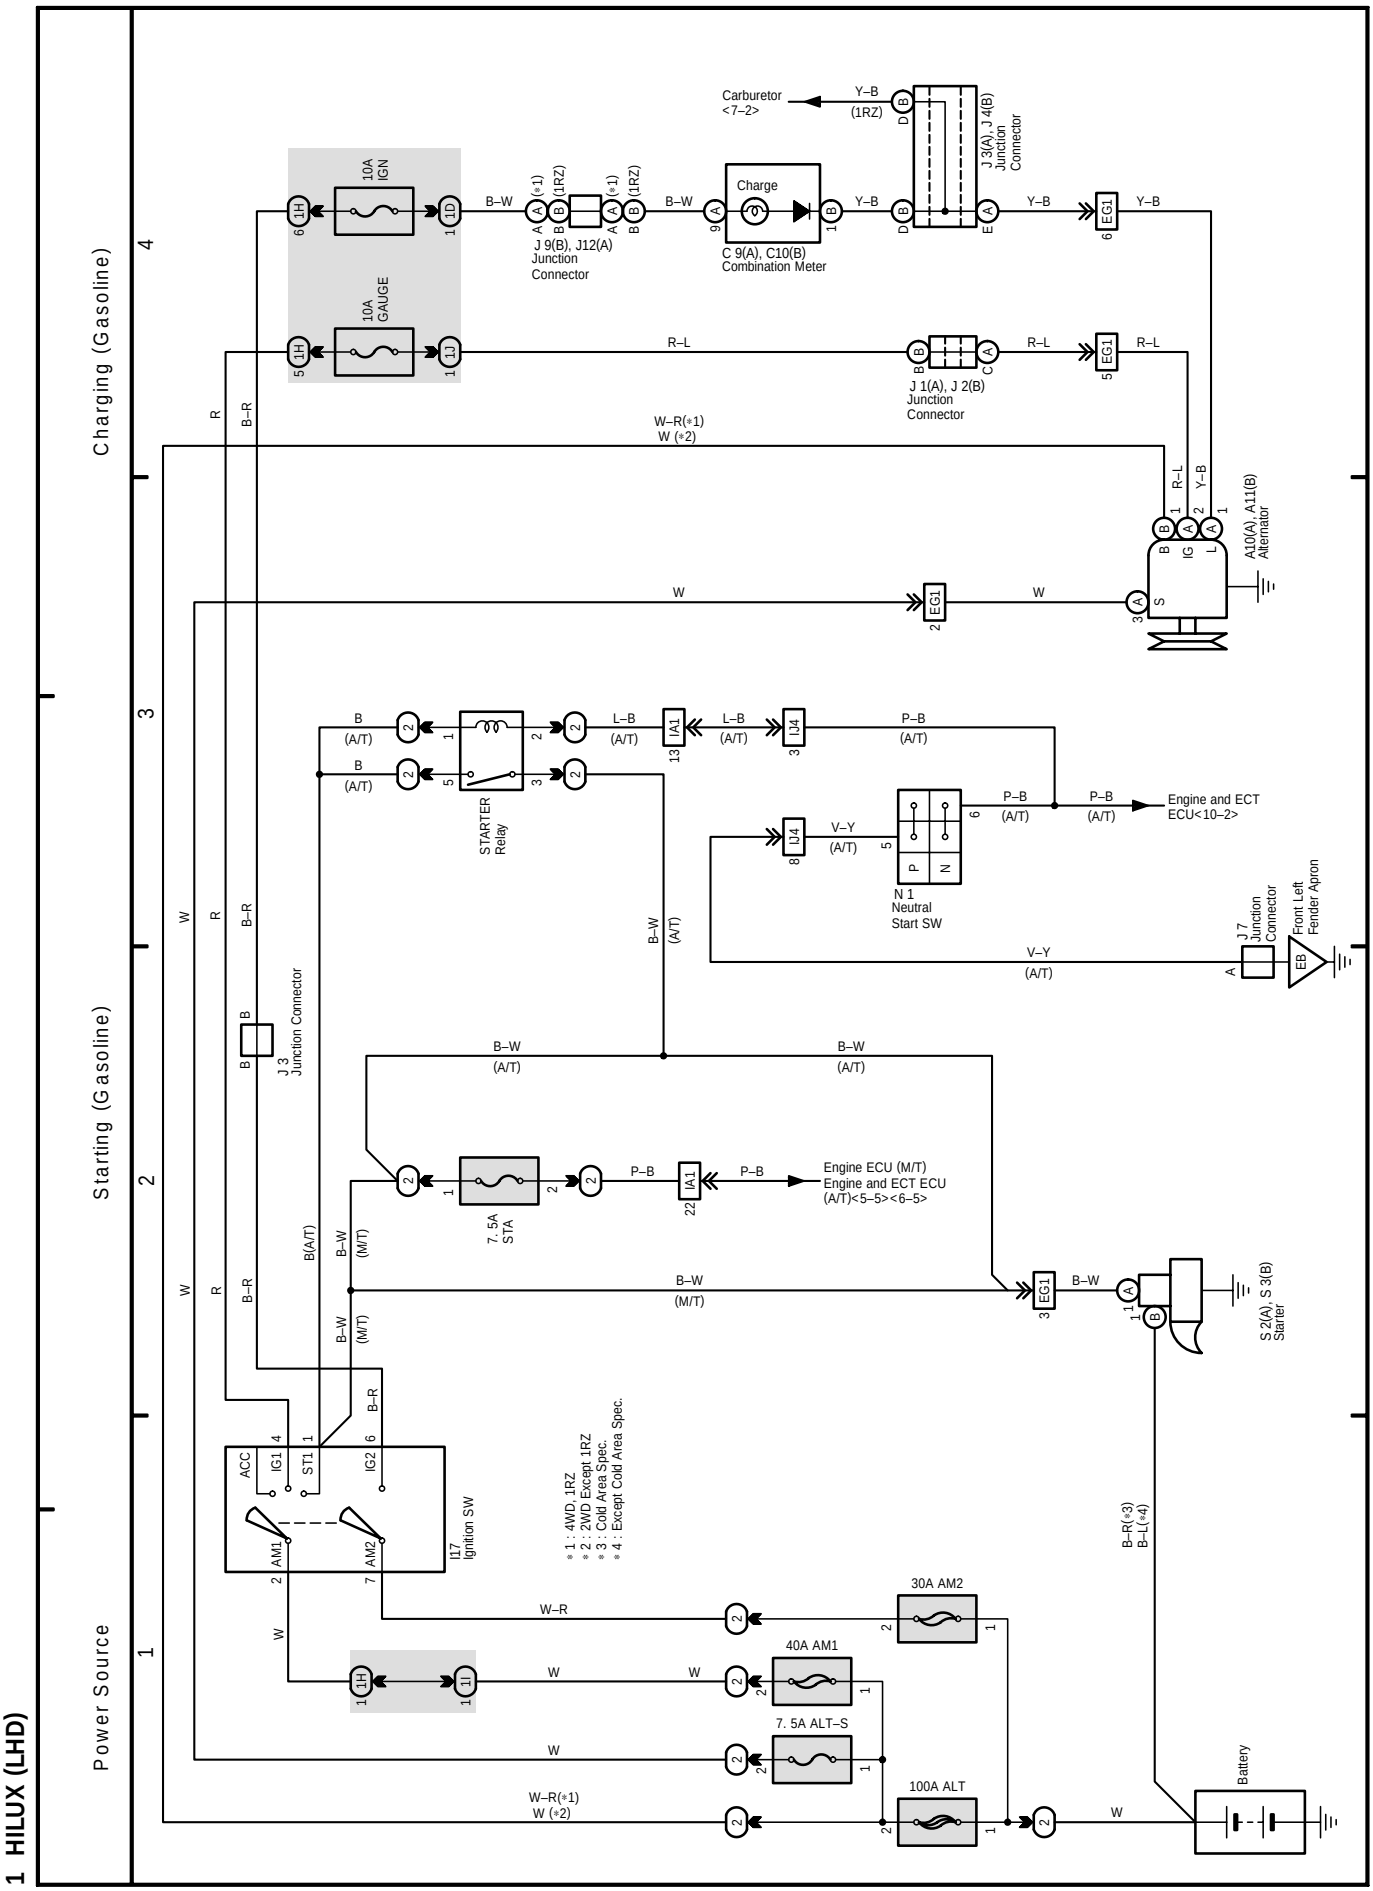

1 HILUX (LHD)
Power Source
Starting (Gasoline)
Charging (Gasoline)
1
2
3
4
Carburetor <7–2>
Y–B
(1RZ)
J 3(A), J 4(B) Junction Connector
10A IGN
10A GAUGE
B–W
J 9(B), J12(A) Junction Connector
Charge
C 9(A), C10(B) Combination Meter
R–L
J 1(A), J 2(B) Junction Connector
W–R(*1)
W (*2)
A10(A), A11(B) Alternator
STARTER Relay
L–B
P–B
(A/T)
Engine and ECT ECU<10–2>
N 1 Neutral Start SW
V–Y
J 7 Junction Connector
Front Left Fender Apron
J 3 Junction Connector
B–W
(M/T)
7.5A STA
Engine ECU (M/T)
Engine and ECT ECU (A/T)<5–5><6–5>
S 2(A), S 3(B) Starter
I17 Ignition SW
ACC
IG1
ST1
IG2
AM1
AM2
* 1 : 4WD, 1RZ
* 2 : 2WD Except 1RZ
* 3 : Cold Area Spec.
* 4 : Except Cold Area Spec.
B–R(*3)
B–L(*4)
30A AM2
40A AM1
7. 5A ALT–S
100A ALT
Battery