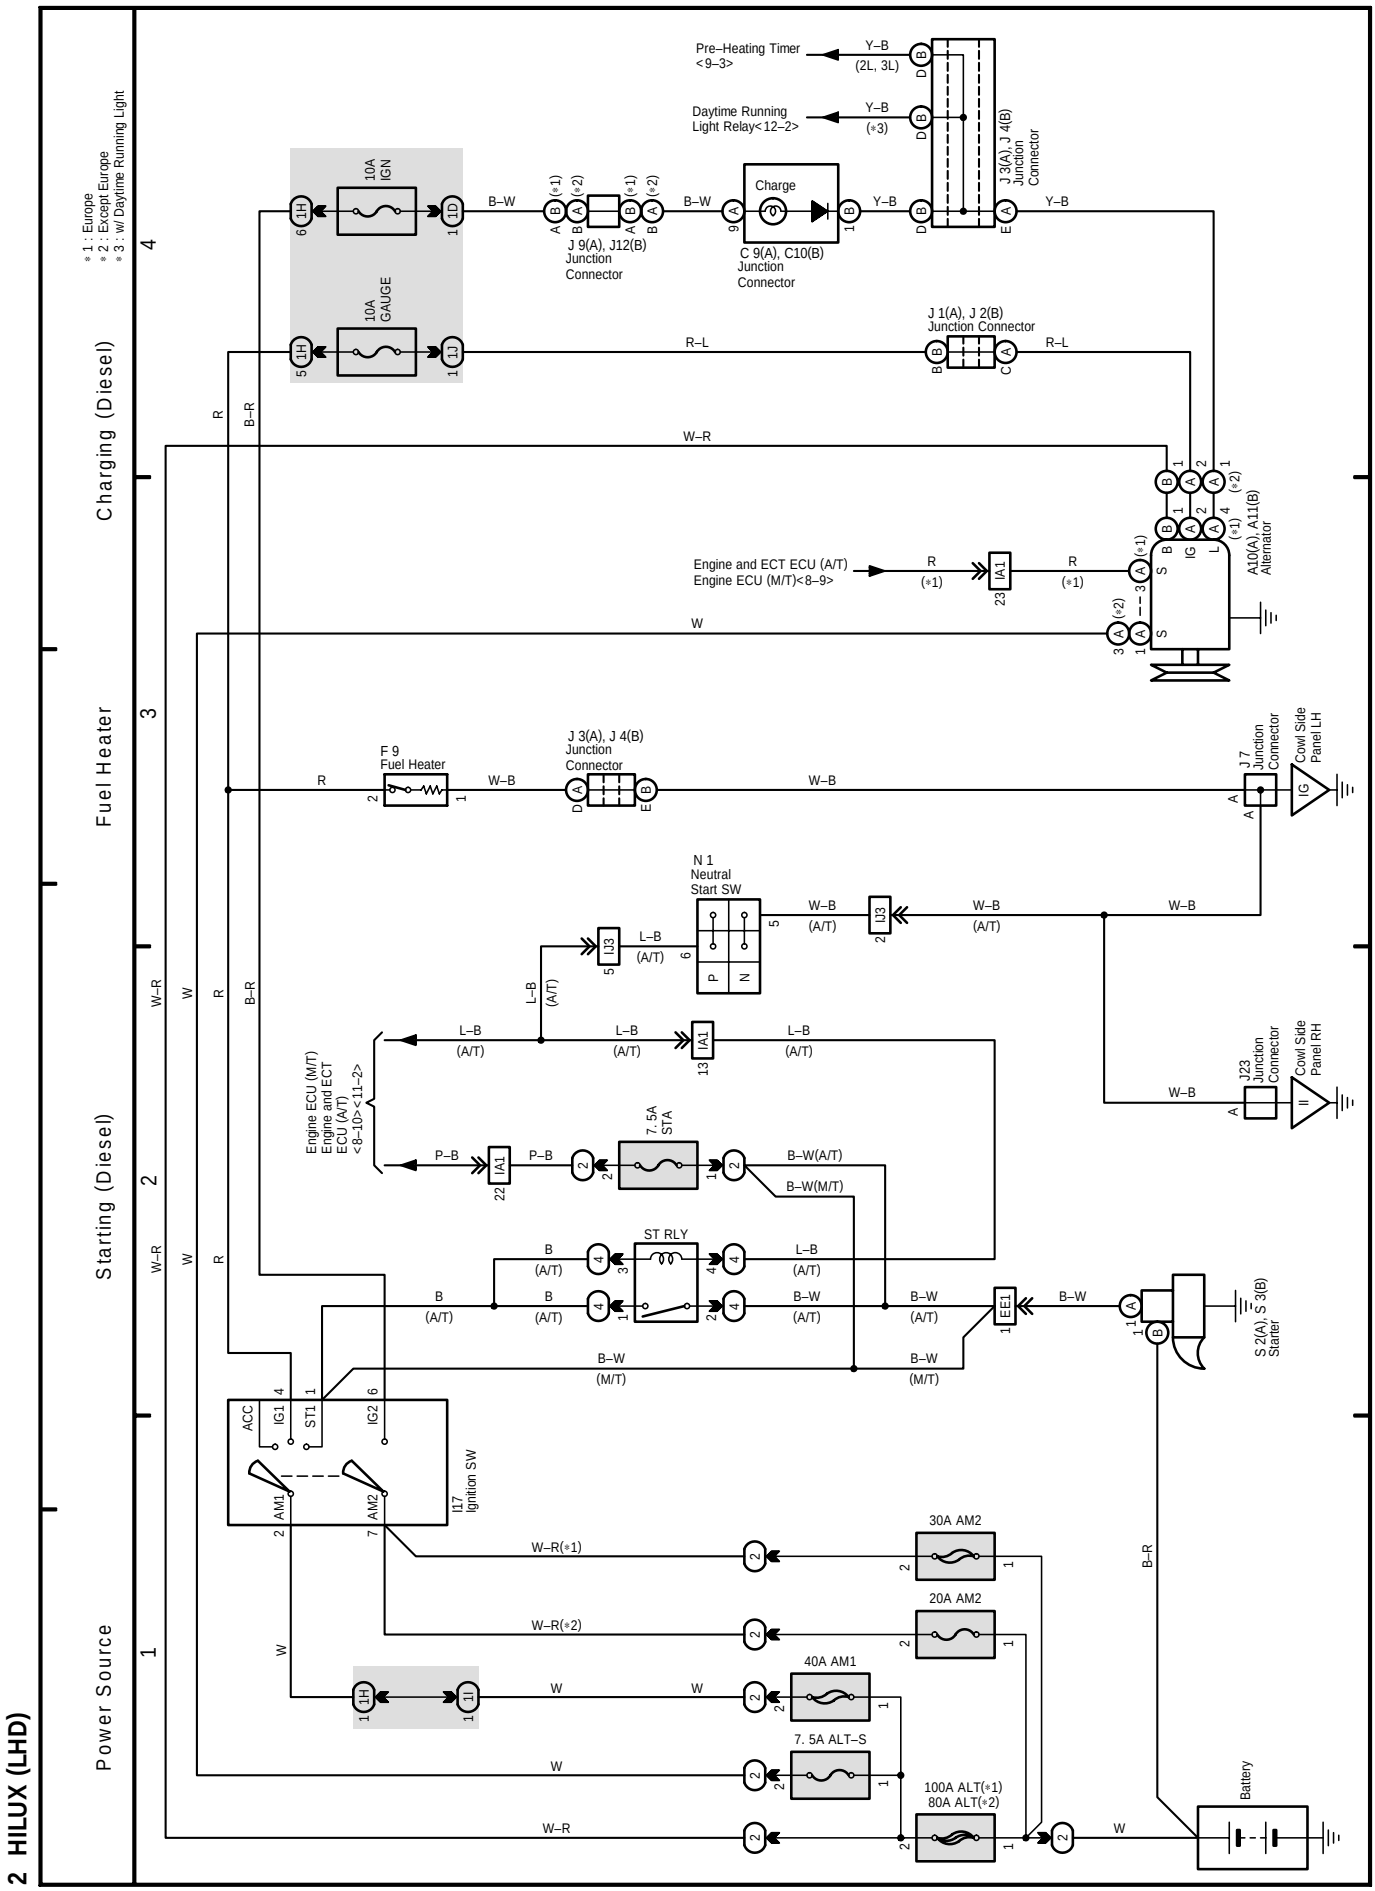

2 HILUX (LHD)
Power Source
Starting (Diesel)
Fuel Heater
Charging (Diesel)
* 1 : Europe
* 2 : Except Europe
* 3 : w/ Daytime Running Light
Pre–Heating Timer <9–3>
Daytime Running Light Relay<12–2>
Charge
10A IGN
10A GAUGE
J 9(A), J12(B) Junction Connector
C 9(A), C10(B) Junction Connector
J 3(A), J 4(B) Junction Connector
J 1(A), J 2(B) Junction Connector
Engine and ECT ECU (A/T)
Engine ECU (M/T)<8–9>
A10(A), A11(B) Alternator
F 9 Fuel Heater
J 7 Junction Connector
Cowl Side Panel LH
N 1 Neutral Start SW
J23 Junction Connector
Cowl Side Panel RH
Engine ECU (M/T)
Engine and ECT ECU (A/T)
<8–10><11–2>
7.5A STA
ST RLY
S 2(A), S 3(B) Starter
I17 Ignition SW
ACC
IG1
ST1
IG2
AM1
AM2
30A AM2
20A AM2
40A AM1
7.5A ALT–S
100A ALT(*1)
80A ALT(*2)
Battery