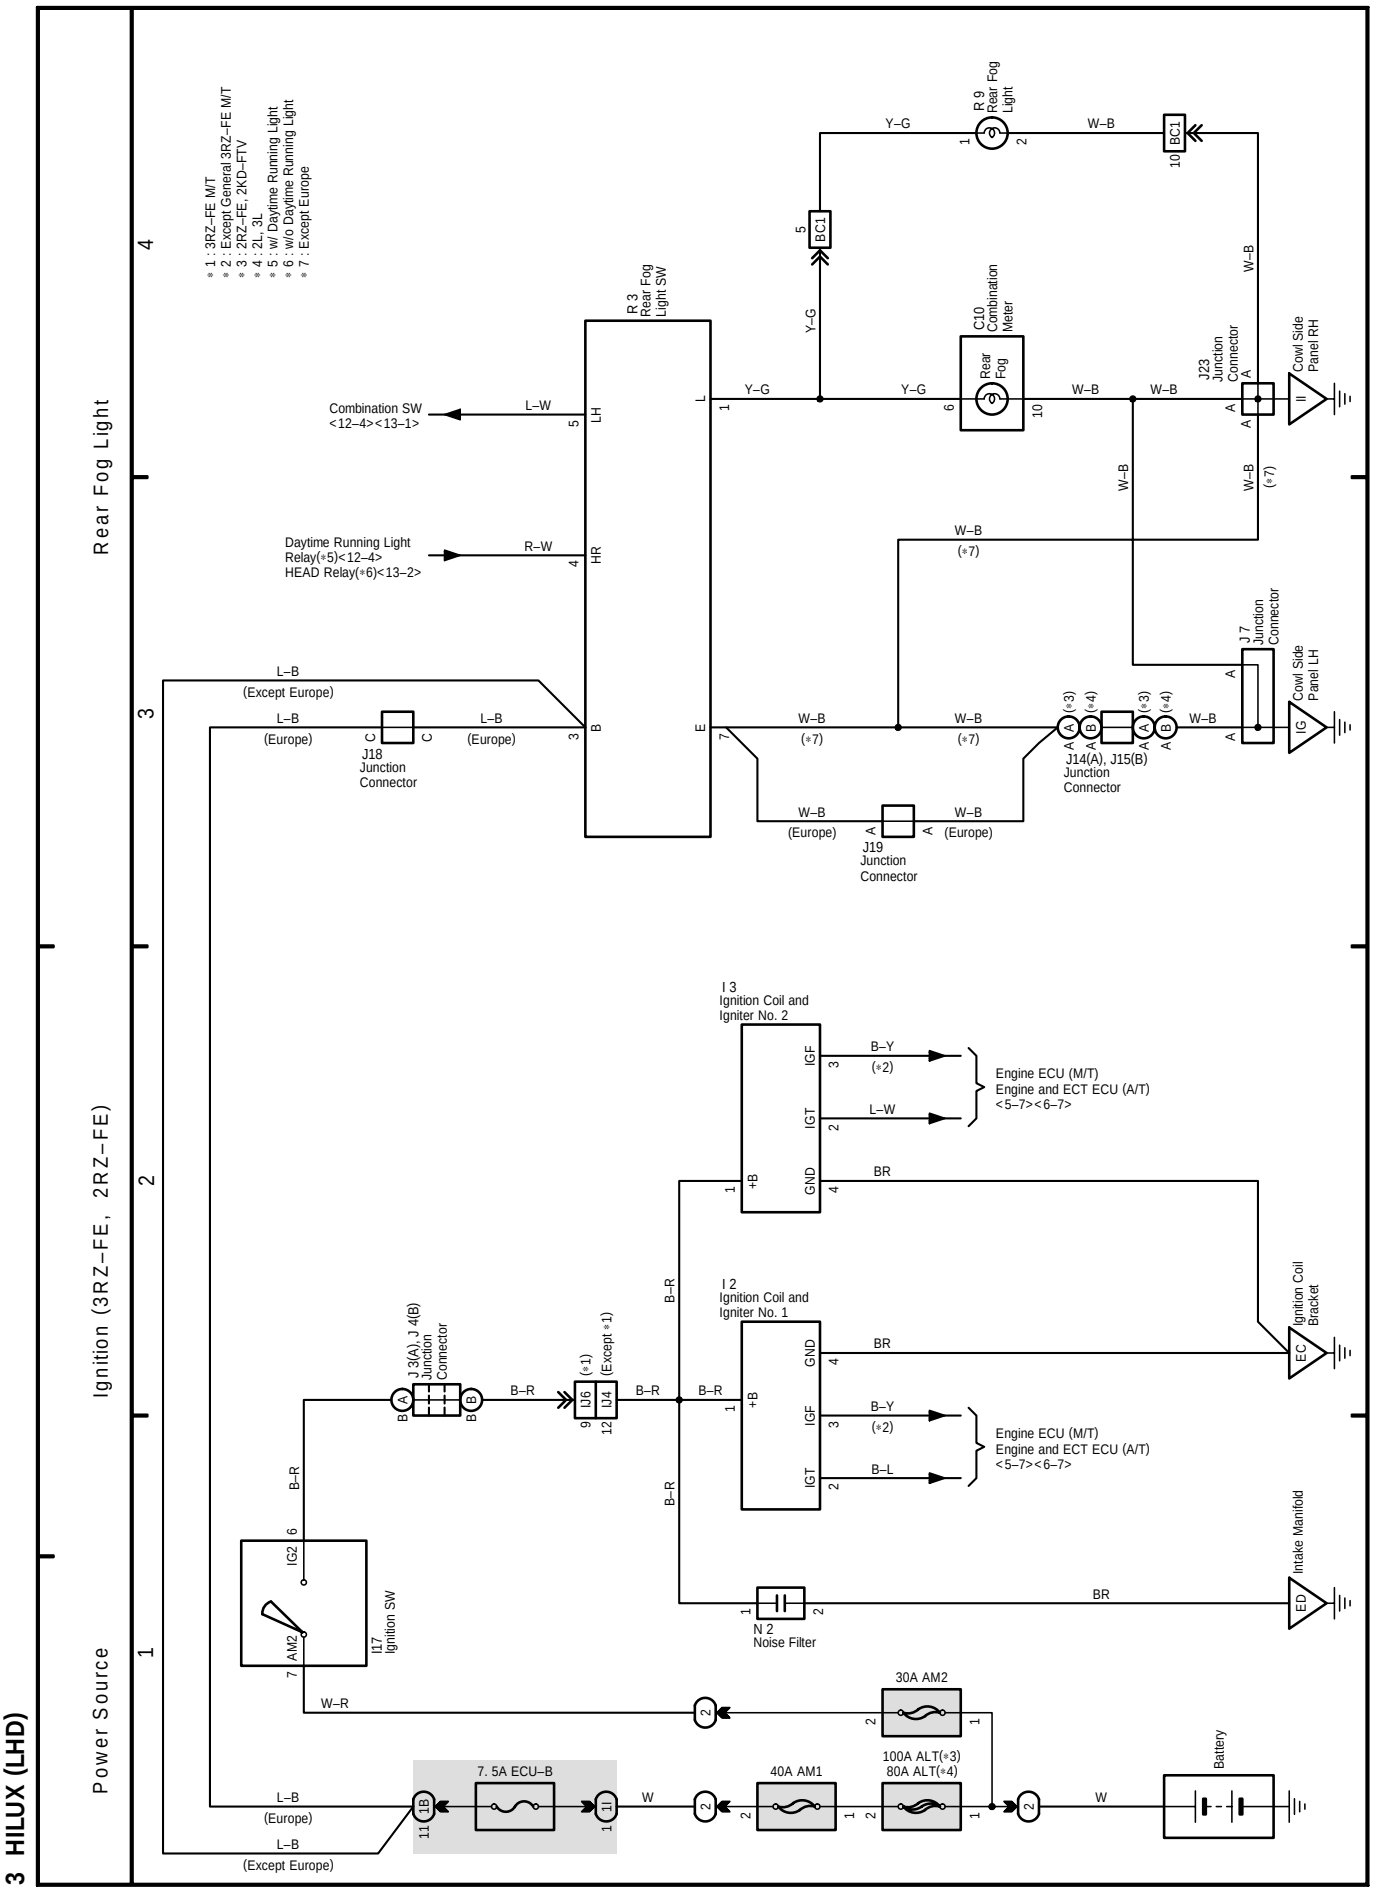

3 HILUX (LHD)
Power Source
Ignition (3RZ–FE, 2RZ–FE)
Rear Fog Light
1
2
3
4
* 1 : 3RZ–FE M/T
* 2 : Except General 3RZ–FE M/T
* 3 : 2RZ–FE, 2KD–FTV
* 4 : 2L, 3L
* 5 : w/ Daytime Running Light
* 6 : w/o Daytime Running Light
* 7 : Except Europe
R 9 Rear Fog Light
R 3 Rear Fog Light SW
C10 Combination Meter
J23 Junction Connector
J 7 Junction Connector
J18 Junction Connector
J14(A), J15(B) Junction Connector
J19 Junction Connector
Cowl Side Panel RH
Cowl Side Panel LH
Combination SW <12–4><13–1>
Daytime Running Light Relay(*5)<12–4>
HEAD Relay(*6)<13–2>
I 3 Ignition Coil and Igniter No. 2
I 2 Ignition Coil and Igniter No. 1
Engine ECU (M/T)
Engine and ECT ECU (A/T)
<5–7><6–7>
J 3(A), J 4(B) Junction Connector
Ignition Coil Bracket
Intake Manifold
I17 Ignition SW
N 2 Noise Filter
30A AM2
40A AM1
100A ALT(*3)
80A ALT(*4)
7. 5A ECU–B
Battery