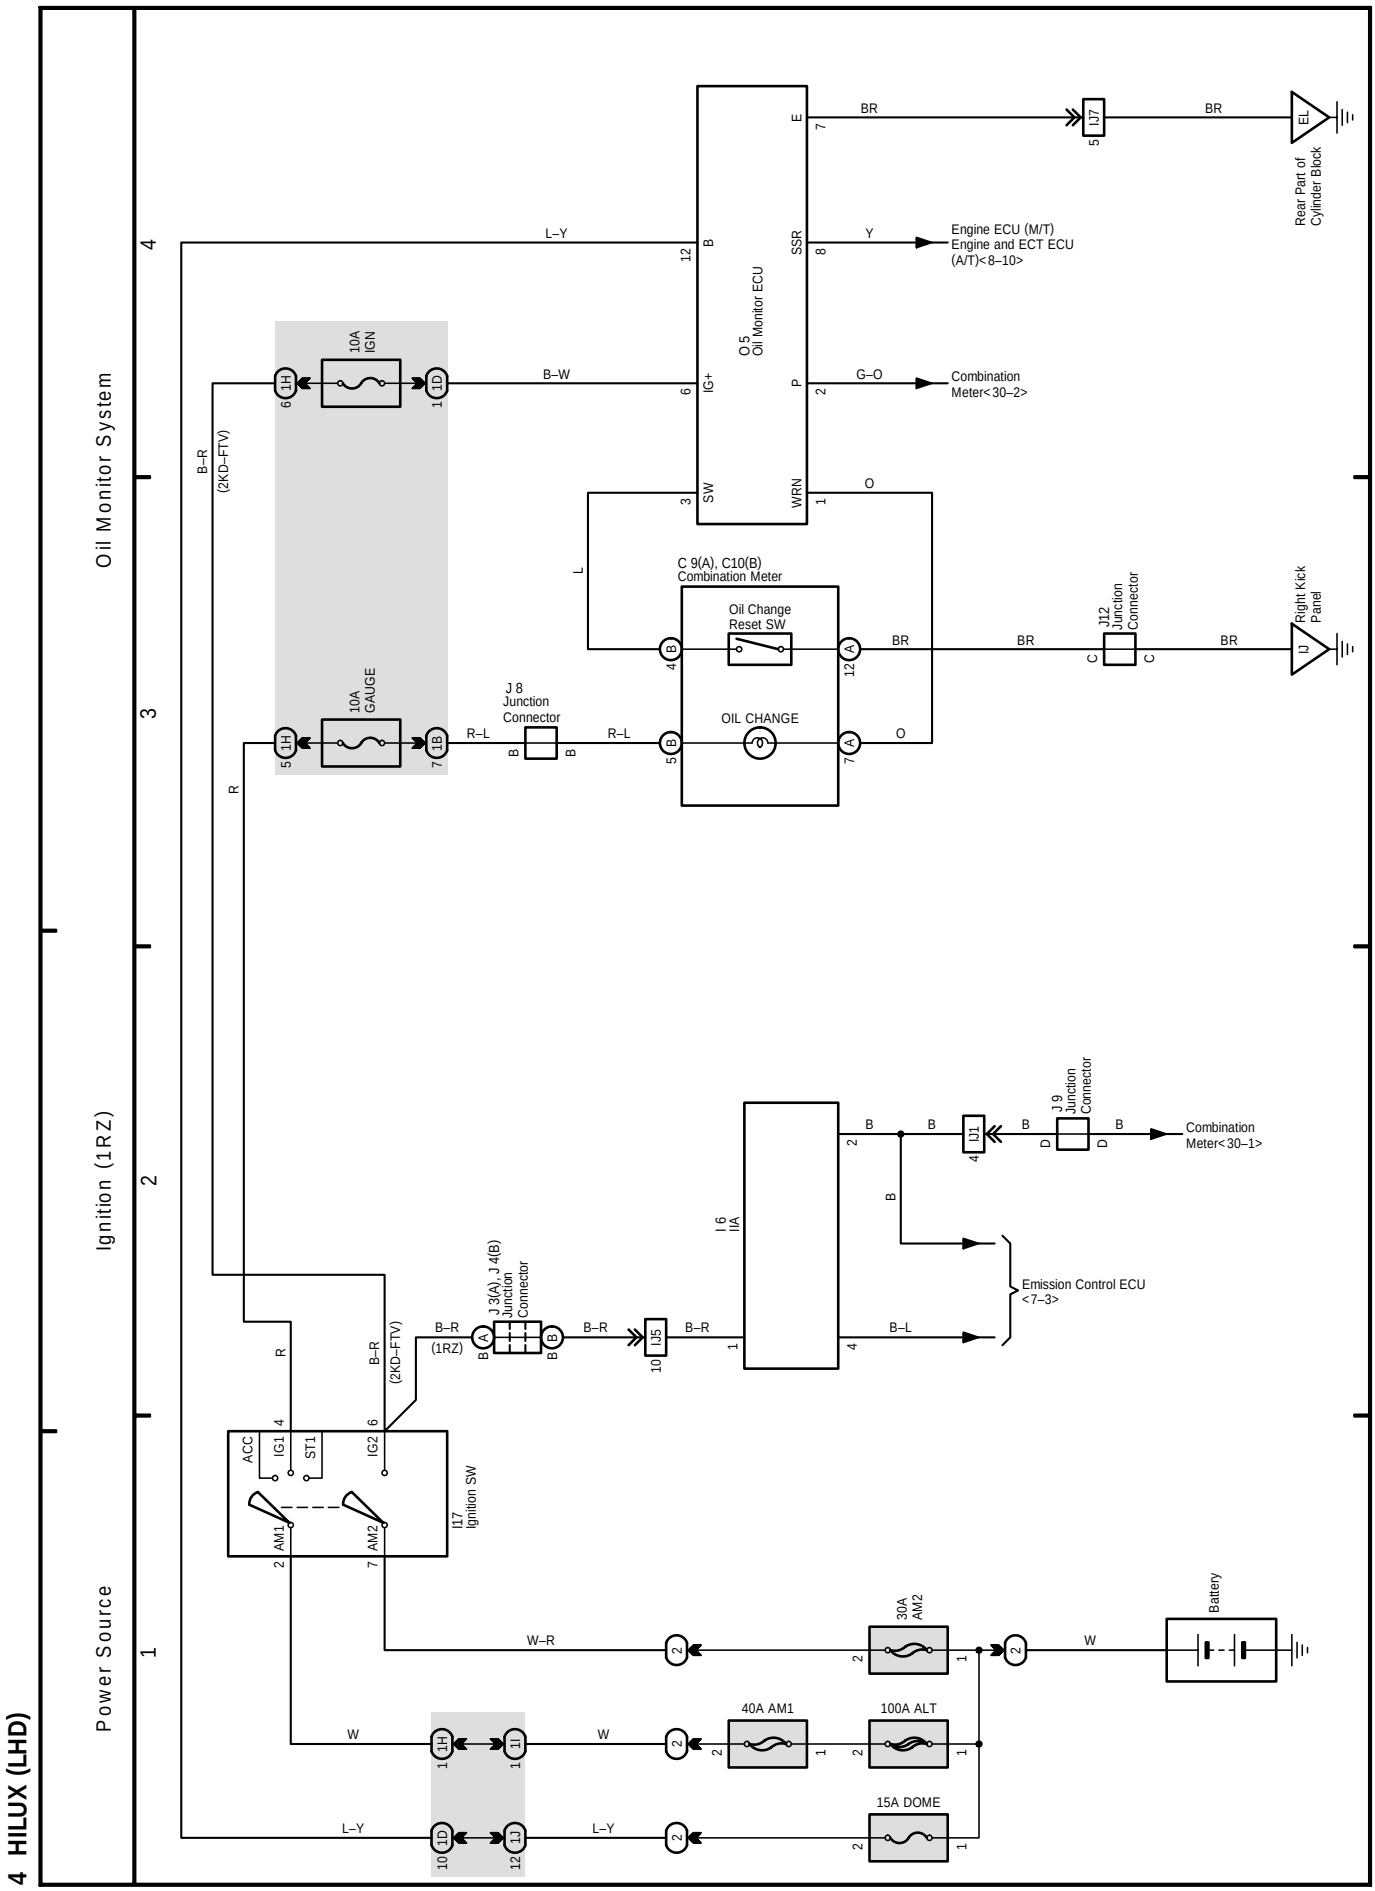

4 HILUX (LHD)
Power Source
Ignition (1RZ)
Oil Monitor System
1
2
3
4
O 5
Oil Monitor ECU
E
B
SSR
IG+
P
SW
WRN
BR
L–Y
Y
G–O
O
Engine ECU (M/T)
Engine and ECT ECU
(A/T)< 8–10>
Combination
Meter< 30–2>
IJ7
EL
Rear Part of
Cylinder Block
10A
IGN
10A
GAUGE
B–W
B–R
(2KD–FTV)
R
R–L
J 8
Junction
Connector
C 9(A), C10(B)
Combination Meter
Oil Change
Reset SW
OIL CHANGE
L
J12
Junction
Connector
Right Kick
Panel
IJ
I 6
IIA
J 9
Junction
Connector
IJ1
Combination
Meter< 30–1>
Emission Control ECU
<7–3>
B–L
B–R
(1RZ)
J 3(A), J 4(B)
Junction
Connector
IJ5
I17
Ignition SW
ACC
IG1
ST1
IG2
AM1
AM2
30A
AM2
Battery
W–R
W
40A AM1
100A ALT
15A DOME
L–Y