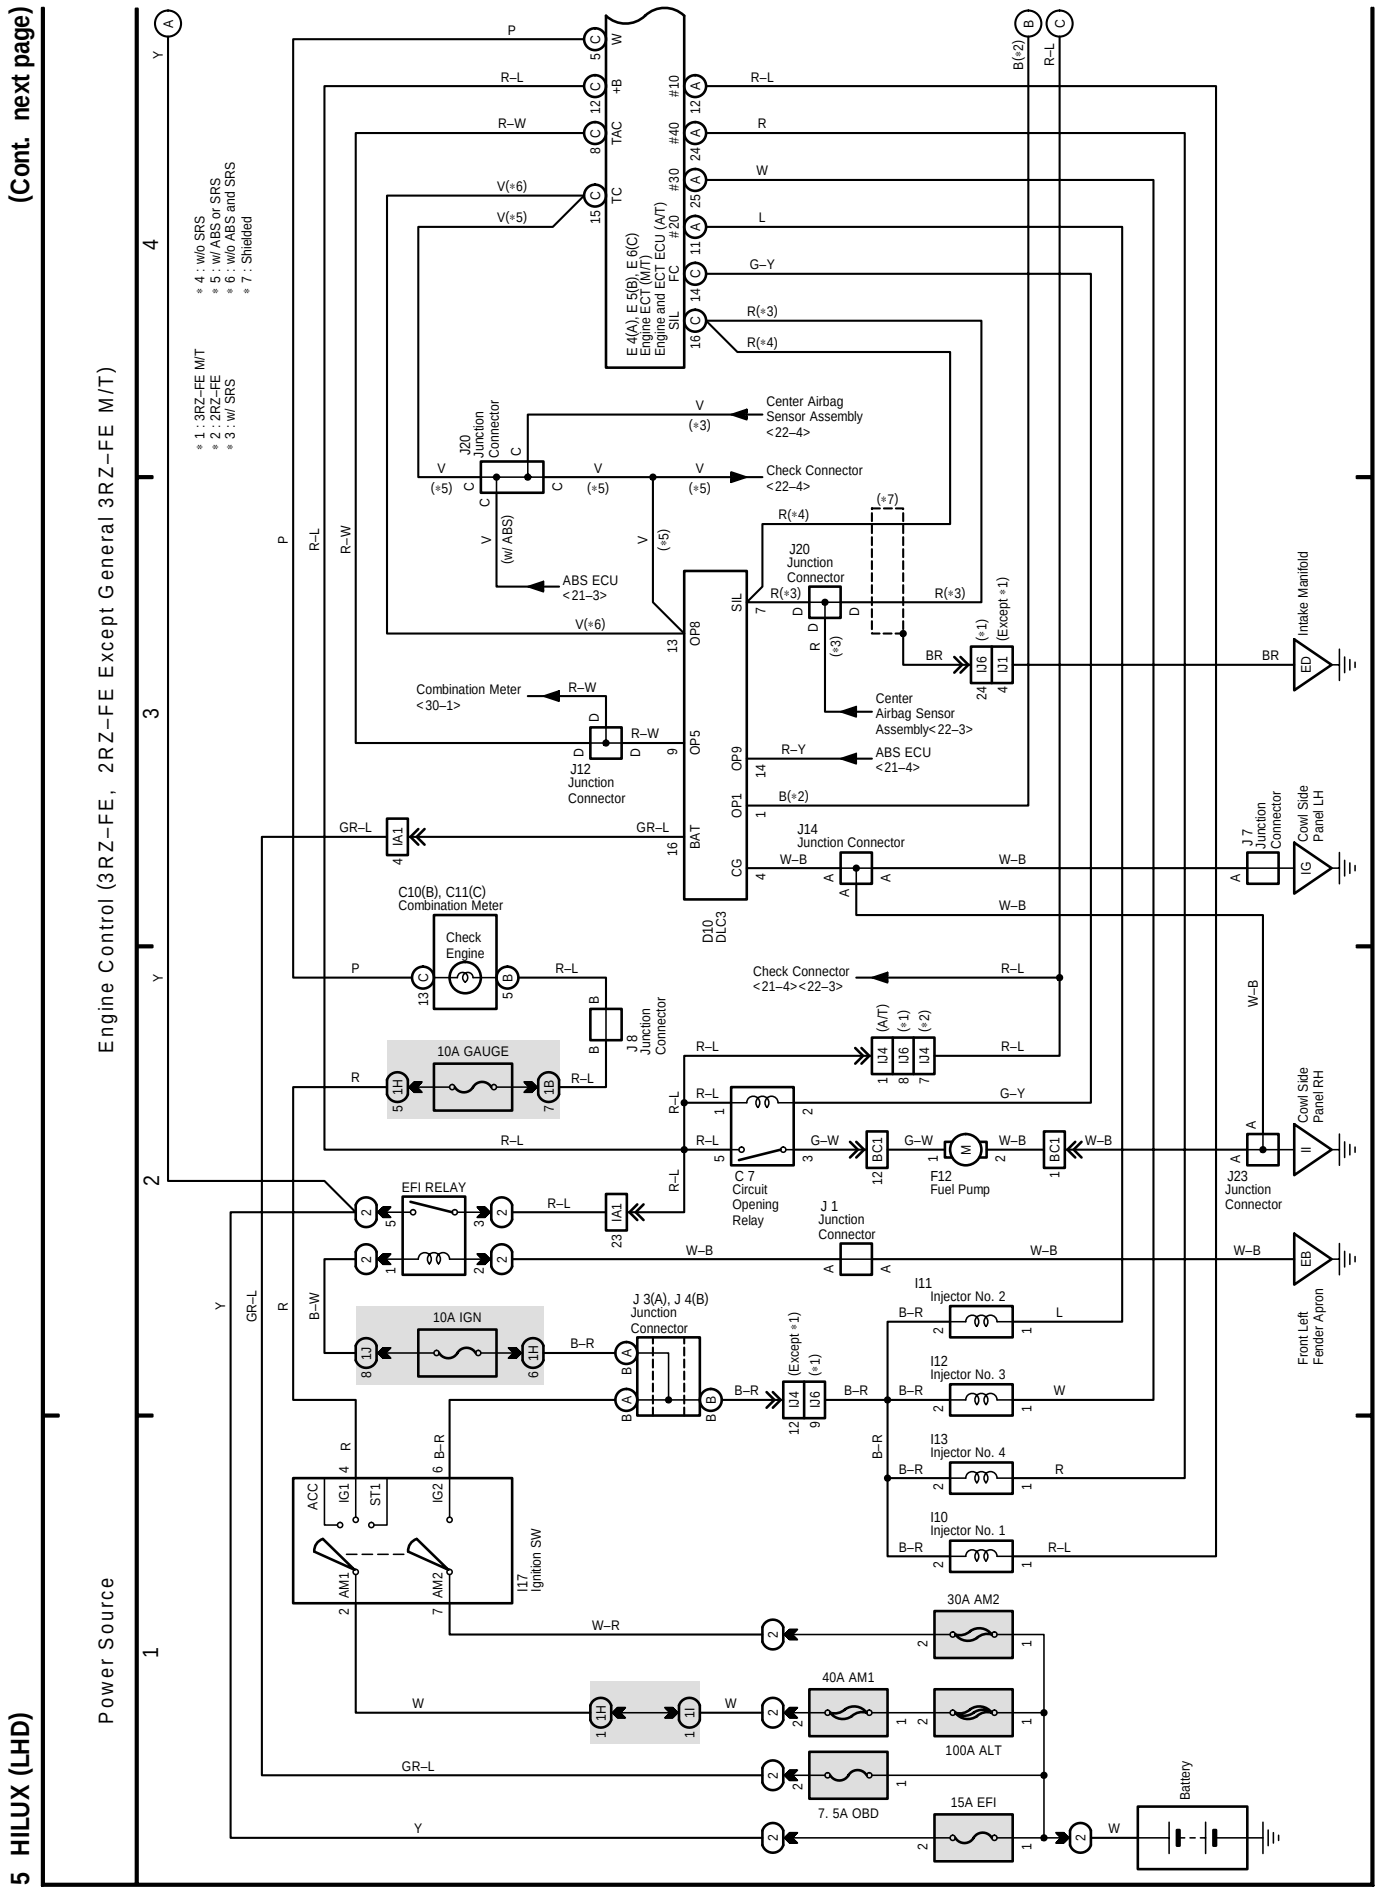

(Cont. next page)
5 HILUX (LHD)
Power Source
Engine Control (3RZ–FE, 2RZ–FE Except General 3RZ–FE M/T)
* 1 : 3RZ–FE M/T
* 2 : 2RZ–FE
* 3 : w/ SRS
* 4 : w/o SRS
* 5 : w/ ABS or SRS
* 6 : w/o ABS and SRS
* 7 : Shielded
E 4(A), E 5(B), E 6(C) Engine ECT (M/T) Engine and ECT ECU (A/T)
Center Airbag Sensor Assembly <22–4>
Check Connector <22–4>
ABS ECU <21–3>
Combination Meter <30–1>
J12 Junction Connector
J20 Junction Connector
Center Airbag Sensor Assembly<22–3>
ABS ECU <21–4>
J14 Junction Connector
C10(B), C11(C) Combination Meter
Check Engine
D10 DLC3
Check Connector <21–4><22–3>
J8 Junction Connector
10A GAUGE
EFI RELAY
C 7 Circuit Opening Relay
F12 Fuel Pump
J 1 Junction Connector
J23 Junction Connector
J7 Junction Connector
Cowl Side Panel LH
Cowl Side Panel RH
Intake Manifold
Front Left Fender Apron
10A IGN
J 3(A), J 4(B) Junction Connector
I11 Injector No. 2
I12 Injector No. 3
I13 Injector No. 4
I10 Injector No. 1
I17 Ignition SW
30A AM2
40A AM1
100A ALT
7. 5A OBD
15A EFI
Battery

5 HILUX (LHD) (Cont' d)

