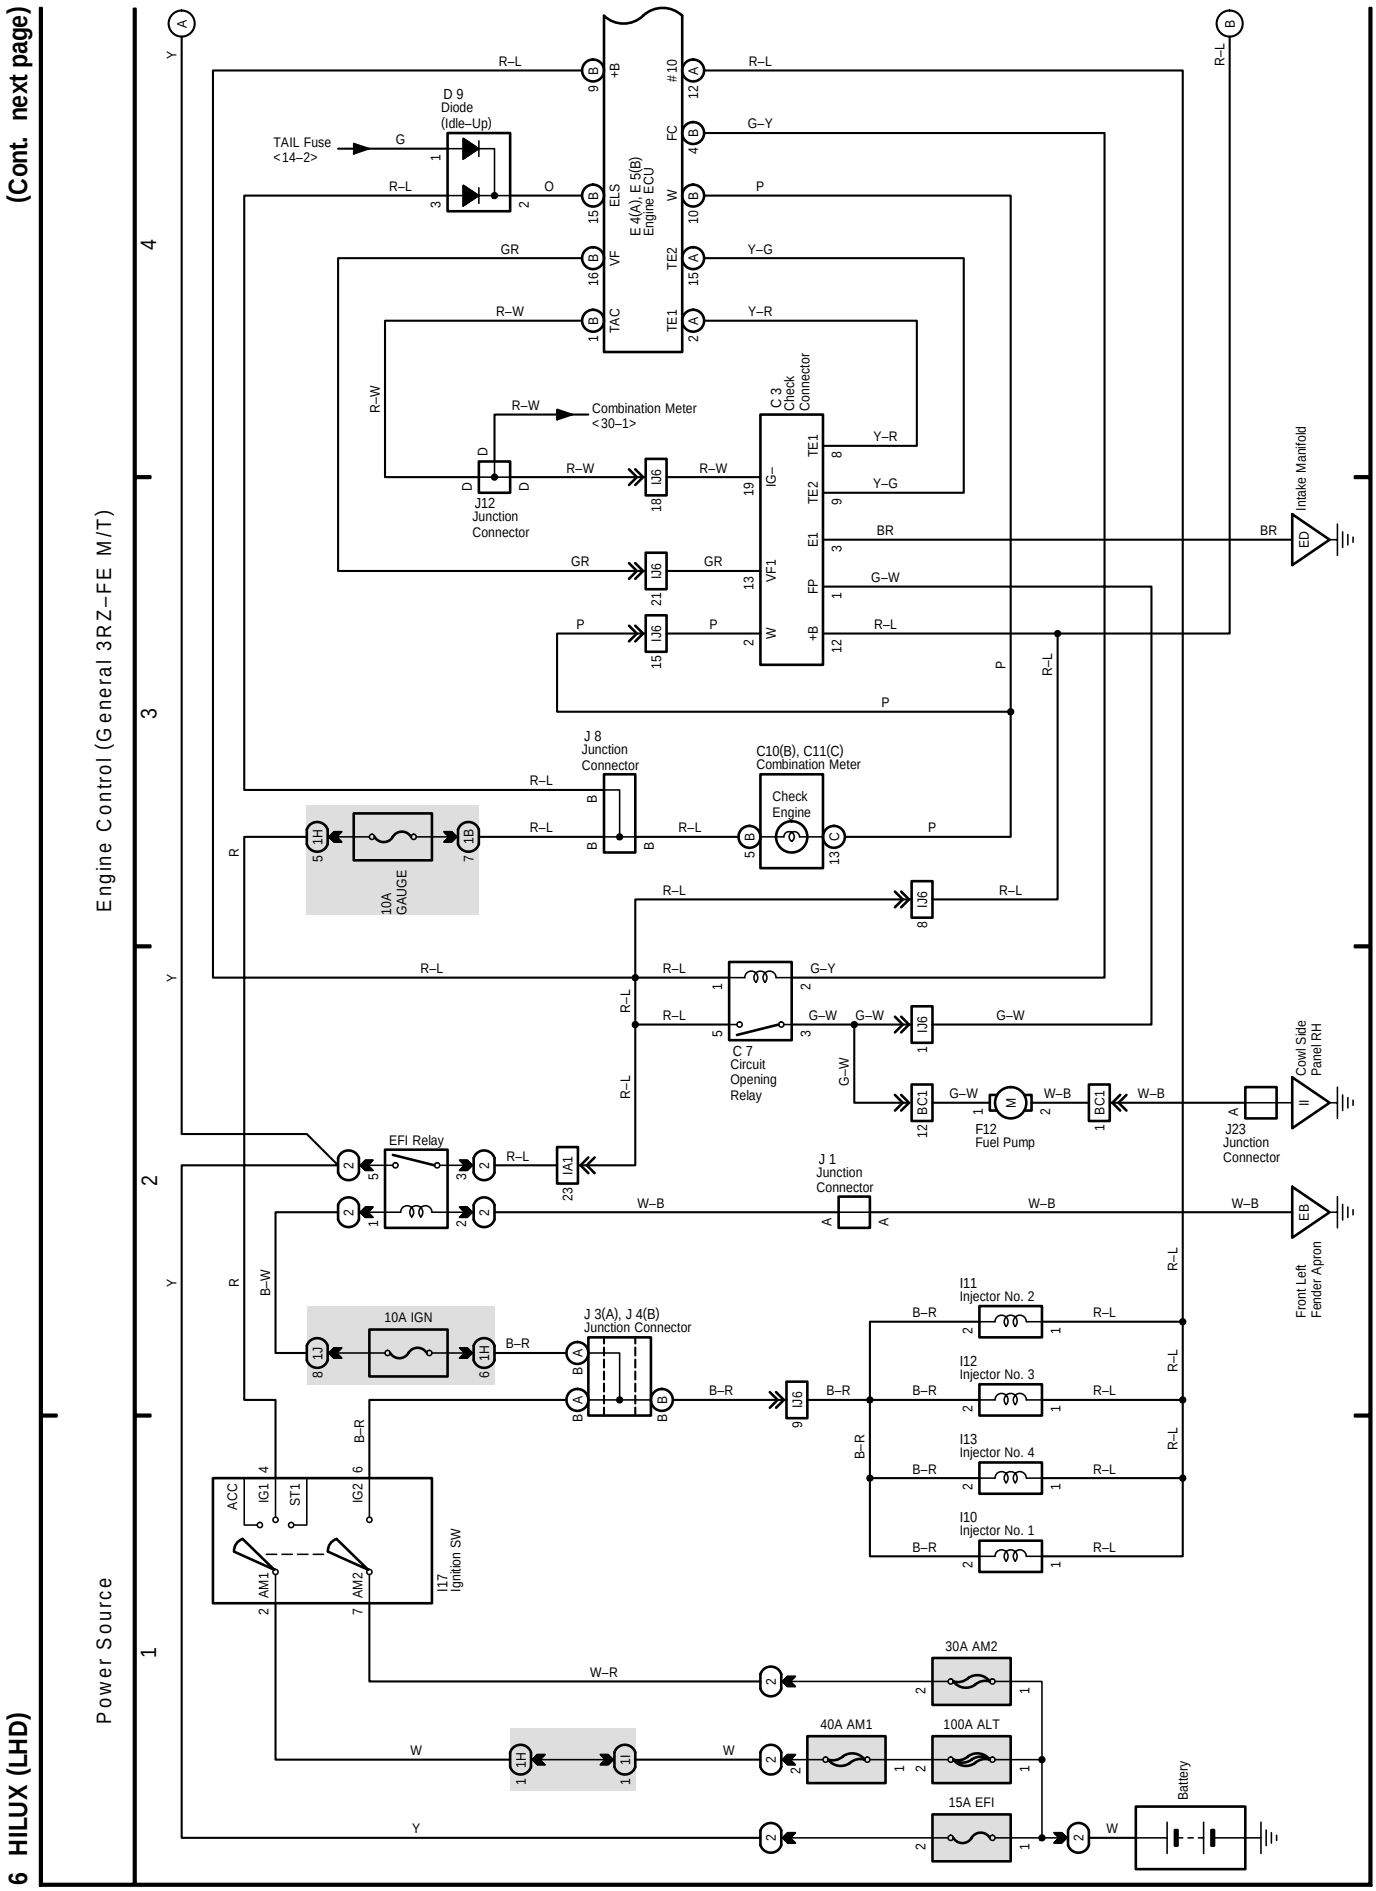

(Cont. next page)
6 HILUX (LHD)
Power Source
Engine Control (General 3RZ–FE M/T)
D 9
Diode
(Idle–Up)
TAIL Fuse
<14–2>
E4(A), E 5(B)
Engine ECU
C 3
Check
Connector
Combination Meter
<30–1>
J12
Junction
Connector
Intake Manifold
J 8
Junction
Connector
C10(B), C11(C)
Combination Meter
Check
Engine
10A
GAUGE
C 7
Circuit
Opening
Relay
F12
Fuel Pump
Cowl Side
Panel RH
J23
Junction
Connector
EFI Relay
J 1
Junction
Connector
Front Left
Fender Apron
10A IGN
J 3(A), J 4(B)
Junction Connector
I11
Injector No. 2
I12
Injector No. 3
I13
Injector No. 4
I10
Injector No. 1
I17
Ignition SW
30A AM2
40A AM1
100A ALT
15A EFI
Battery

6 HILUX (LHD) (Cont' d)

