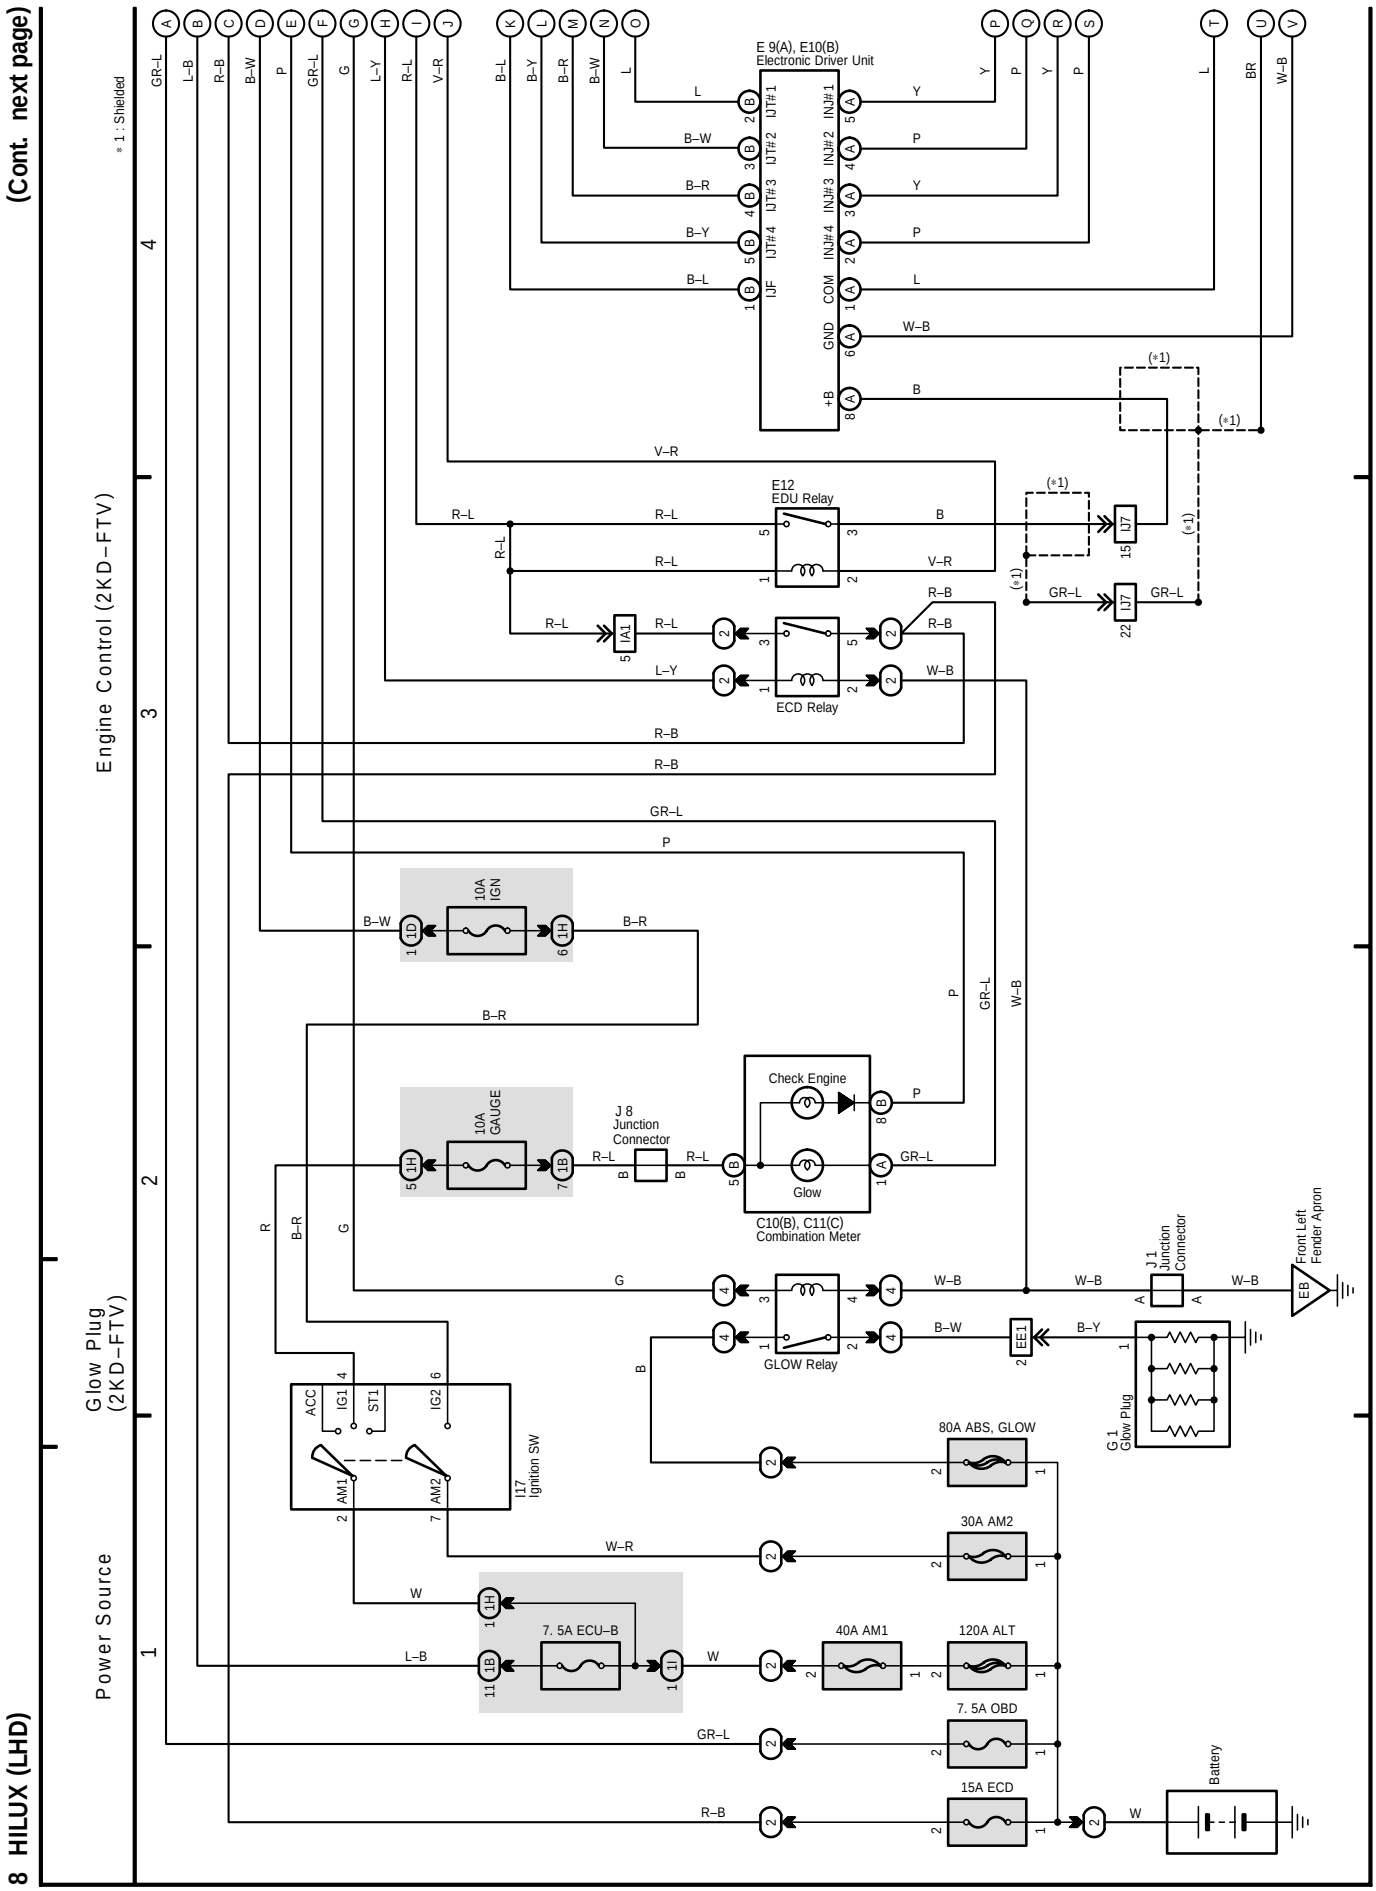
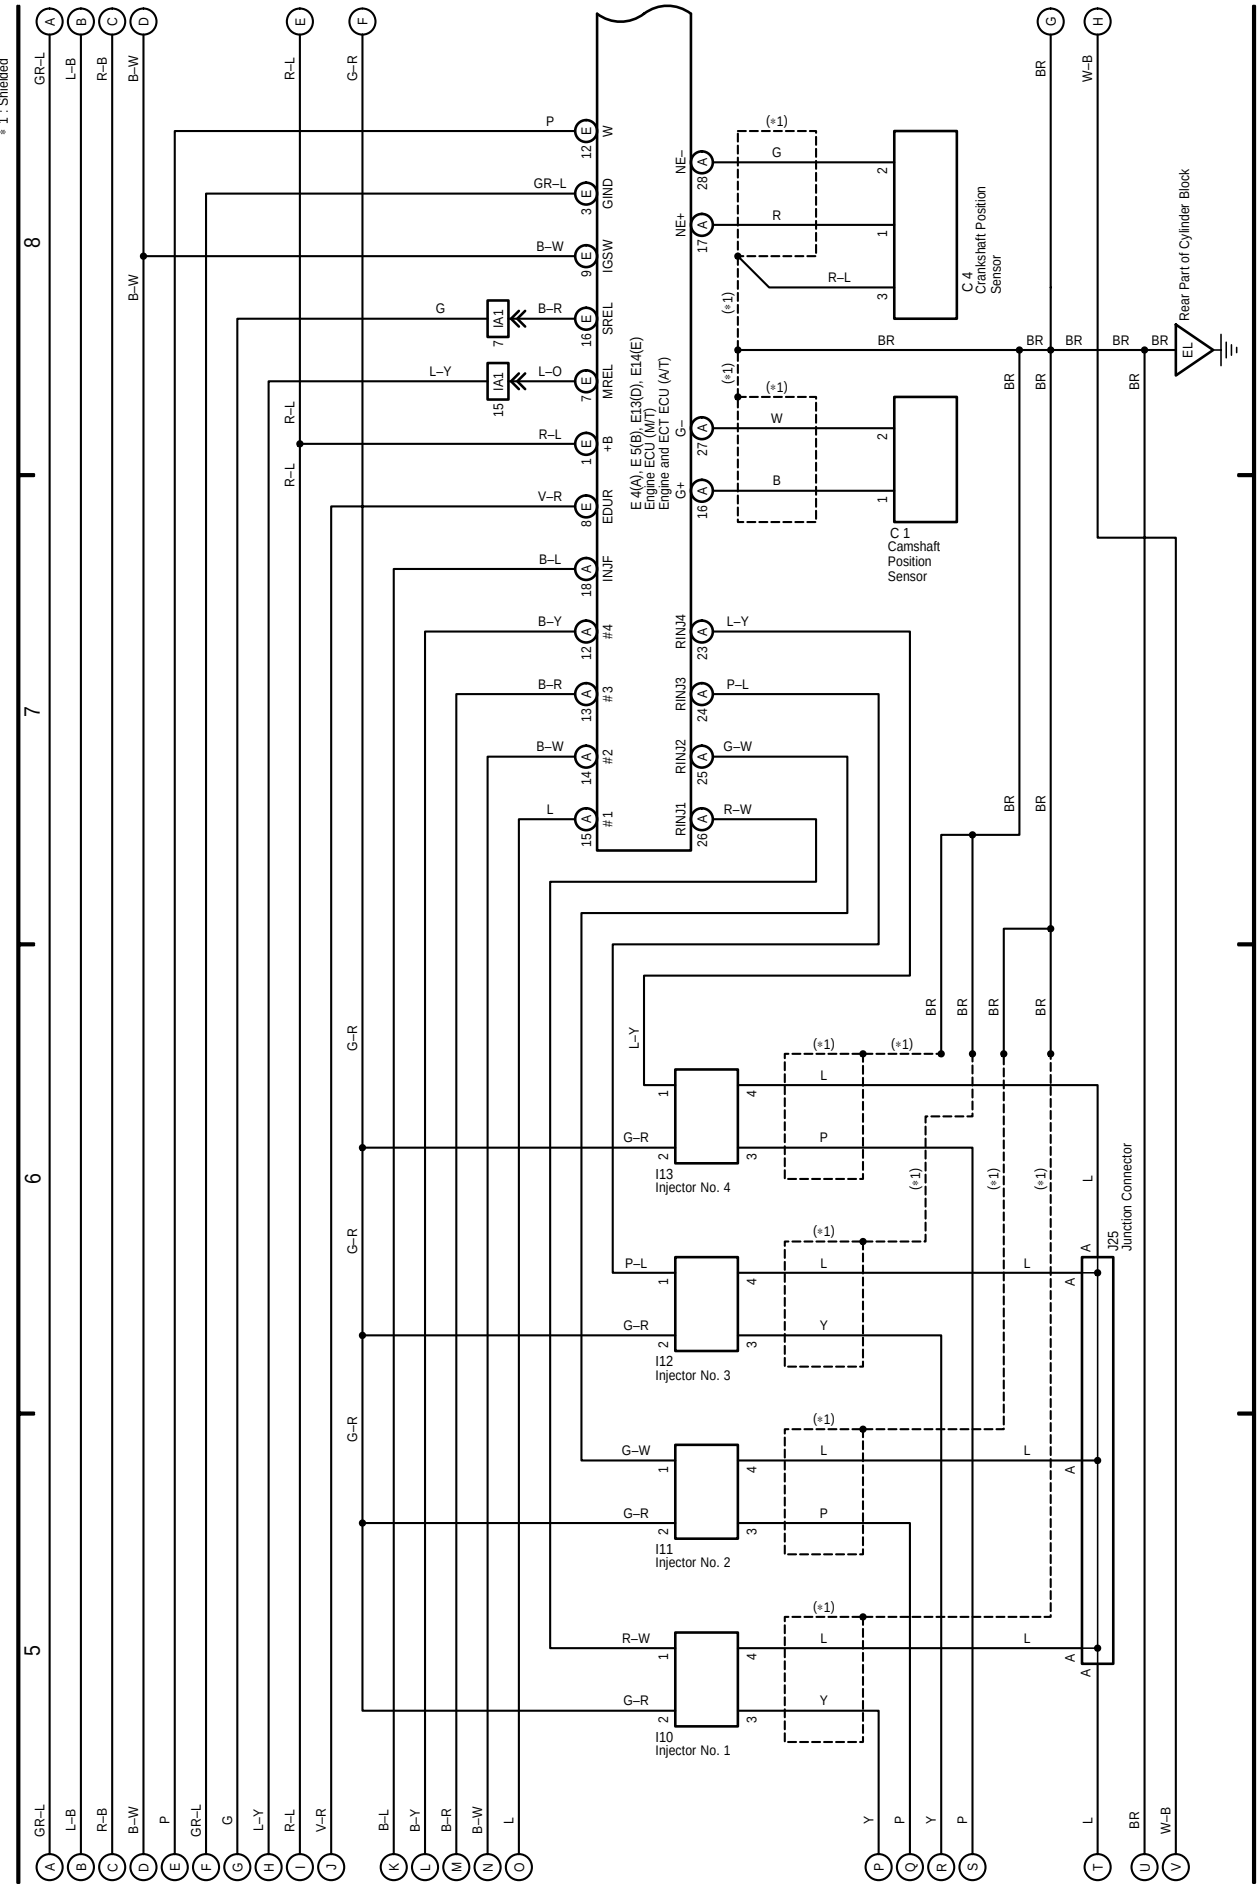
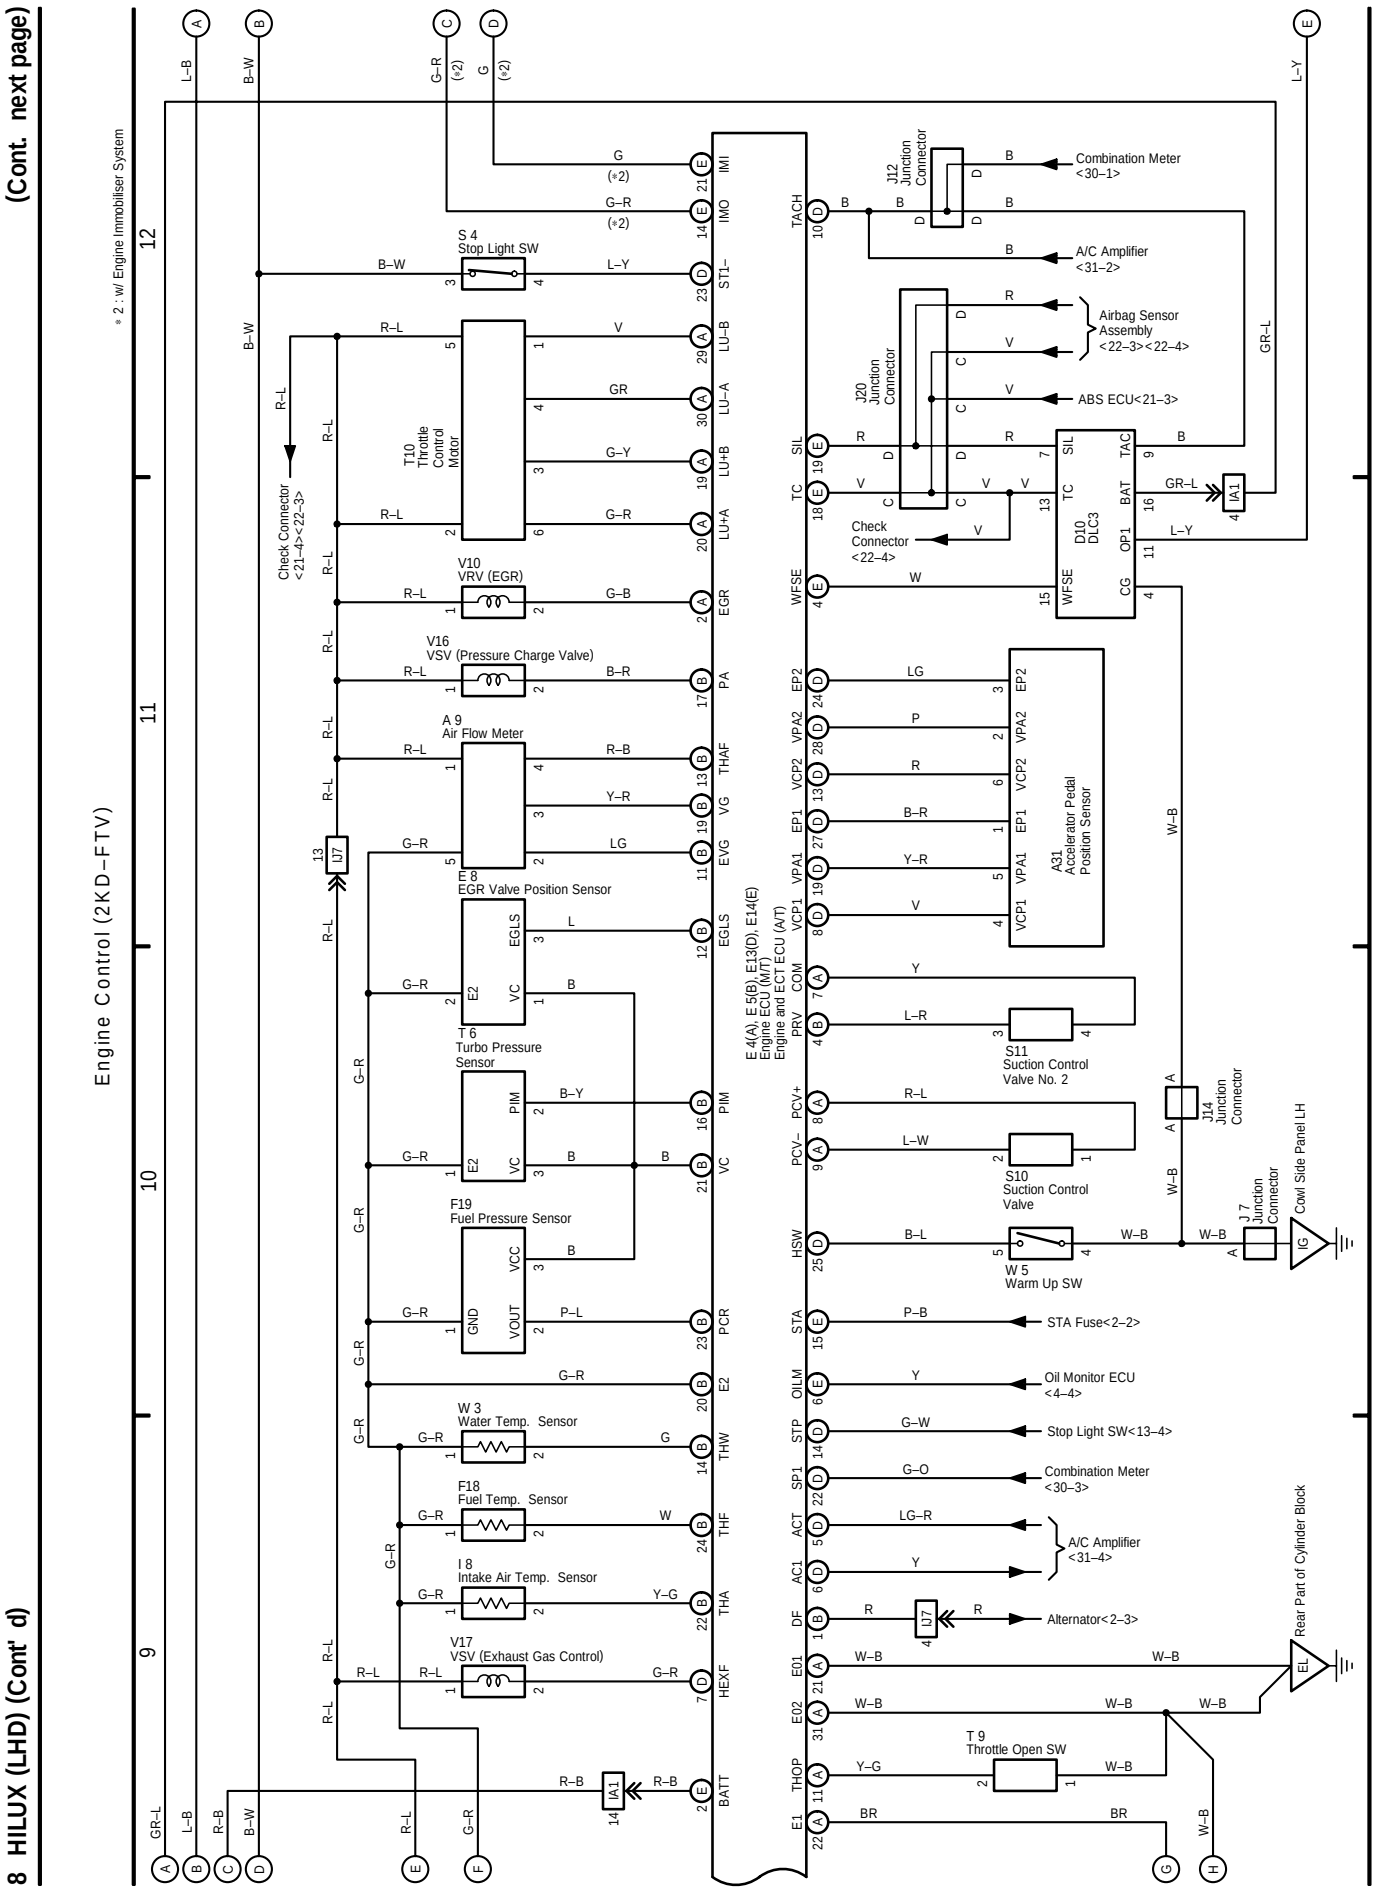

(Cont. next page)
8 HILUX (LHD)
Power Source
Glow Plug (2KD–FTV)
Engine Control (2KD–FTV)
* 1 : Shielded
E 9(A), E10(B) Electronic Driver Unit
E12 EDU Relay
ECD Relay
GLOW Relay
Check Engine
Glow
C10(B), C11(C) Combination Meter
J 8 Junction Connector
J1 Junction Connector
Front Left Fender Apron
G 1 Glow Plug
10A IGN
10A GAUGE
7. 5A ECU–B
80A ABS, GLOW
30A AM2
40A AM1
120A ALT
7. 5A OBD
15A ECD
Battery
i17 Ignition SW
ACC
IG1
ST1
IG2
AM1
AM2

8 HILUX (LHD) (Cont' d)

(Cont. next page)




8 HILUX (LHD) (Cont' d)
(Cont. next page)
Engine Control (2KD–FTV)
* 2 : w/ Engine Immobiliser System
S 4
Stop Light SW
T10
Throttle
Control
Motor
Check Connector
<21–4><22–3>
V10
VRV (EGR)
V16
VSV (Pressure Charge Valve)
A 9
Air Flow Meter
E 8
EGR Valve Position Sensor
T 6
Turbo Pressure
Sensor
F19
Fuel Pressure Sensor
W 3
Water Temp. Sensor
F18
Fuel Temp. Sensor
I 8
Intake Air Temp. Sensor
V17
VSV (Exhaust Gas Control)
E 4(A), E 5(B), E13(D), E14(E)
Engine ECU (M/T)
Engine and ECT ECU (A/T)
J12
Junction
Connector
Combination Meter
<30–1>
A/C Amplifier
<31–2>
J20
Junction
Connector
Airbag Sensor
Assembly
<22–3><22–4>
ABS ECU<21–3>
Check
Connector
<22–4>
D10
DLC3
A31
Accelerator Pedal
Position Sensor
S11
Suction Control
Valve No. 2
S10
Suction Control
Valve
J14
Junction
Connector
J 7
Junction
Connector
Cowl Side Panel LH
W 5
Warm Up SW
STA Fuse<2–2>
Oil Monitor ECU
<4–4>
Stop Light SW<13–4>
Combination Meter
<30–3>
A/C Amplifier
<31–4>
Alternator<2–3>
Rear Part of Cylinder Block
T 9
Throttle Open SW

8 HILUX (LHD) (Cont' d)

