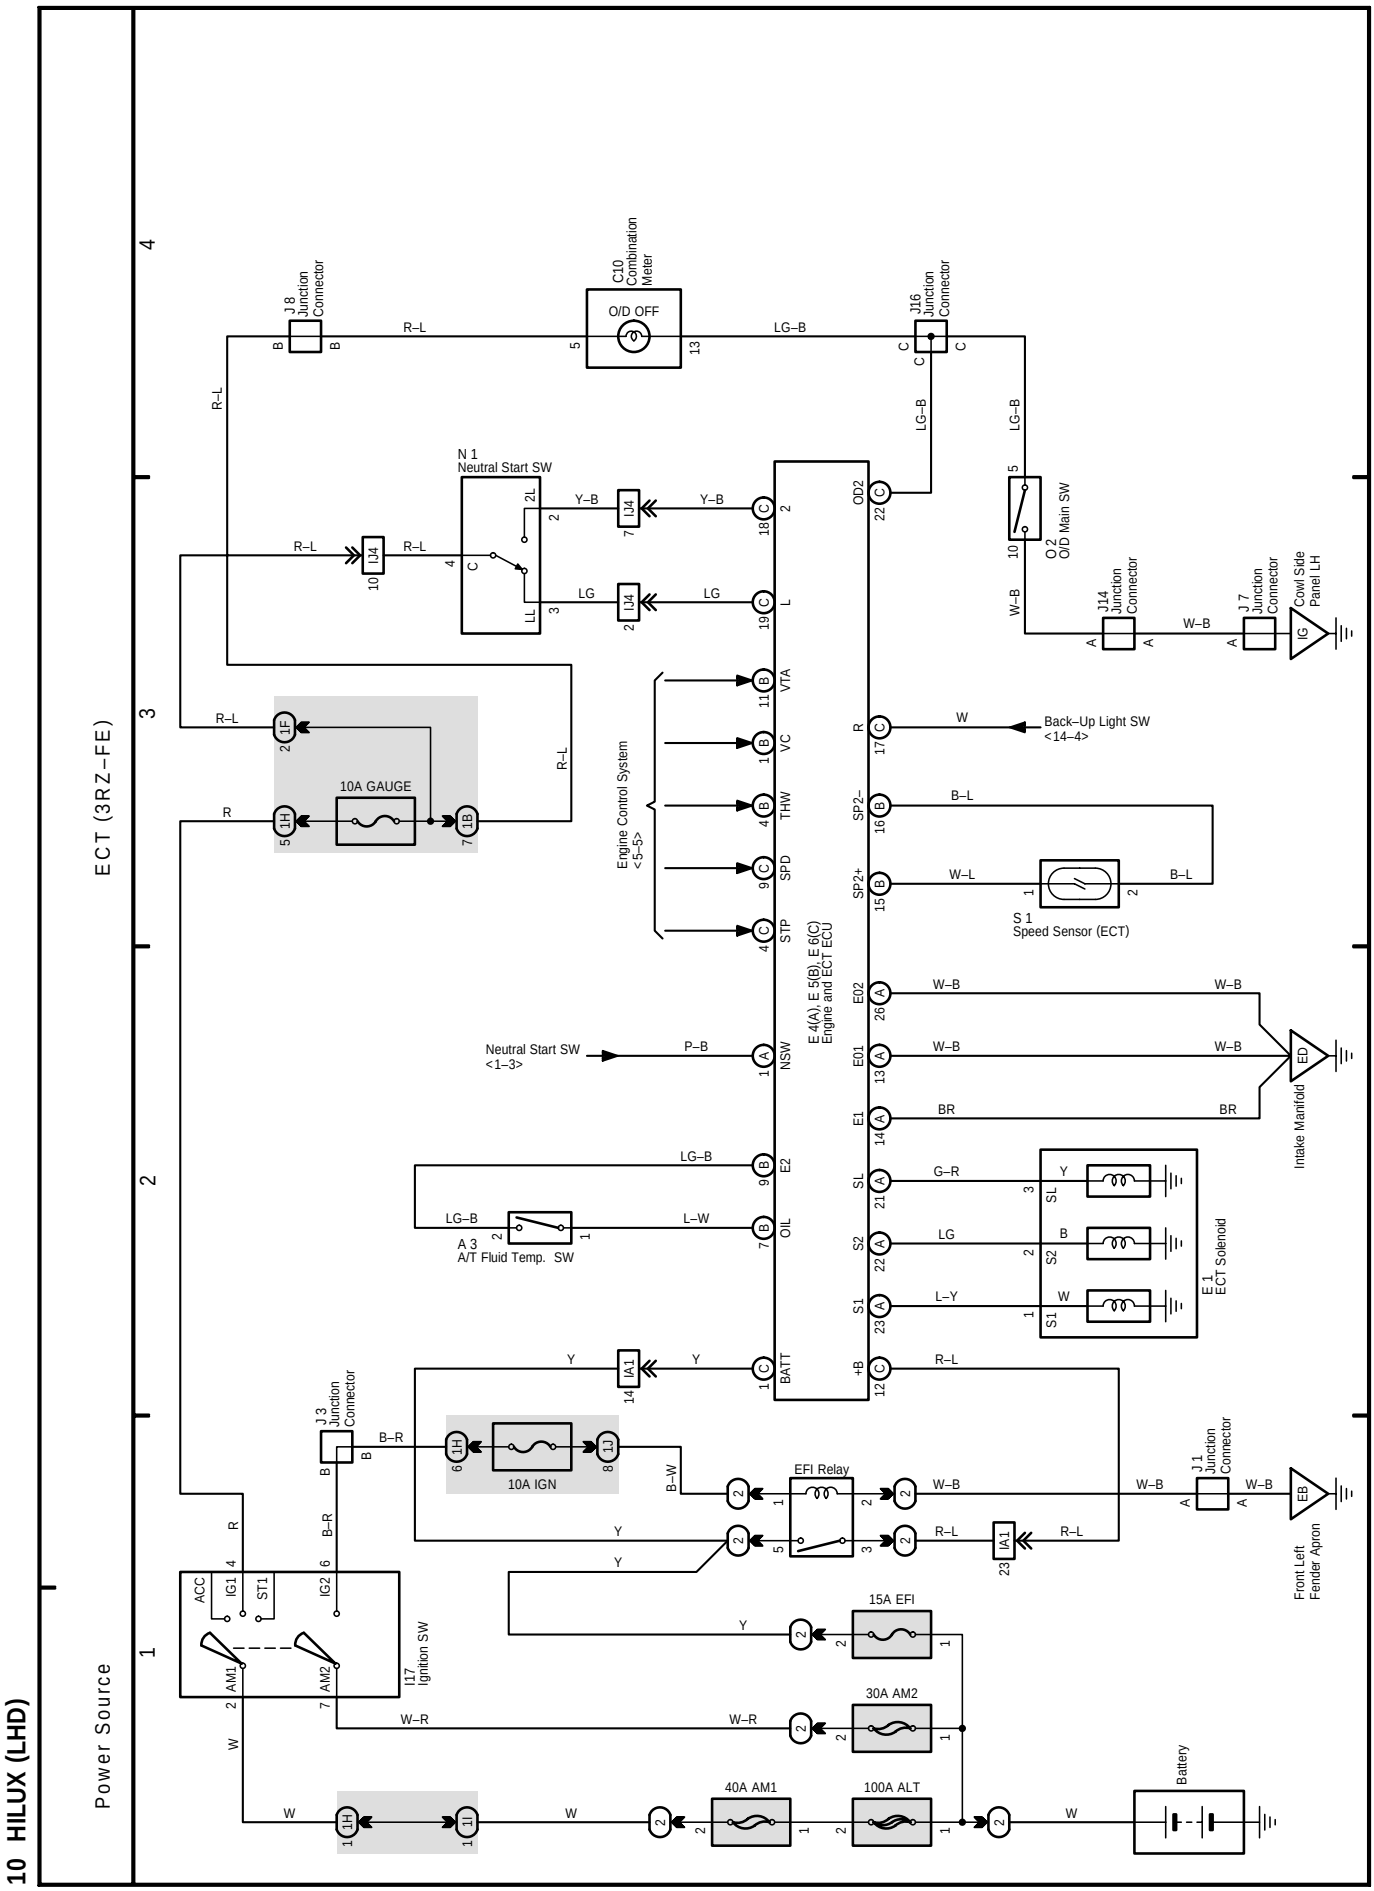

10 HILUX (LHD)
Power Source
ECT (3RZ–FE)
J8 Junction Connector
C10 Combination Meter
O/D OFF
J16 Junction Connector
N 1 Neutral Start SW
O 2 O/D Main SW
J14 Junction Connector
J7 Junction Connector
Cowl Side Panel LH
IG
10A GAUGE
Engine Control System <5–5>
Back–Up Light SW <14–4>
S 1 Speed Sensor (ECT)
E 4(A), E 5(B), E 6(C) Engine and ECT ECU
Neutral Start SW <1–3>
A 3 A/T Fluid Temp. SW
E 1 ECT Solenoid
Intake Manifold
ED
J3 Junction Connector
10A IGN
EFI Relay
J1 Junction Connector
EB
Front Left Fender Apron
I17 Ignition SW
ACC
IG1
ST1
IG2
AM1
AM2
15A EFI
30A AM2
40A AM1
100A ALT
Battery