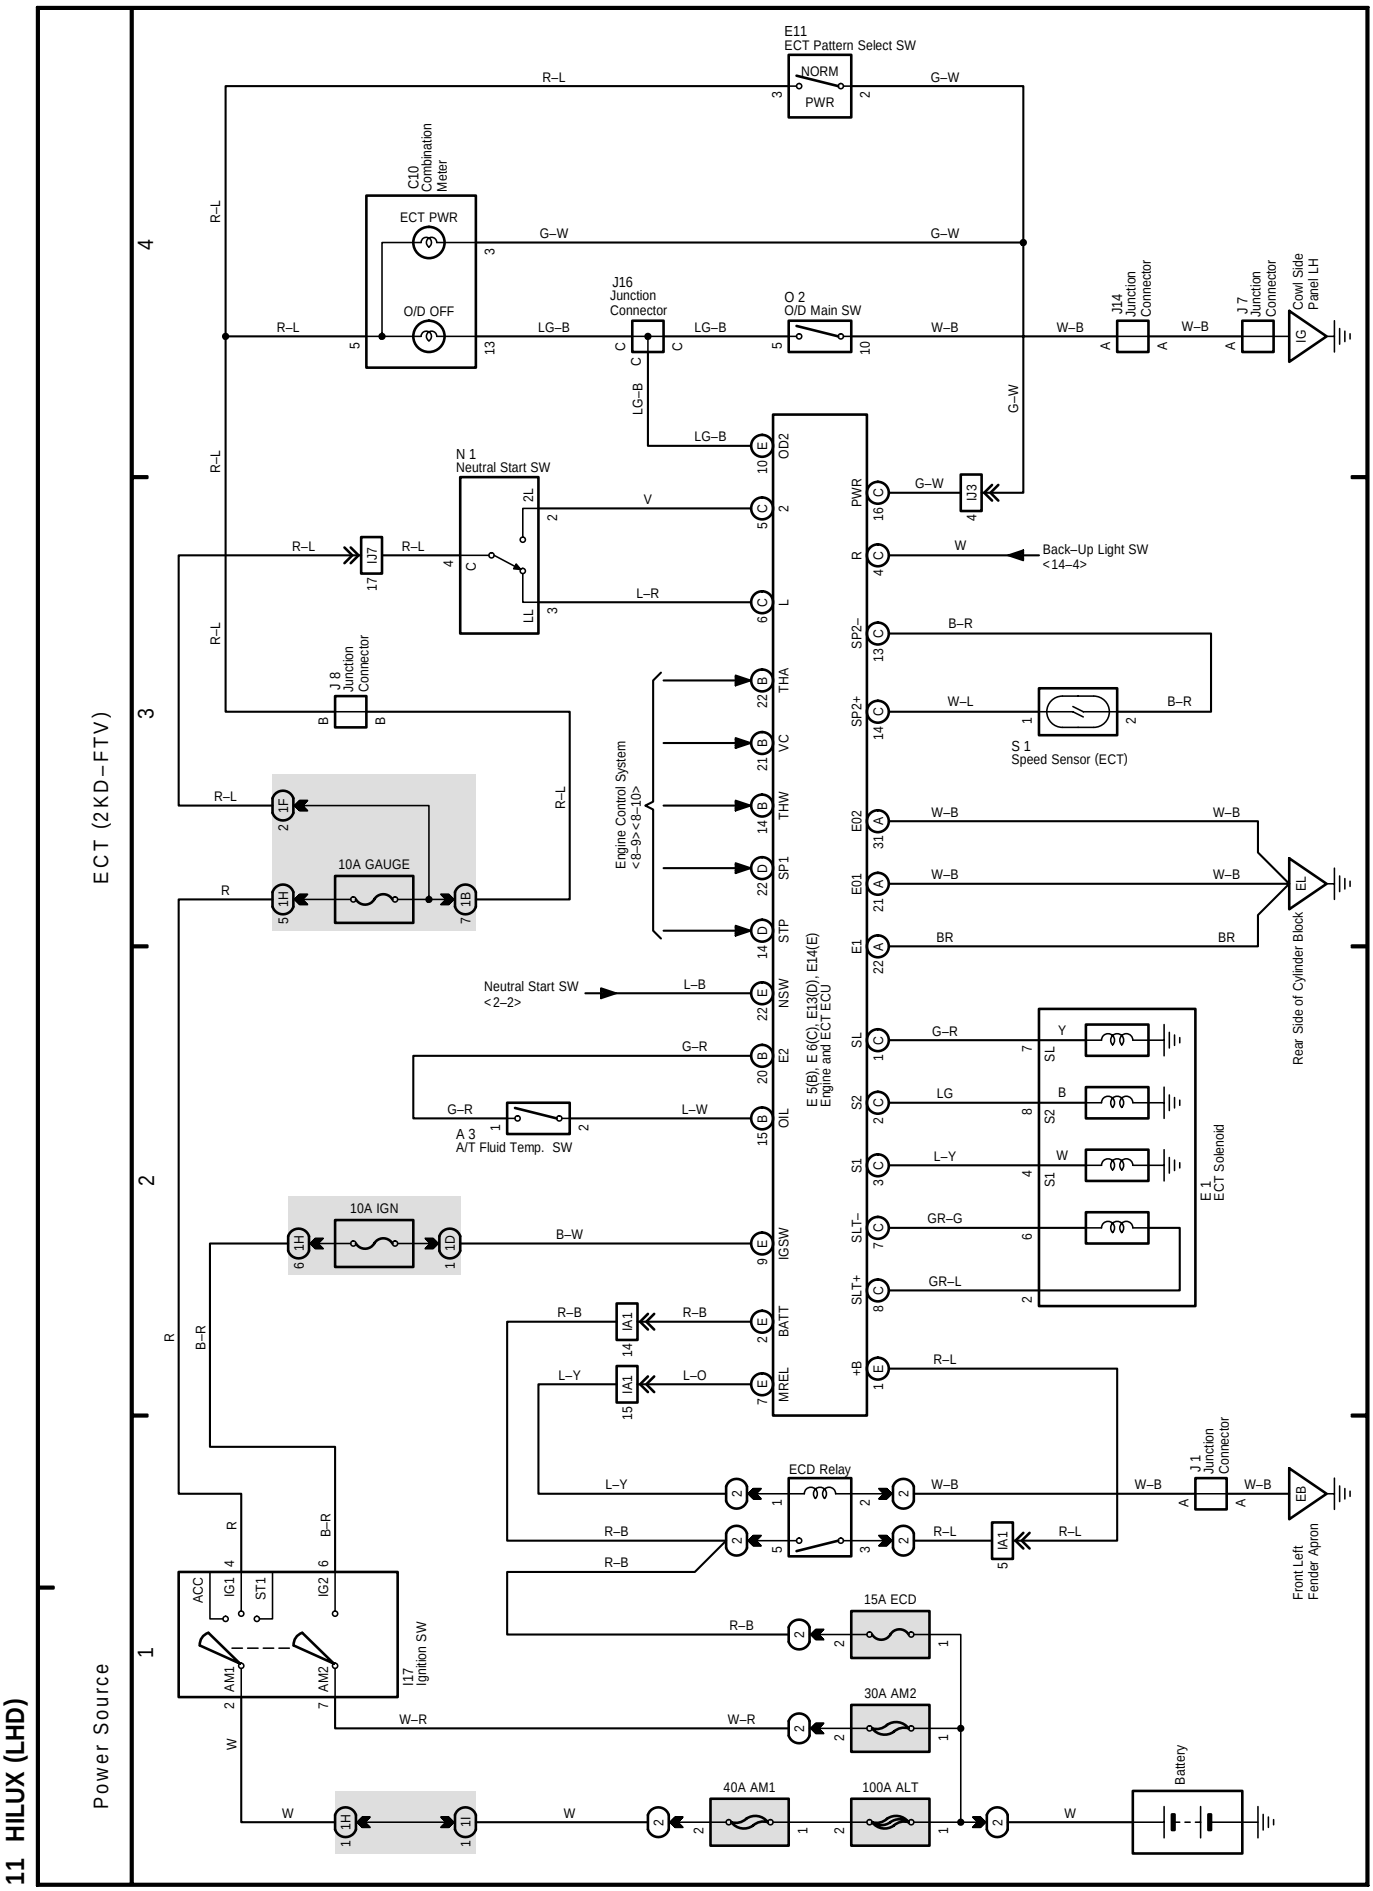

11 HILUX (LHD)
ECT (2KD–FTV)
Power Source
E11
ECT Pattern Select SW
NORM
PWR
C10
Combination
Meter
ECT PWR
O/D OFF
J16
Junction
Connector
O 2
O/D Main SW
J14
Junction
Connector
J 7
Junction
Connector
Cowl Side
Panel LH
N 1
Neutral Start SW
J37
J 8
Junction
Connector
Back–Up Light SW
<14–4>
S 1
Speed Sensor (ECT)
Engine Control System
<8–9><8–10>
10A GAUGE
Neutral Start SW
<2–2>
A 3
A/T Fluid Temp. SW
E 5(B), E 6(C), E13(D), E14(E)
Engine and ECT ECU
E 1
ECT Solenoid
Rear Side of Cylinder Block
10A IGN
ECD Relay
J 1
Junction
Connector
Front Left
Fender Apron
L17
Ignition SW
15A ECD
30A AM2
40A AM1
100A ALT
Battery