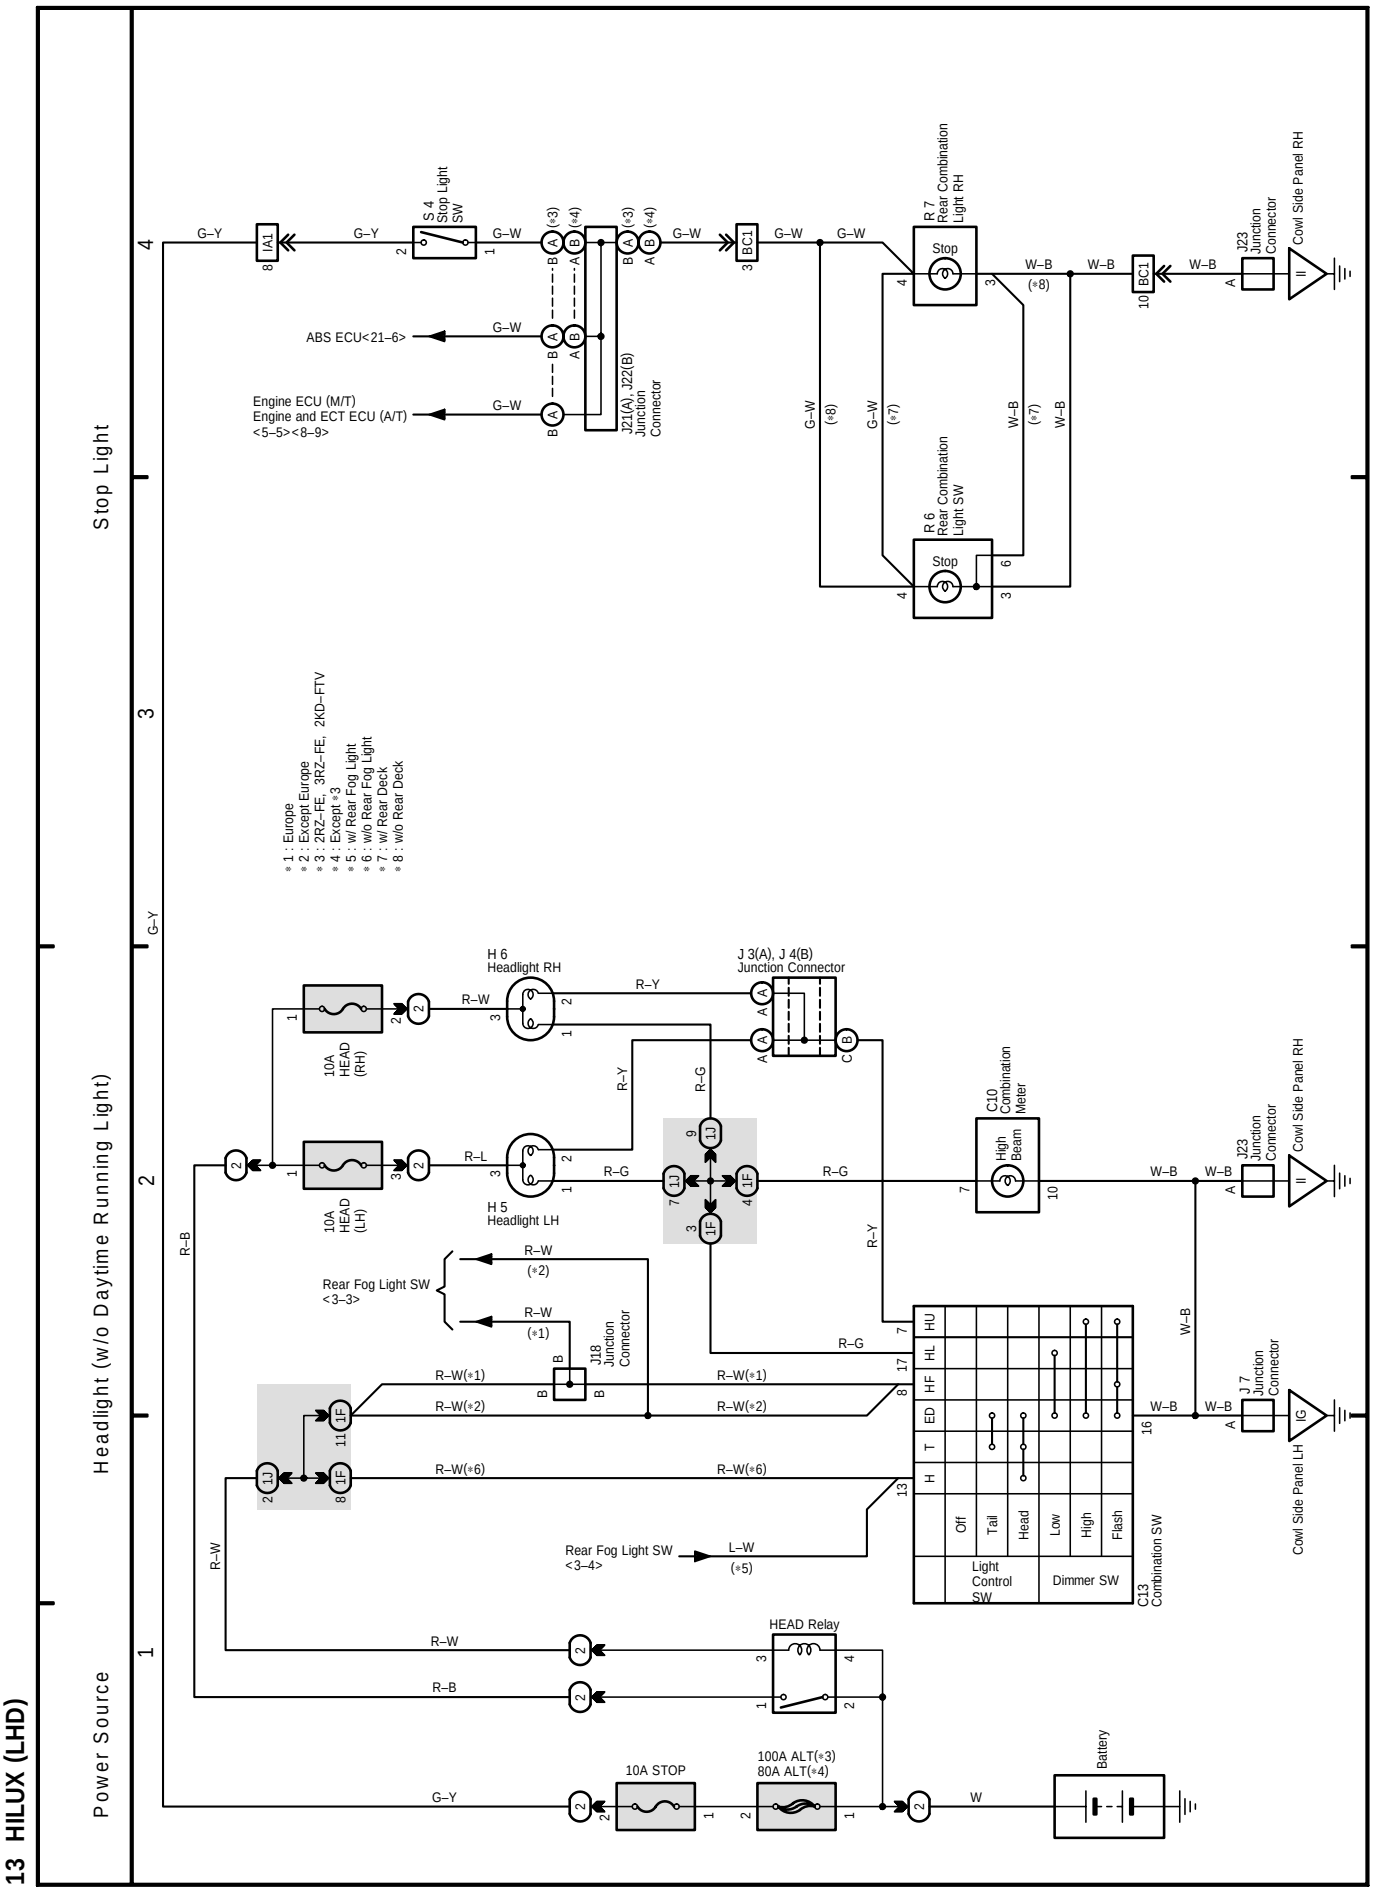

13 HILUX (LHD)
Power Source
Headlight (w/o Daytime Running Light)
Stop Light
1
2
3
4
G–Y
S 4 Stop Light SW
IA1
BC1
R 7 Rear Combination Light RH
R 6 Rear Combination Light SW
Stop
J23 Junction Connector
Cowl Side Panel RH
ABS ECU<21–6>
Engine ECU (M/T)
Engine and ECT ECU (A/T)
<5–5><8–9>
J21(A), J22(B) Junction Connector
G–W
W–B
(*8)
(*7)
* 1 : Europe
* 2 : Except Europe
* 3 : 2RZ–FE, 3RZ–FE, 2KD–FTV
* 4 : Except *3
* 5 : w/ Rear Fog Light
* 6 : w/o Rear Fog Light
* 7 : w/ Rear Deck
* 8 : w/o Rear Deck
H 6 Headlight RH
H 5 Headlight LH
J 3(A), J 4(B) Junction Connector
10A HEAD (RH)
10A HEAD (LH)
R–W
R–Y
R–L
R–G
R–B
C10 Combination Meter
High Beam
Rear Fog Light SW <3–3>
Rear Fog Light SW <3–4>
J18 Junction Connector
J7 Junction Connector
Cowl Side Panel LH
R–W(*1)
R–W(*2)
R–W(*6)
L–W
C13 Combination SW
Light Control SW
Dimmer SW
Off
Tail
Head
Low
High
Flash
HEAD Relay
10A STOP
100A ALT(*3)
80A ALT(*4)
Battery
W