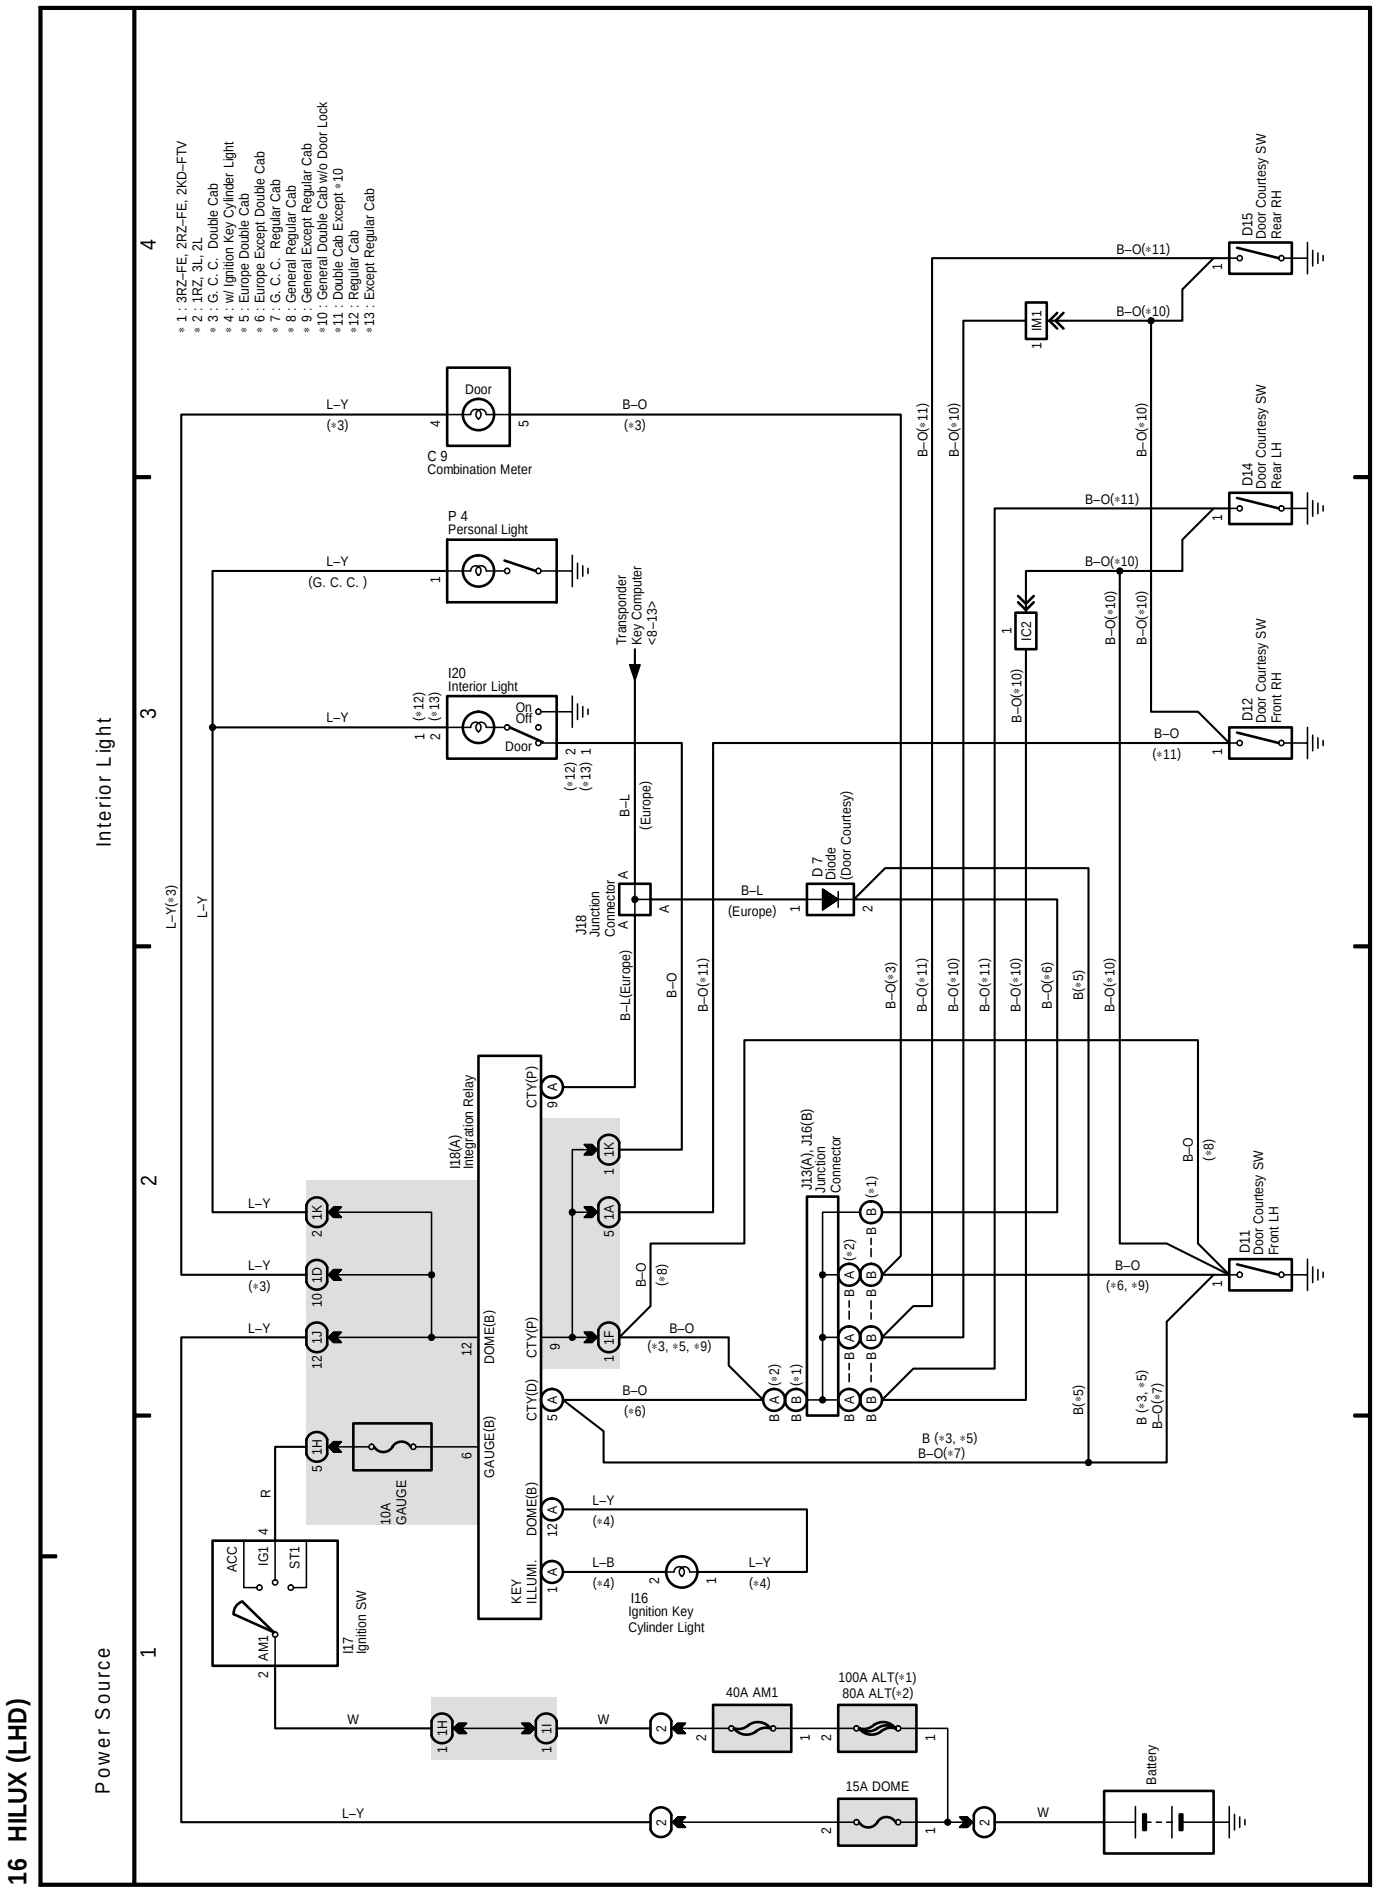

16 HILUX (LHD)
Power Source
Interior Light
1
2
3
4
* 1 : 3RZ–FE, 2RZ–FE, 2KD–FTV
* 2 : 1RZ, 3L, 2L
* 3 : G. C. C. Double Cab
* 4 : w/ Ignition Key Cylinder Light
* 5 : Europe Double Cab
* 6 : Europe Except Double Cab
* 7 : G. C. C. Regular Cab
* 8 : General Regular Cab
* 9 : General Except Regular Cab
* 10 : General Double Cab w/o Door Lock
* 11 : Double Cab Except * 10
* 12 : Regular Cab
* 13 : Except Regular Cab
C 9
Combination Meter
Door
P 4
Personal Light
I20
Interior Light
On
Off
Door
Transponder Key Computer <8–13>
J18
Junction Connector
D 7
Diode
(Door Courtesy)
I18(A)
Integration Relay
DOME(B)
GAUGE(B)
CTY(P)
CTY(D)
KEY ILLUMI.
10A GAUGE
J13(A), J16(B)
Junction Connector
I17
Ignition SW
ACC
IG1
ST1
AM1
I16
Ignition Key Cylinder Light
40A AM1
100A ALT(*1)
80A ALT(*2)
15A DOME
Battery
D15
Door Courtesy SW
Rear RH
D14
Door Courtesy SW
Rear LH
D12
Door Courtesy SW
Front RH
D11
Door Courtesy SW
Front LH
IM1
IC2
L–Y
B–O
B–L
B–L(Europe)
(Europe)
R
W
L–B
B(*5)
B (*3, *5)
B–O(*7)
B (*3, *5)
B–O(*7)