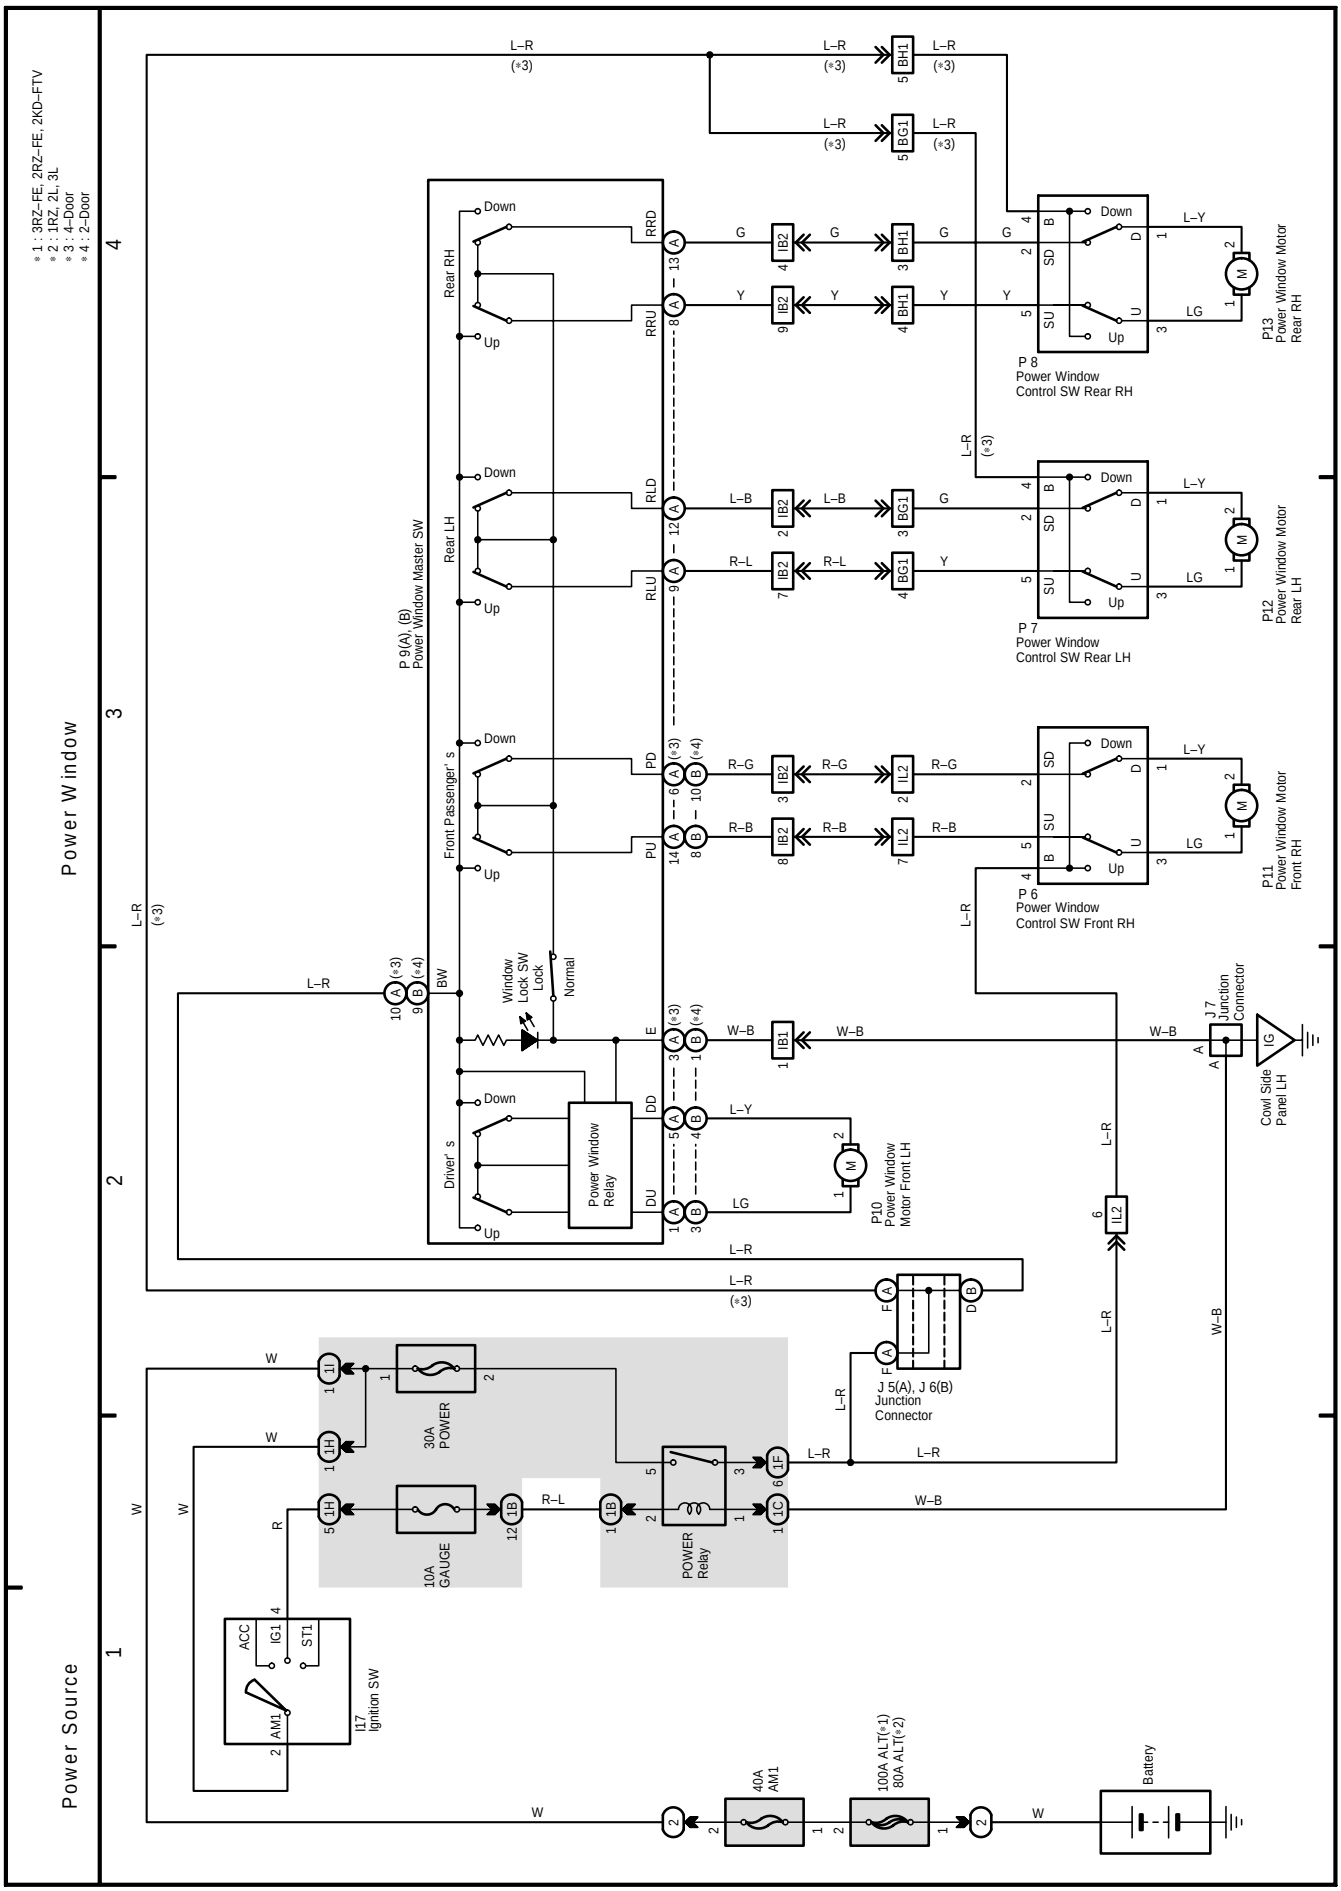

Power Window
Power Source
Rear RH
Rear LH
Front Passenger's
Driver's
Down
Up
P 9(A), (B)
Power Window Master SW
P 8
Power Window
Control SW Rear RH
P 7
Power Window
Control SW Rear LH
P 6
Power Window
Control SW Front RH
P13
Power Window Motor
Rear RH
P12
Power Window Motor
Rear LH
P11
Power Window Motor
Front RH
P10
Power Window
Motor Front LH
Window
Lock SW
Lock
Normal
Power Window
Relay
J 7
Junction
Connector
Cowl Side
Panel LH
J 5(A), J 6(B)
Junction
Connector
30A
POWER
10A
GAUGE
POWER
Relay
ACC
IG1
ST1
AM1
I17
Ignition SW
40A
AM1
100A ALT(*1)
80A ALT(*2)
Battery
L–R
W–B
R–L
W
R
G
Y
L–B
R–L
R–G
R–B
L–Y
LG
* 1 : 3RZ–FE, 2RZ–FE, 2KD–FTV
* 2 : 1RZ, 2L, 3L
* 3 : 4–Door
* 4 : 2–Door