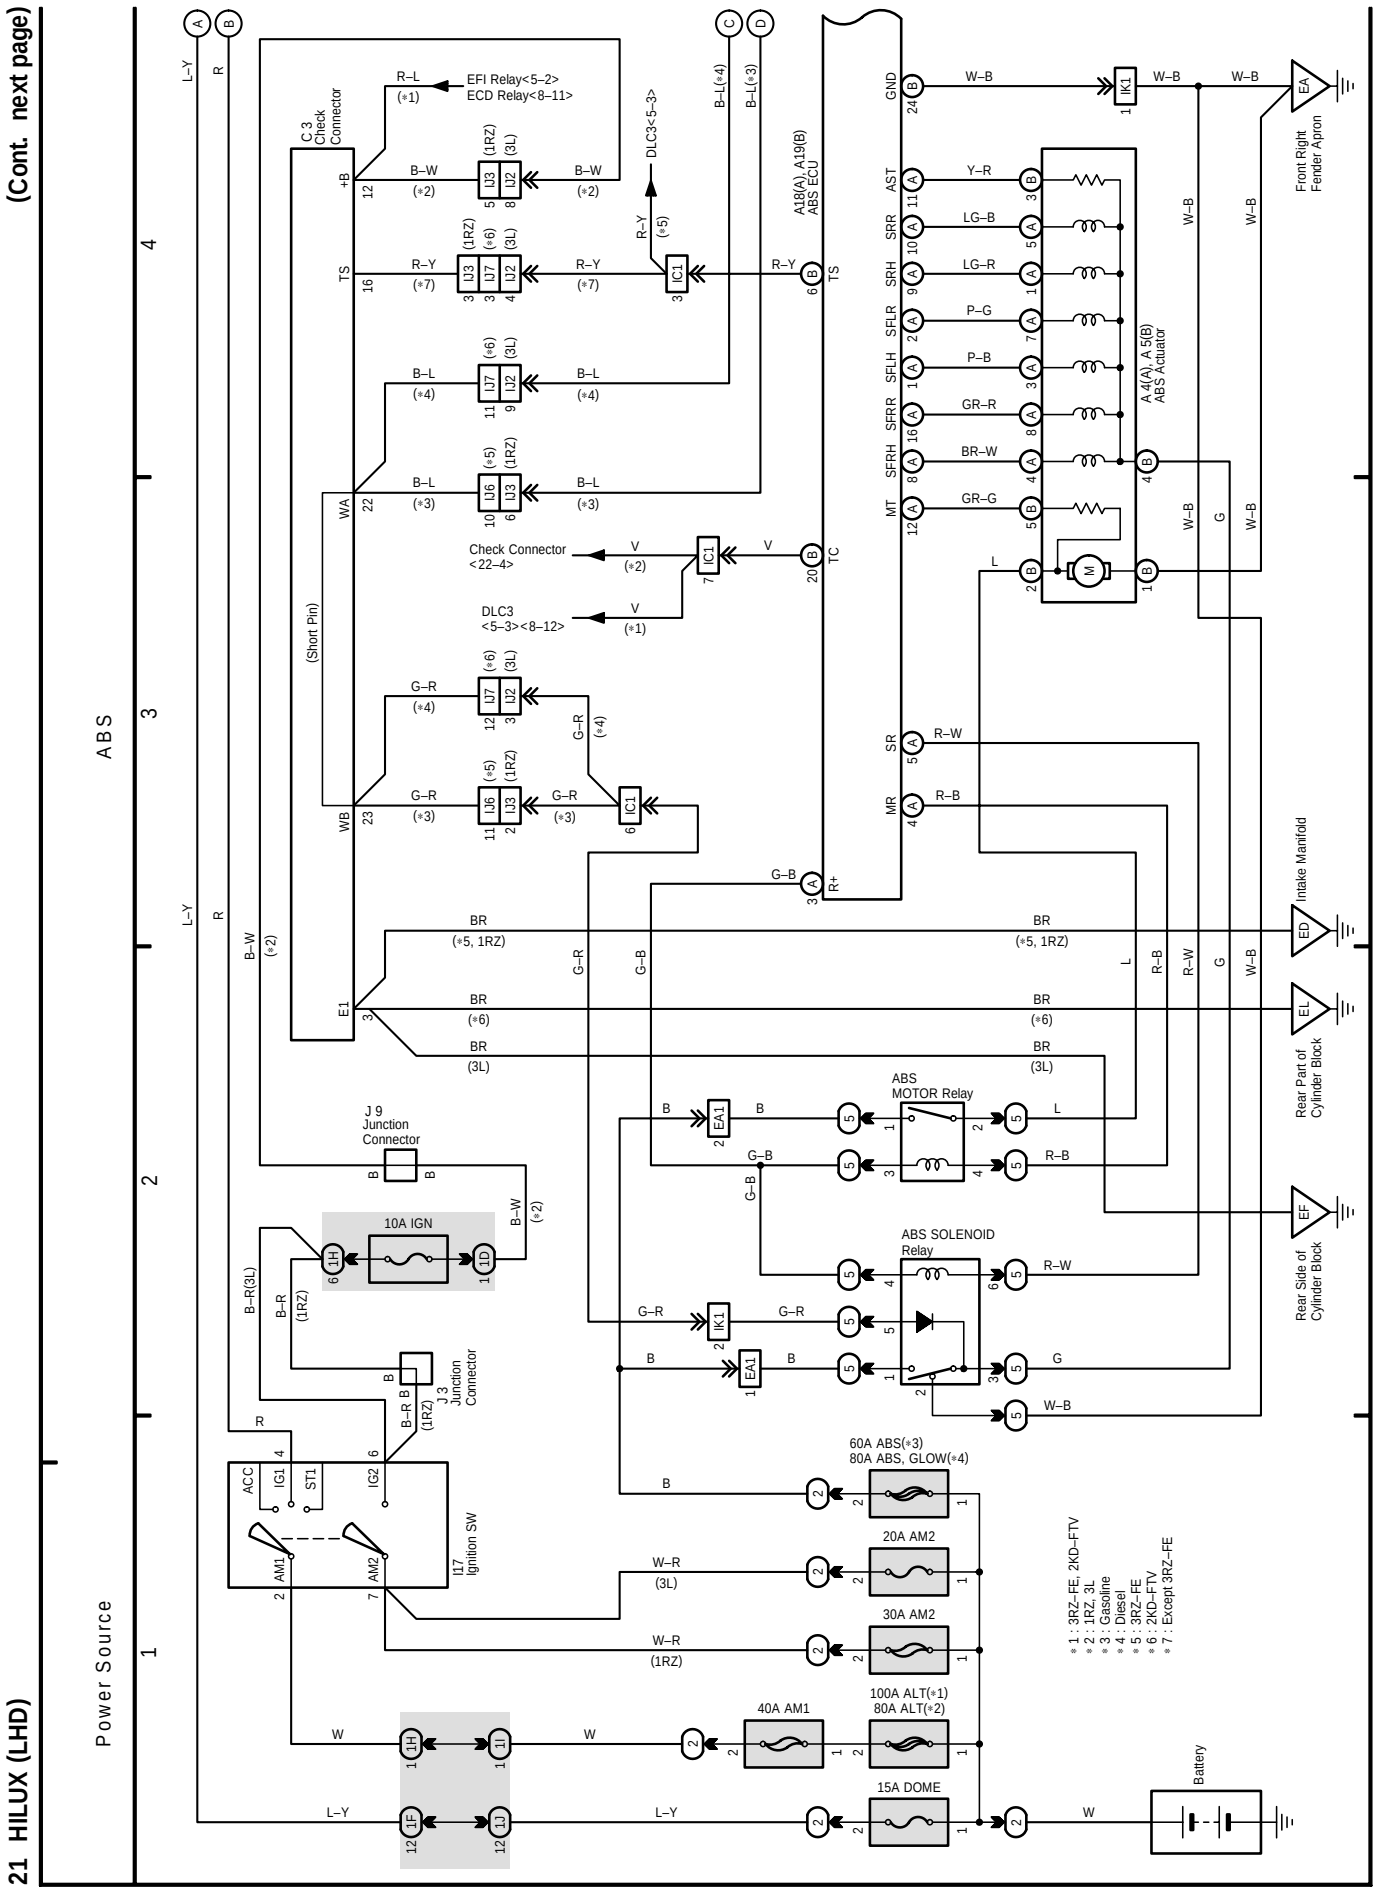

(Cont. next page)
21 HILUX (LHD)
Power Source
ABS
1
2
3
4
A
B
C
D
C 3 Check Connector
EFI Relay<5–2>
ECD Relay<8–11>
DLC3<5–3>
A18(A), A19(B) ABS ECU
A 4(A), A 5(B) ABS Actuator
Check Connector <22–4>
DLC3 <5–3><8–12>
(Short Pin)
J 9 Junction Connector
J 3 Junction Connector
I17 Ignition SW
ABS MOTOR Relay
ABS SOLENOID Relay
10A IGN
60A ABS(*3) 80A ABS, GLOW(*4)
20A AM2
30A AM2
40A AM1
100A ALT(*1) 80A ALT(*2)
15A DOME
Battery
Front Right Fender Apron
Intake Manifold
Rear Part of Cylinder Block
Rear Side of Cylinder Block
*1 : 3RZ–FE, 2KD–FTV
*2 : 1RZ, 3L
*3 : Gasoline
*4 : Diesel
*5 : 3RZ–FE
*6 : 2KD–FTV
*7 : Except 3RZ–FE

21 HILUX (LHD) (Cont' d)

