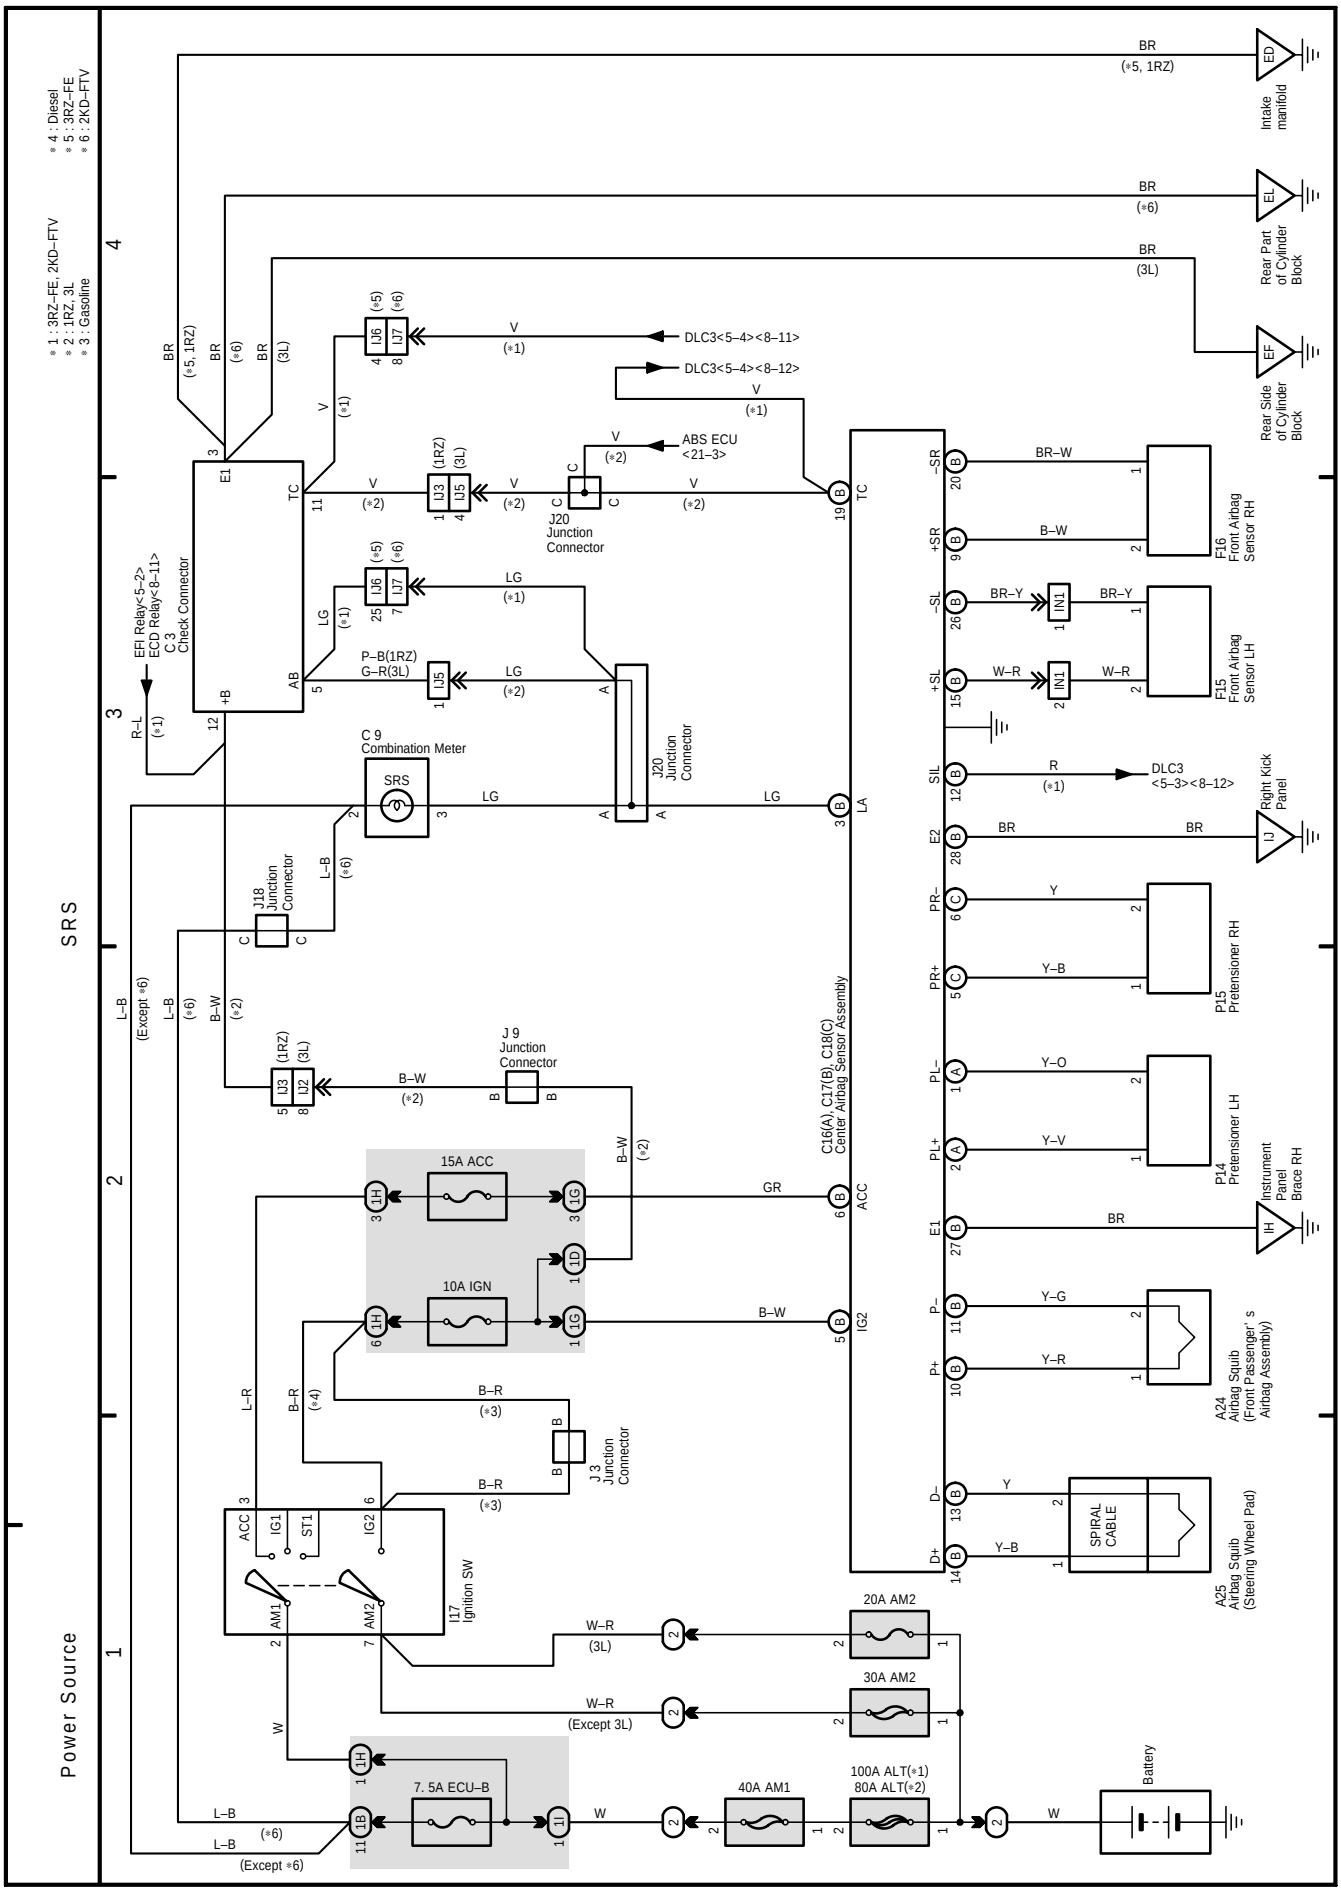

∗1 : 3RZ–FE, 2KD–FTV
∗2 : 1RZ, 3L
∗3 : Gasoline
∗4 : Diesel
∗5 : 3RZ–FE
∗6 : 2KD–FTV
SRS
Power Source
Intake manifold
Rear Part of Cylinder Block
Rear Side of Cylinder Block
DLC3<5–4><8–11>
DLC3<5–4><8–12>
ABS ECU <21–3>
J20 Junction Connector
EFI Relay<5–2>
ECD Relay<8–11>
C 3 Check Connector
C 9 Combination Meter
SRS
J18 Junction Connector
J 9 Junction Connector
J 3 Junction Connector
15A ACC
10A IGN
7. 5A ECU–B
I17 Ignition SW
20A AM2
30A AM2
40A AM1
100A ALT(∗1) 80A ALT(∗2)
Battery
C16(A), C17(B), C18(C) Center Airbag Sensor Assembly
F16 Front Airbag Sensor RH
F15 Front Airbag Sensor LH
P15 Pretensioner RH
P14 Pretensioner LH
A24 Airbag Squib (Front Passenger's Airbag Assembly)
A25 Airbag Squib (Steering Wheel Pad)
SPIRAL CABLE
DLC3 <5–3><8–12>
Right Kick Panel
Instrument Panel Brace RH