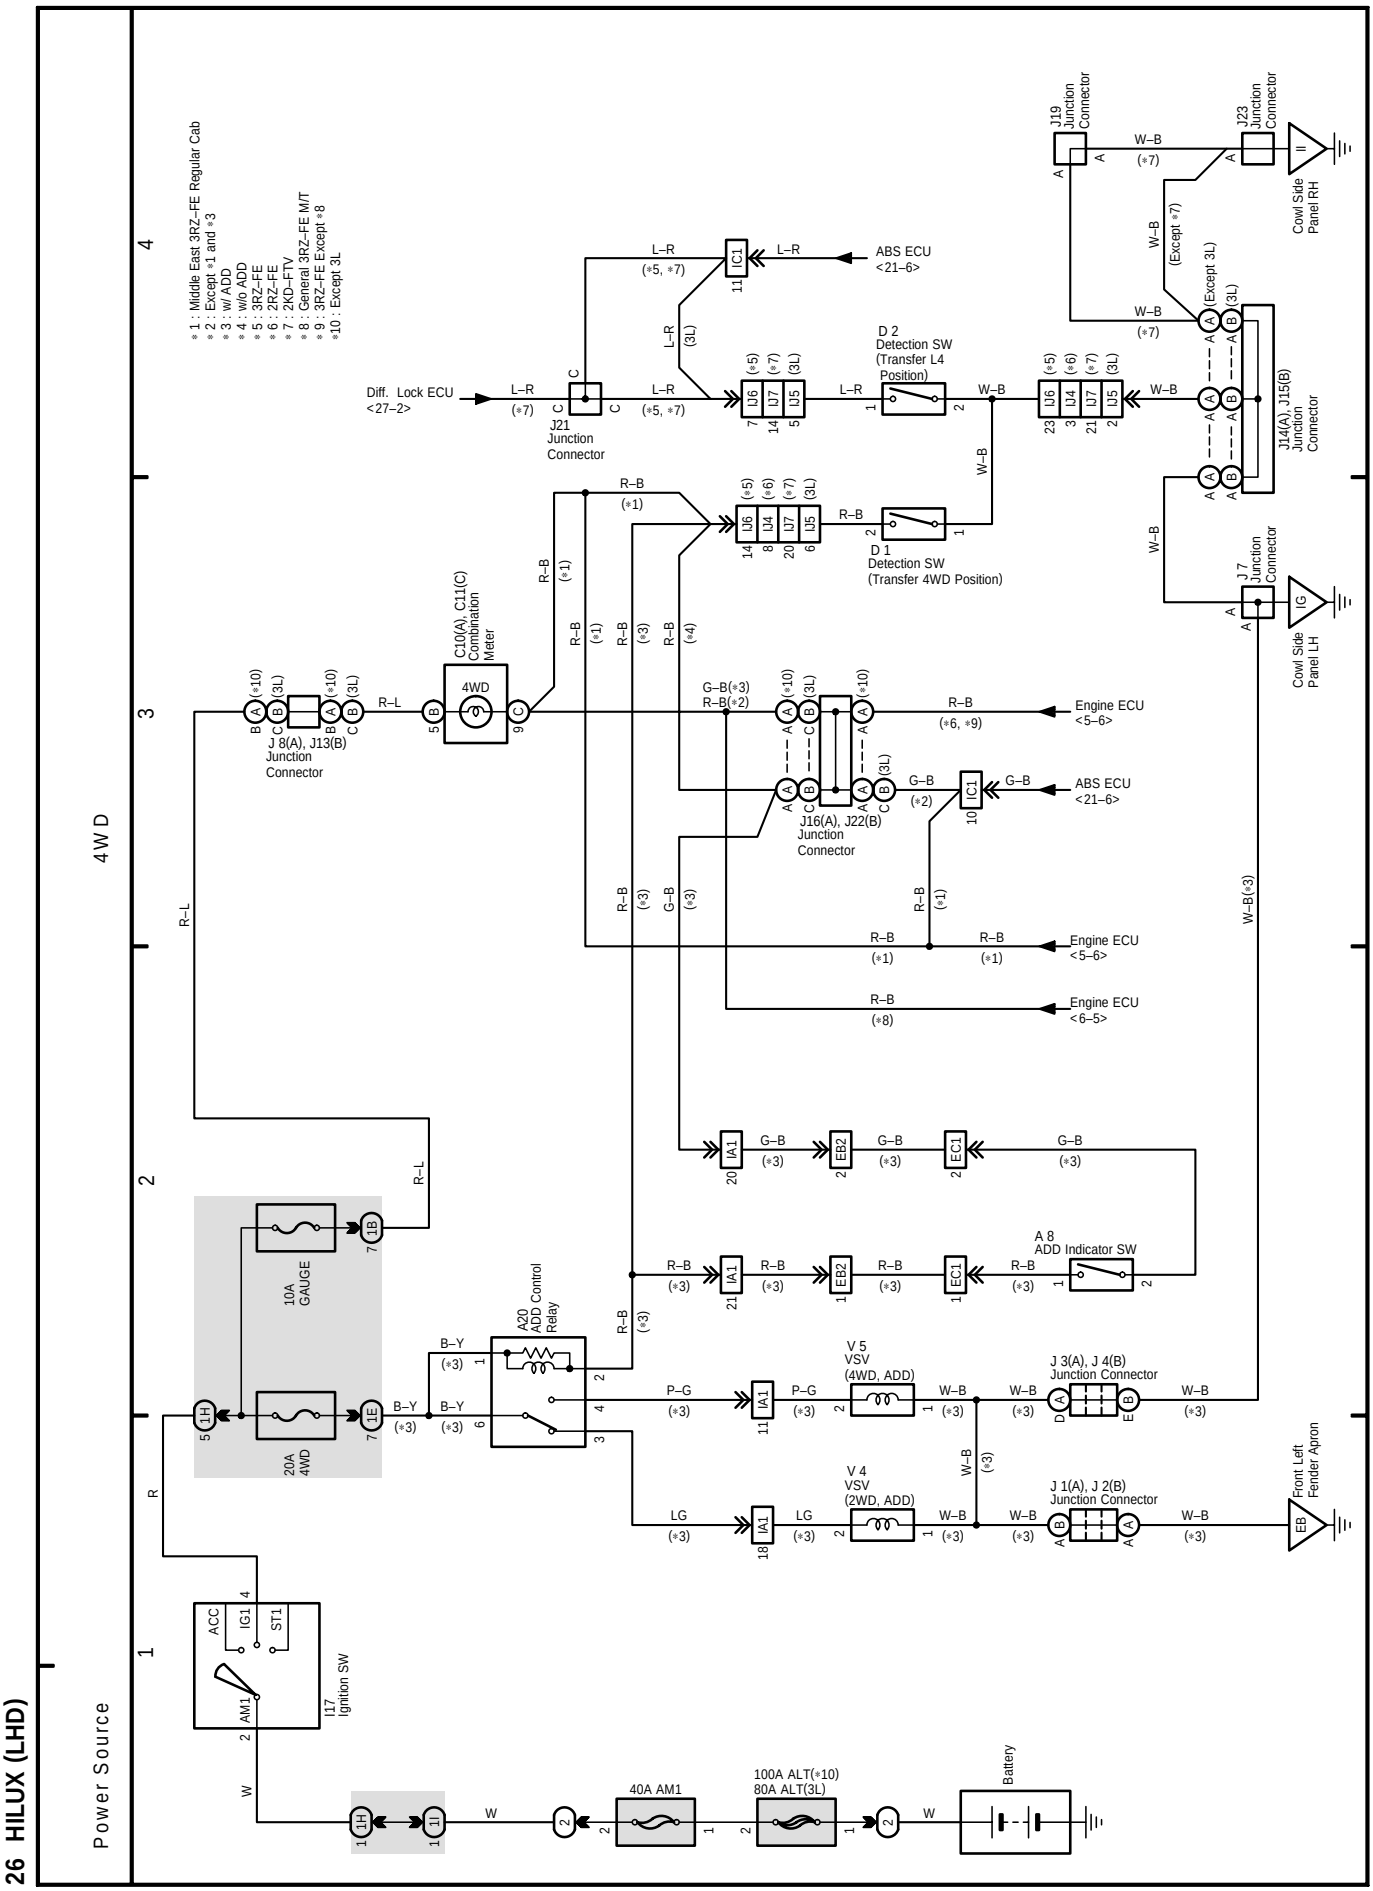

26 HILUX (LHD)
Power Source
4WD
1
2
3
4
*1 : Middle East 3RZ–FE Regular Cab
*2 : Except *1 and *3
*3 : w/ ADD
*4 : w/o ADD
*5 : 3RZ–FE
*6 : 2RZ–FE
*7 : 2KD–FTV
*8 : General 3RZ–FE M/T
*9 : 3RZ–FE Except *8
*10 : Except 3L
Diff. Lock ECU <27–2>
J21 Junction Connector
ABS ECU <21–6>
IC1
D 2 Detection SW (Transfer L4 Position)
D 1 Detection SW (Transfer 4WD Position)
J19 Junction Connector
J23 Junction Connector
Cowl Side Panel RH
J14(A), J15(B) Junction Connector
J 7 Junction Connector
Cowl Side Panel LH
C10(A), C11(C) Combination Meter
4WD
J 8(A), J13(B) Junction Connector
J16(A), J22(B) Junction Connector
Engine ECU <5–6>
Engine ECU <6–5>
Engine ECU <6–5>
A 8 ADD Indicator SW
A20 ADD Control Relay
10A GAUGE
20A 4WD
V 5 VSV (4WD, ADD)
V 4 VSV (2WD, ADD)
J 3(A), J 4(B) Junction Connector
J 1(A), J 2(B) Junction Connector
Front Left Fender Apron
I17 Ignition SW
ACC
IG1
ST1
AM1
40A AM1
100A ALT(*10)
80A ALT(3L)
Battery