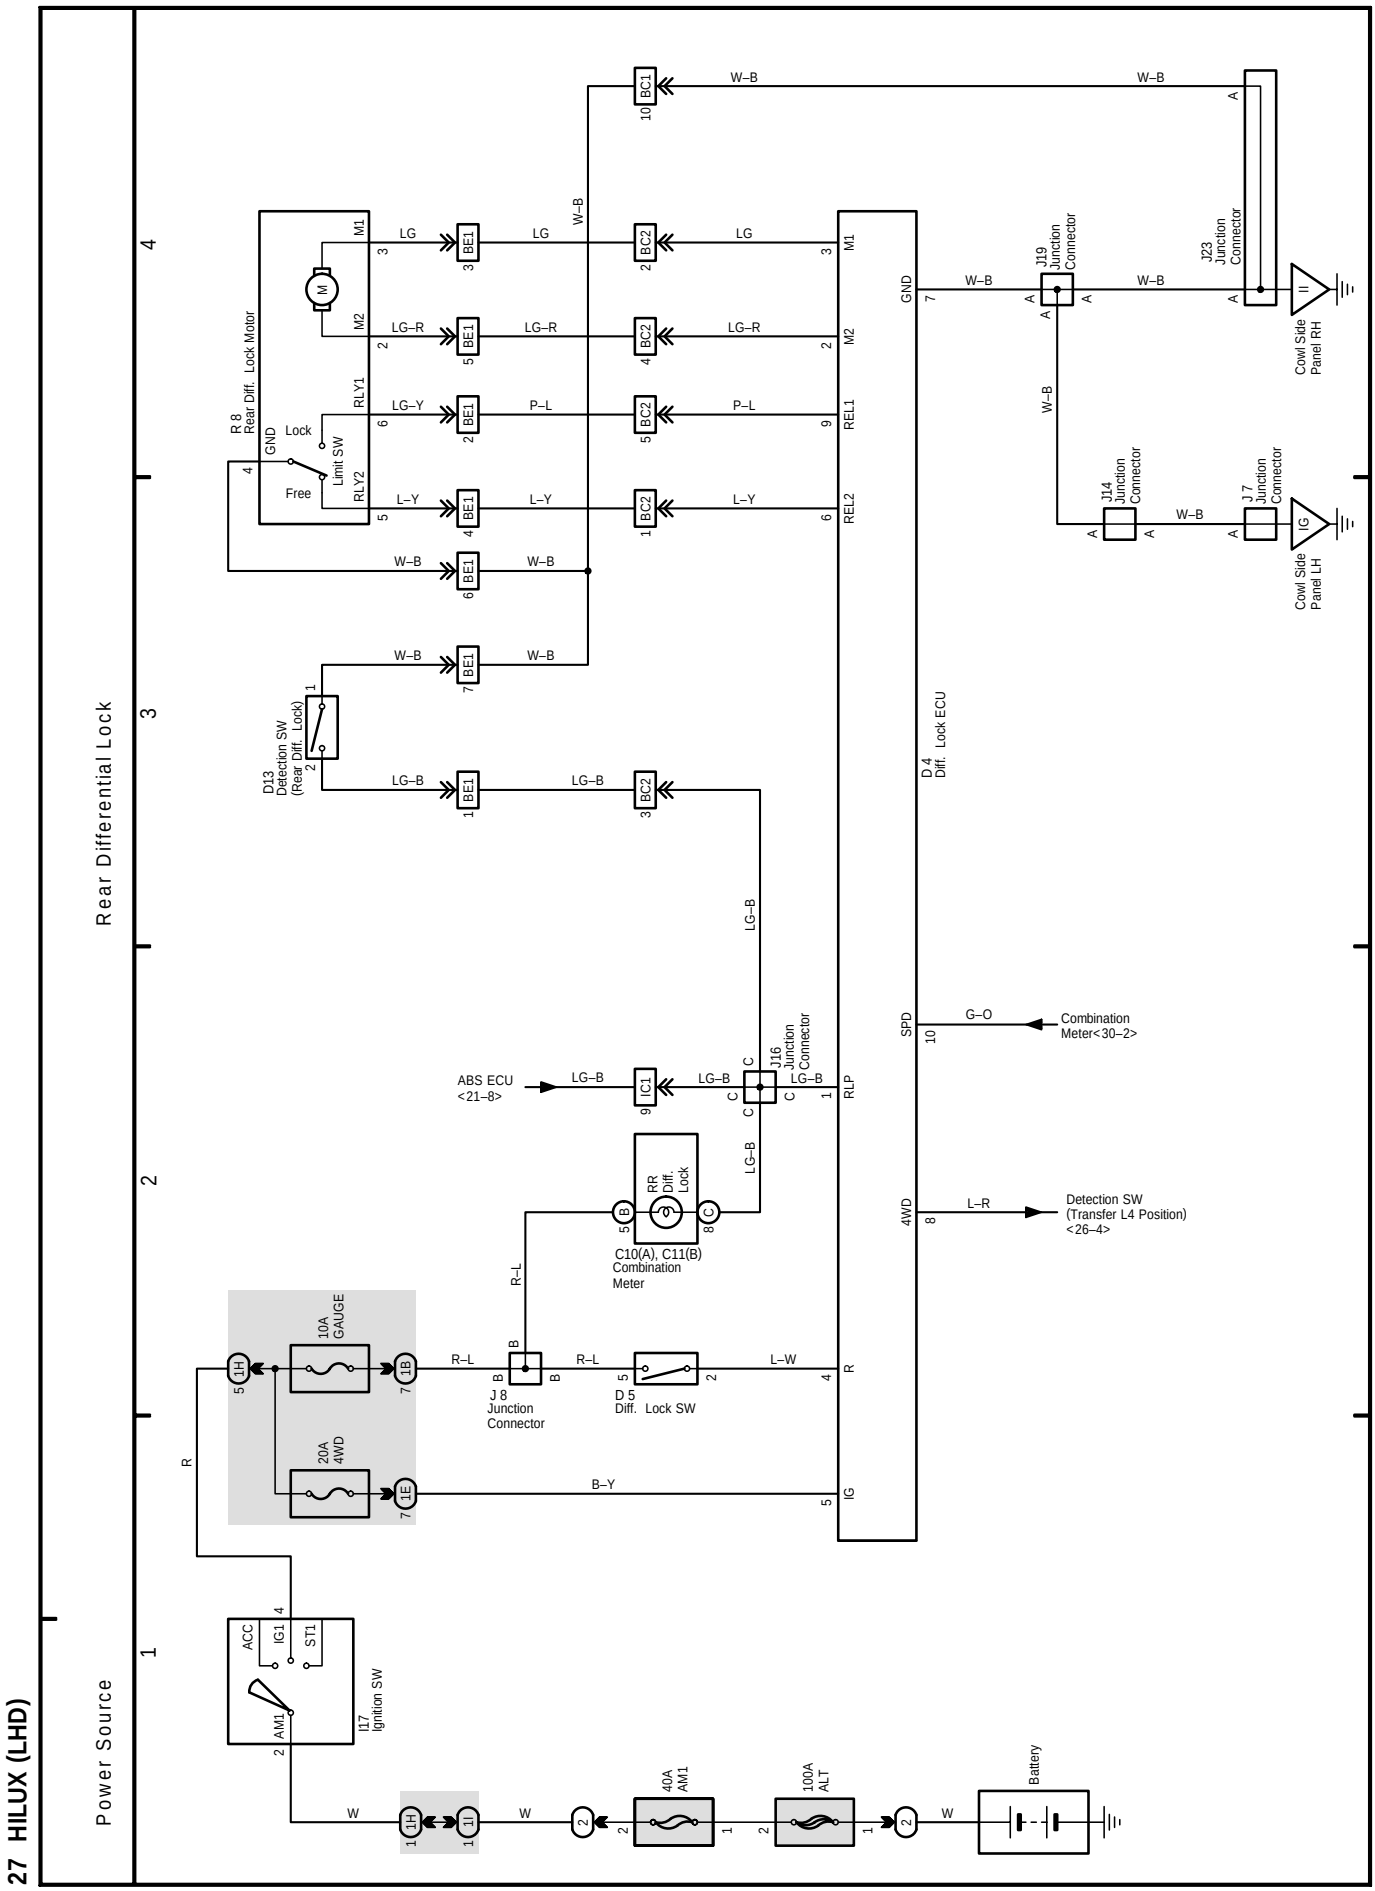

27 HILUX (LHD)
Power Source
Rear Differential Lock
R 8 Rear Diff. Lock Motor
GND
Lock
Free
Limit SW
M1
M2
RLY1
RLY2
M
D13 Detection SW (Rear Diff. Lock)
D 4 Diff. Lock ECU
GND
SPD
4WD
RLP
IG
REL1
REL2
J19 Junction Connector
J23 Junction Connector
J14 Junction Connector
J7 Junction Connector
Cowl Side Panel RH
Cowl Side Panel LH
J16 Junction Connector
ABS ECU <21–8>
Combination Meter<30–2>
Detection SW (Transfer L4 Position) <26–4>
RR Diff. Lock
C10(A), C11(B) Combination Meter
J 8 Junction Connector
D 5 Diff. Lock SW
10A GAUGE
20A 4WD
I17 Ignition SW
ACC
IG1
ST1
AM1
40A AM1
100A ALT
Battery
W–B
LG
LG–R
LG–Y
L–Y
P–L
LG–B
R–L
L–W
B–Y
G–O
L–R
W