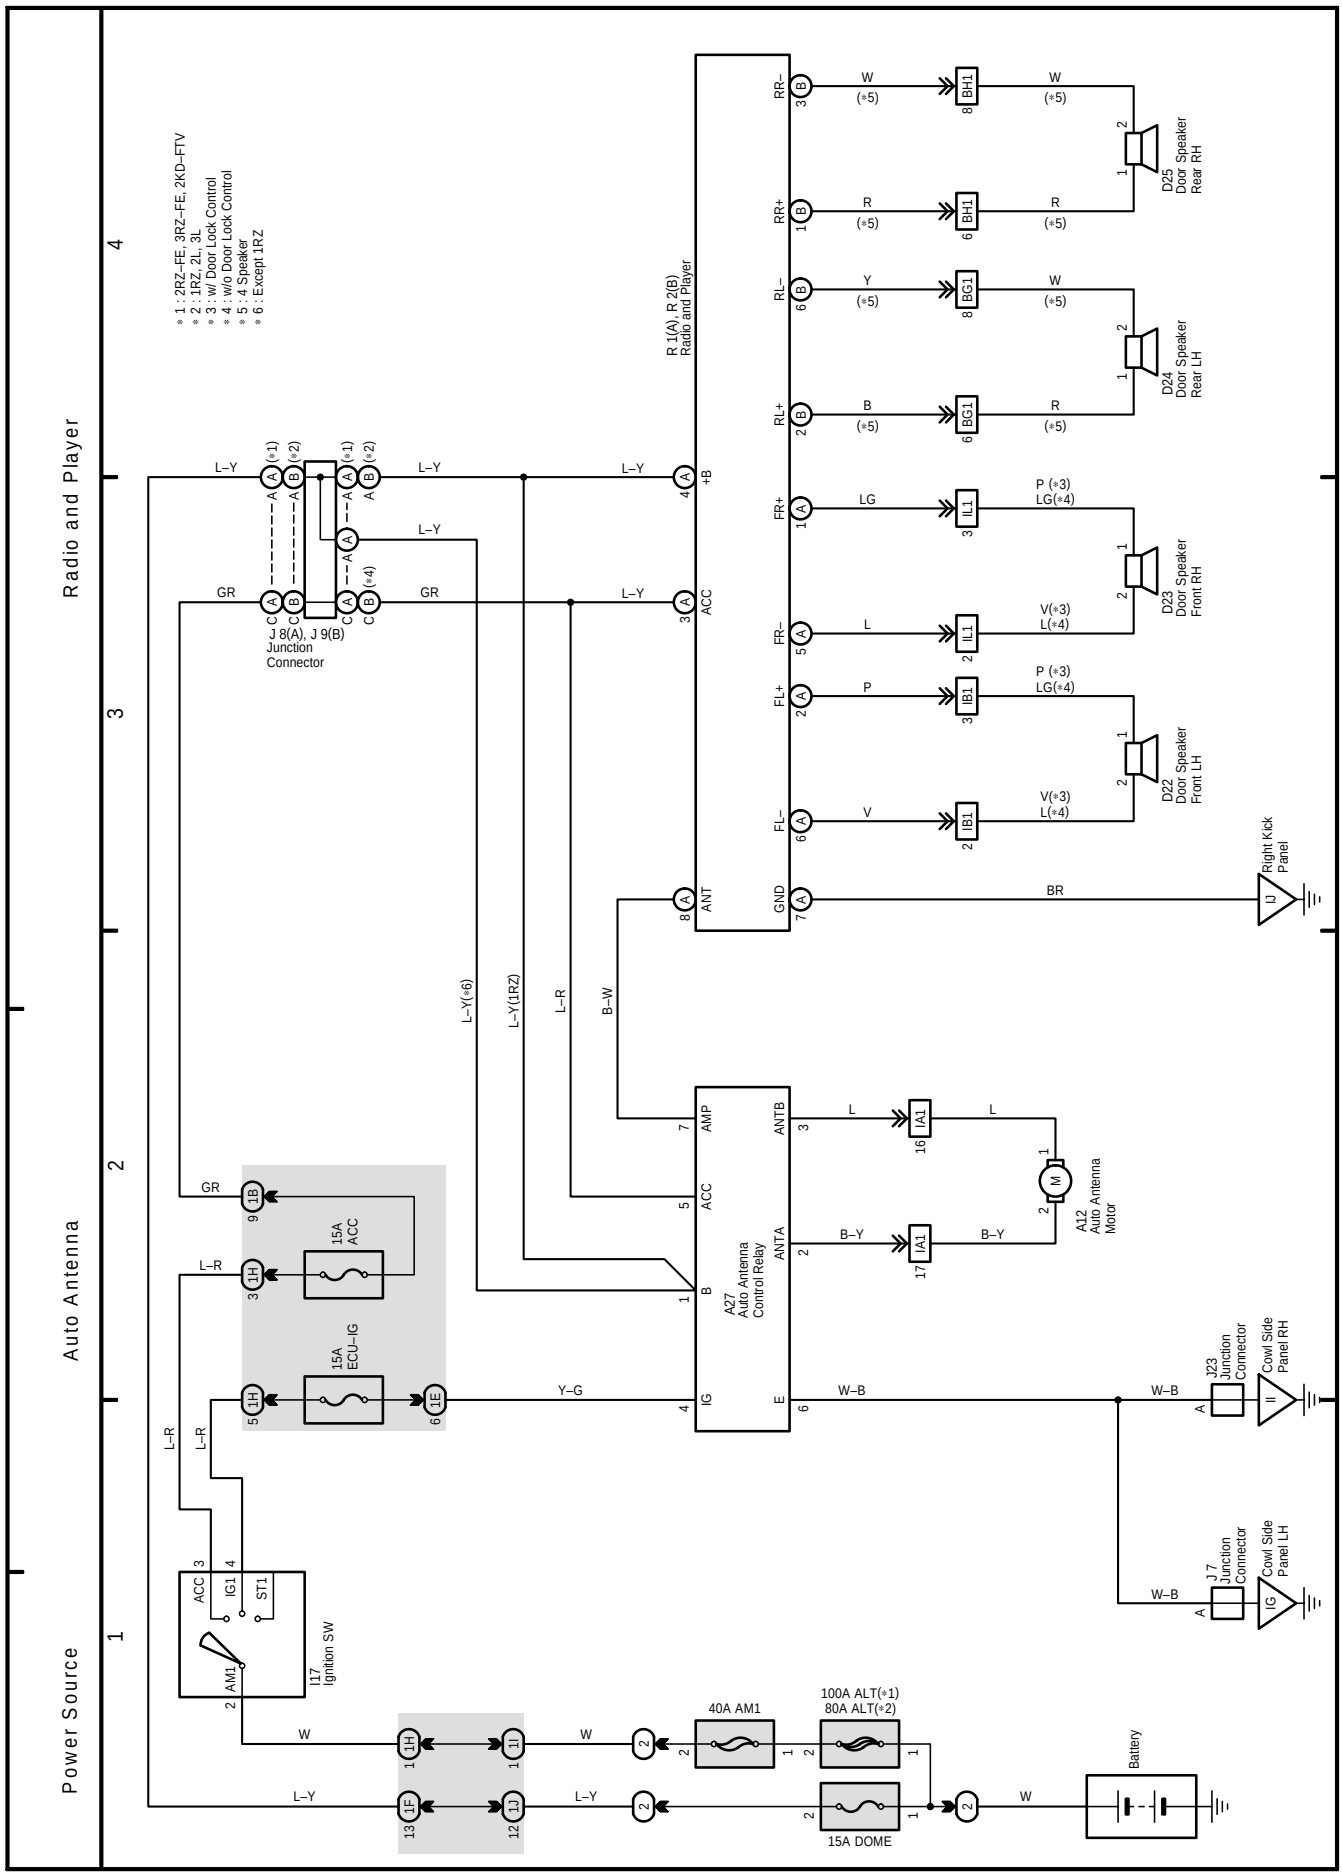
29 HILUX (LHD)


Power Source
Auto Antenna
Radio and Player
1
2
3
4
*1 : 2RZ–FE, 3RZ–FE, 2KD–FTV
*2 : 1RZ, 2L, 3L
*3 : w/ Door Lock Control
*4 : w/o Door Lock Control
*5 : 4 Speaker
*6 : Except 1RZ
R 1(A), R 2(B)
Radio and Player
+B
ACC
ANT
GND
J 8(A), J 9(B)
Junction
Connector
A27
Auto Antenna
Control Relay
AMP
ANTB
ANTA
IG
E
A12
Auto Antenna
Motor
I17
Ignition SW
ACC
IG1
ST1
AM1
15A
ACC
15A
ECU–IG
40A AM1
100A ALT(*1)
80A ALT(*2)
15A DOME
Battery
RR–
RR+
RL–
RL+
FR+
FR–
FL+
FL–
D25
Door Speaker
Rear RH
D24
Door Speaker
Rear LH
D23
Door Speaker
Front RH
D22
Door Speaker
Front LH
Right Kick
Panel
J23
Junction
Connector
Cowl Side
Panel RH
J7
Junction
Connector
Cowl Side
Panel LH
L–Y
GR
L–R
L–Y(*6)
L–Y(1RZ)
B–W
Y–G
W–B
BR
W
B–Y
L
P (*3)
LG(*4)
V(*3)
L(*4)
LG
P
V
R
Y
B