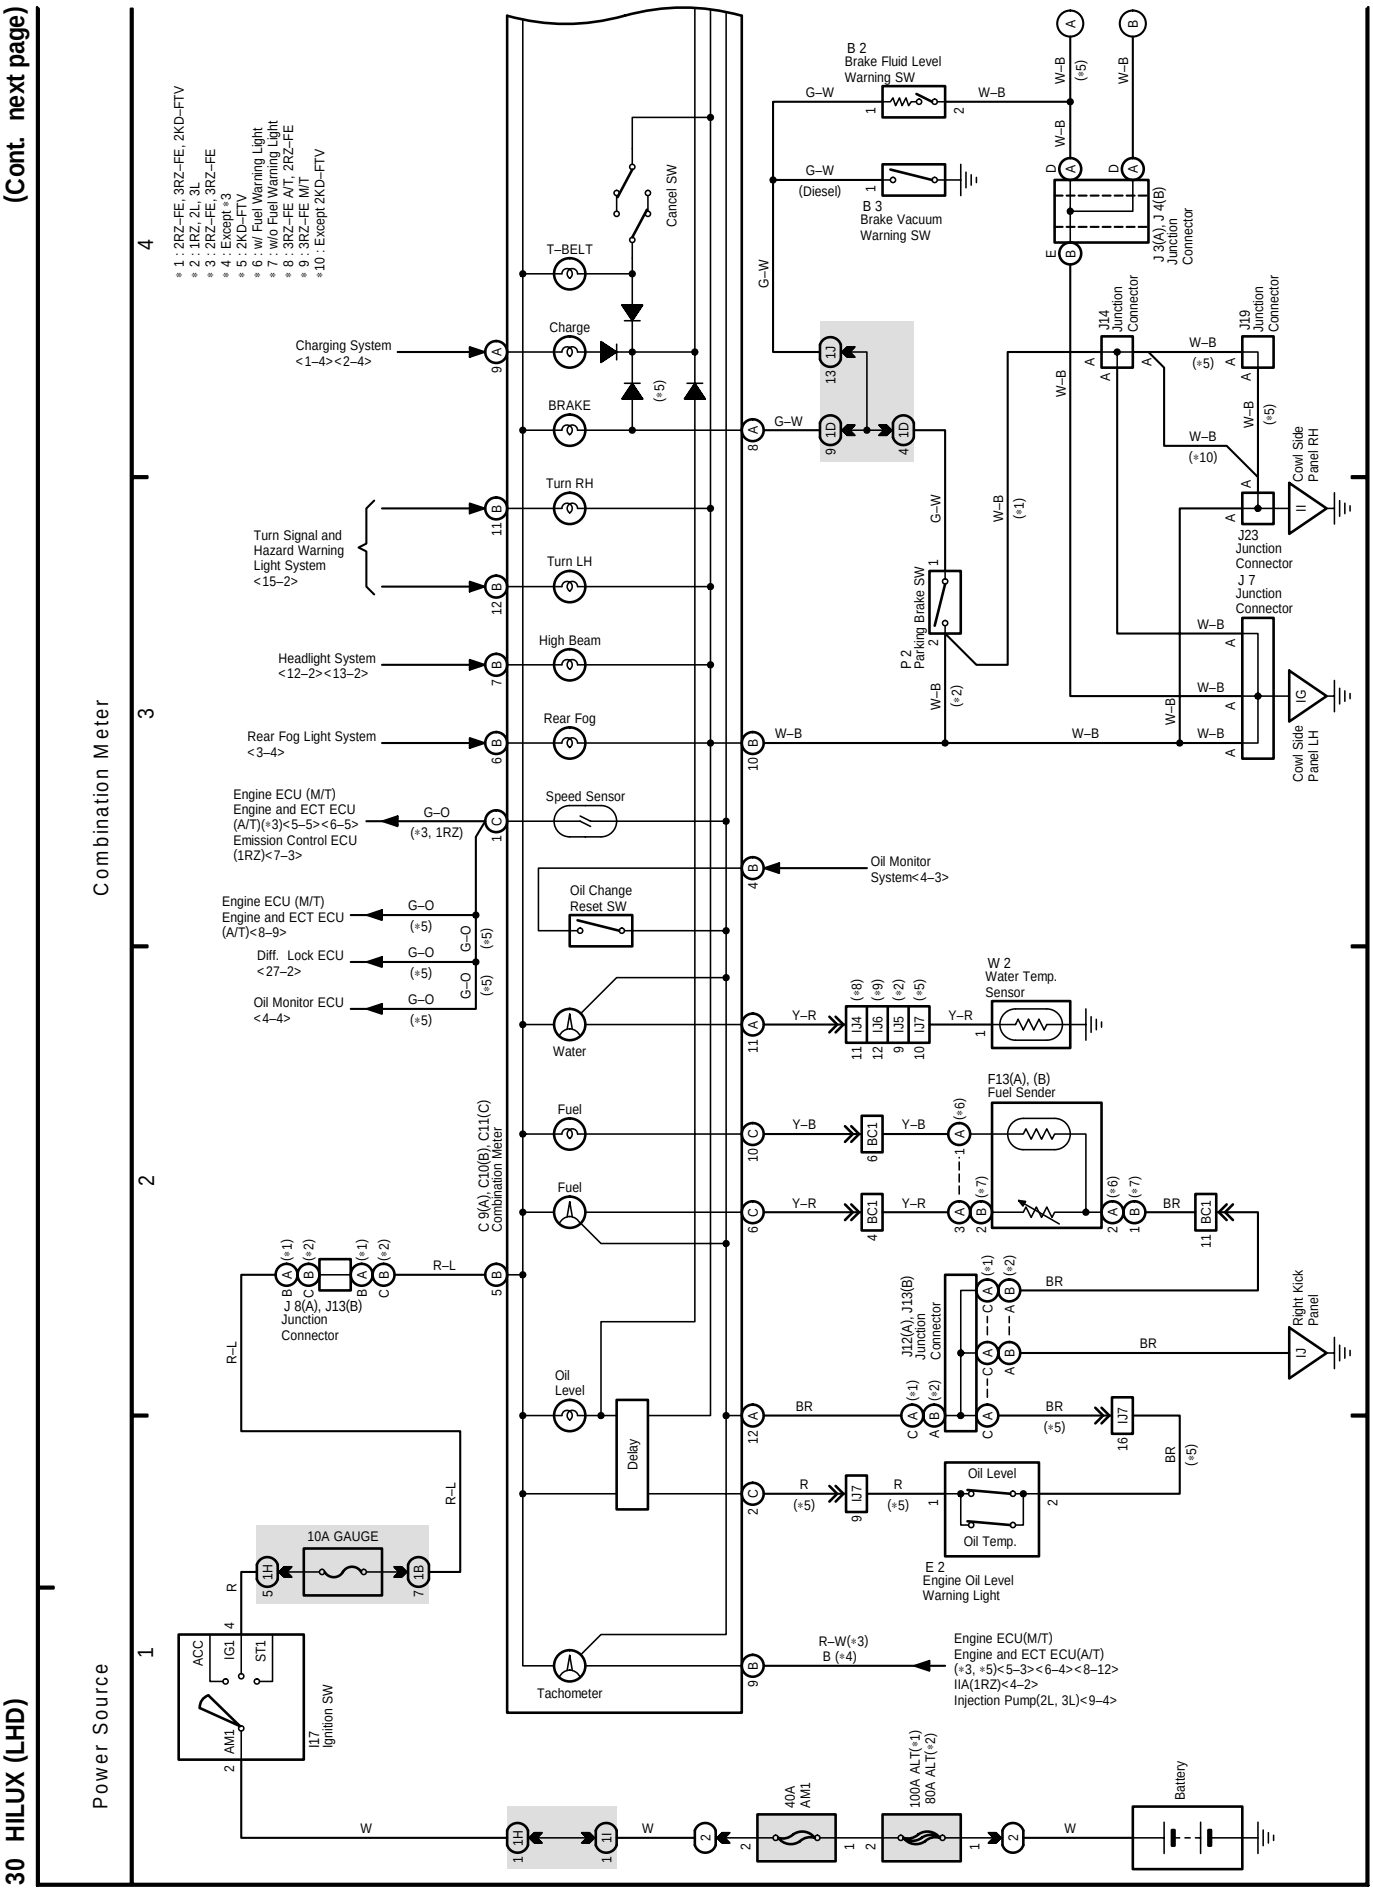
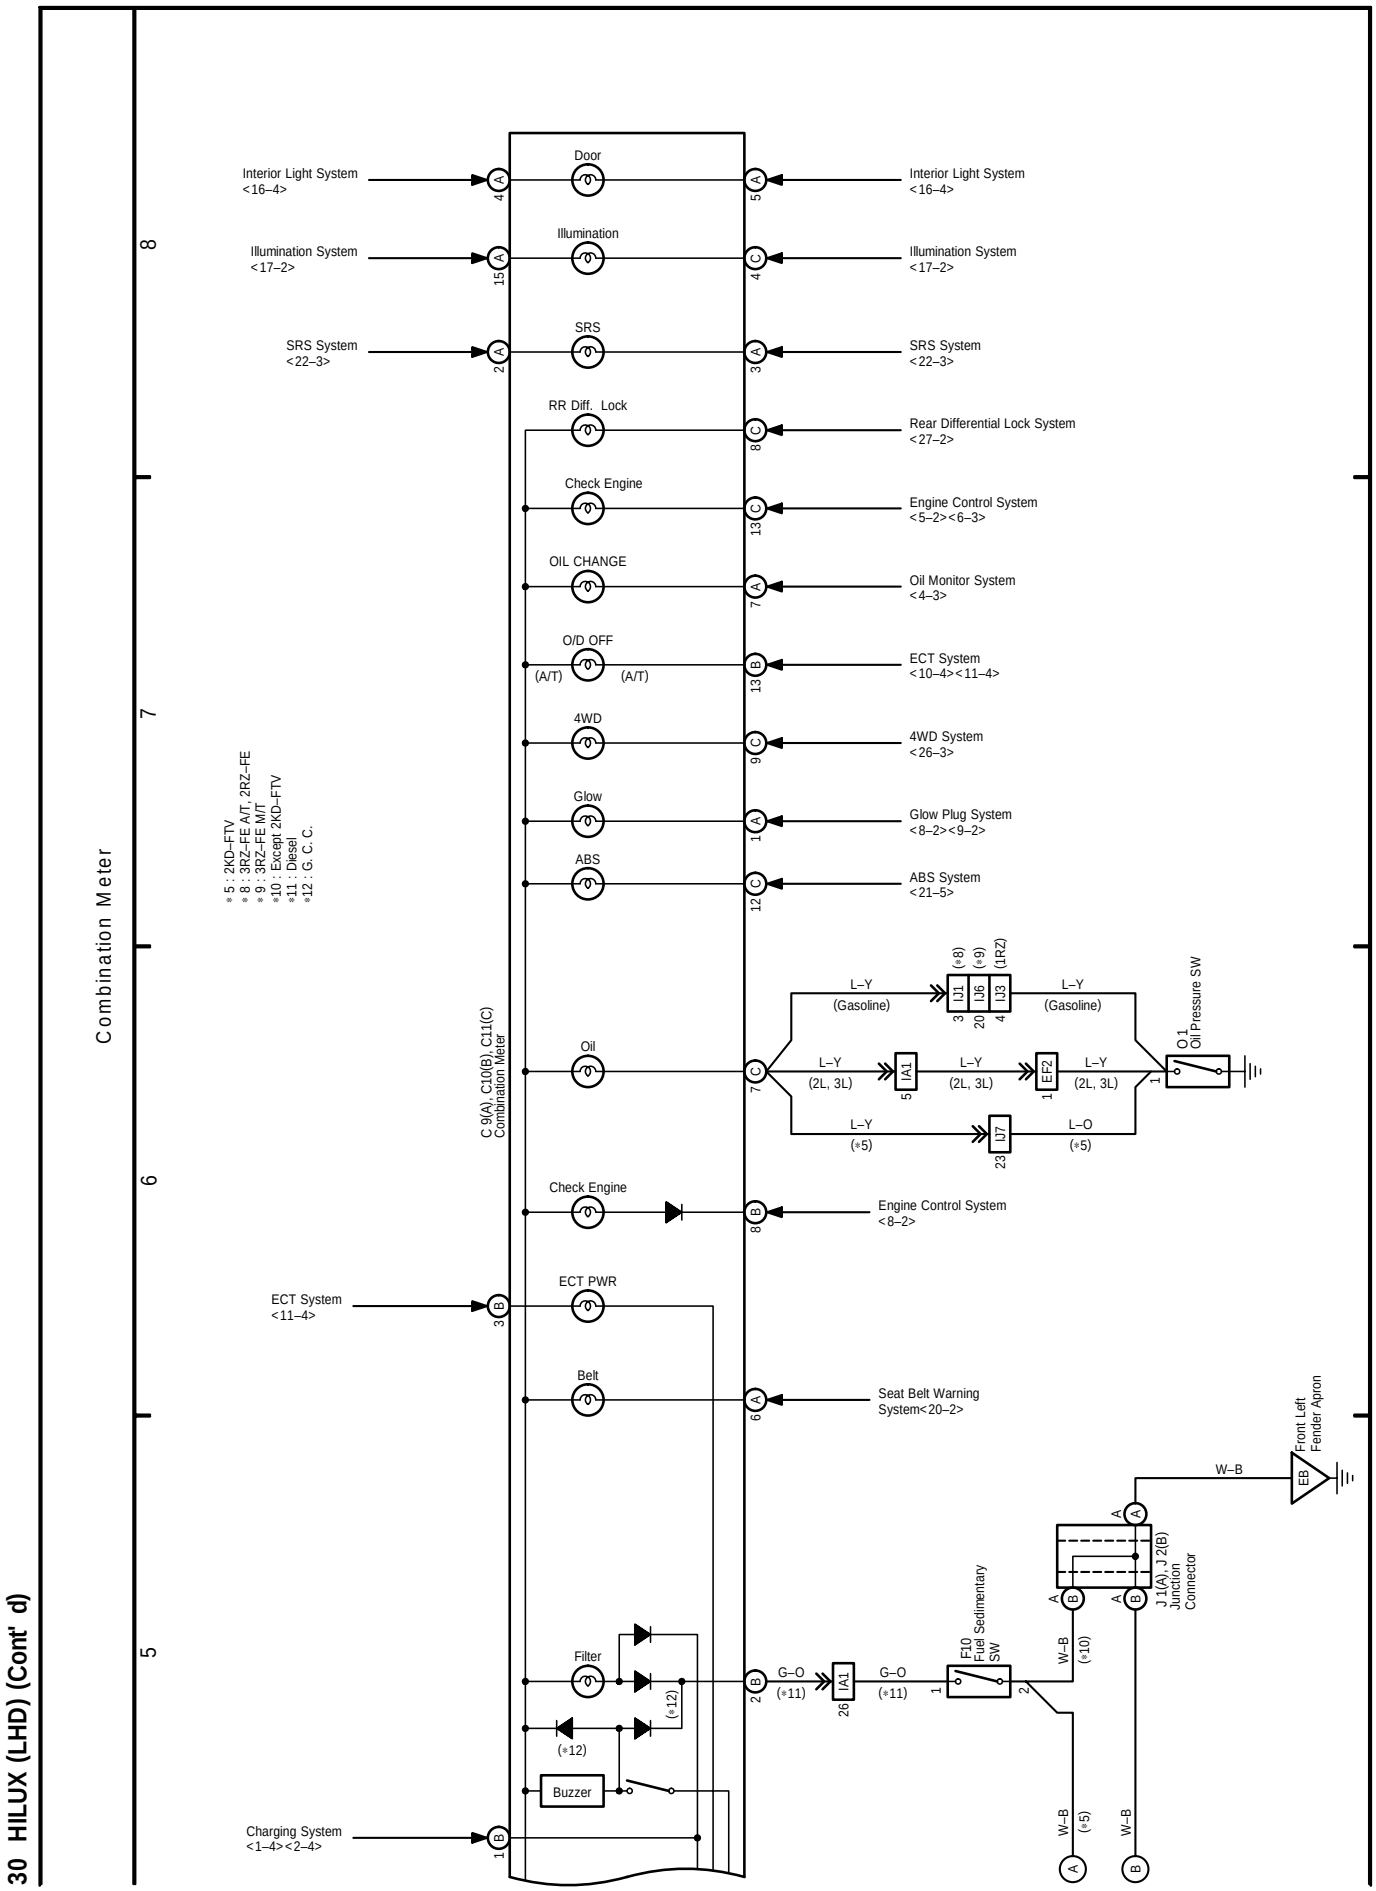

(Cont. next page)
30 HILUX (LHD)
Power Source
Combination Meter
1
2
3
4
* 1 : 2RZ–FE, 3RZ–FE, 2KD–FTV
* 2 : 1RZ, 2L, 3L
* 3 : 2RZ–FE, 3RZ–FE
* 4 : Except * 3
* 5 : 2KD–FTV
* 6 : w/ Fuel Warning Light
* 7 : w/o Fuel Warning Light
* 8 : 3RZ–FE A/T, 2RZ–FE
* 9 : 3RZ–FE M/T
*10 : Except 2KD–FTV
Cancel SW
T–BELT
Charge
Charging System <1–4><2–4>
BRAKE
Turn RH
Turn LH
Turn Signal and Hazard Warning Light System <15–2>
High Beam
Headlight System <12–2><13–2>
Rear Fog
Rear Fog Light System <3–4>
Speed Sensor
Engine ECU (M/T) Engine and ECT ECU (A/T)(*3)<5–5><6–5> Emission Control ECU (1RZ)<7–3>
Engine ECU (M/T) Engine and ECT ECU (A/T)<8–9>
Diff. Lock ECU <27–2>
Oil Monitor ECU <4–4>
Oil Change Reset SW
Oil Monitor System<4–3>
Water
W 2 Water Temp. Sensor
Fuel
Fuel
C 9(A), C10(B), C11(C) Combination Meter
F13(A), (B) Fuel Sender
J 8(A), J13(B) Junction Connector
Oil Level
Delay
10A GAUGE
I17 Ignition SW
ACC
IG1
ST1
AM1
Tachometer
R–W(*3) B (*4)
Engine ECU(M/T) Engine and ECT ECU(A/T) (*3, *5)<5–3><6–4><8–12> IIA(1RZ)<4–2> Injection Pump(2L, 3L)<9–4>
B 2 Brake Fluid Level Warning SW
B 3 Brake Vacuum Warning SW
J 3(A), J 4(B) Junction Connector
J14 Junction Connector
J19 Junction Connector
J23 Junction Connector
J 7 Junction Connector
P 2 Parking Brake SW
Cowl Side Panel RH
Cowl Side Panel LH
Right Kick Panel
J12(A), J13(B) Junction Connector
Oil Level
Oil Temp.
E 2 Engine Oil Level Warning Light
40A AM1
100A ALT(*1) 80A ALT(*2)
Battery


30 HILUX (LHD) (Cont' d)
Combination Meter
8
7
6
5
∗5 : 2KD–FTV
∗8 : 3RZ–FE A/T, 2RZ–FE
∗9 : 3RZ–FE M/T
∗10 : Except 2KD–FTV
∗11 : Diesel
∗12 : G. C. C.
C 9(A), C10(B), C11(C)
Combination Meter
Door
Illumination
SRS
RR Diff. Lock
Check Engine
OIL CHANGE
O/D OFF
4WD
Glow
ABS
Oil
Check Engine
ECT PWR
Belt
Filter
Buzzer
Interior Light System <16–4>
Illumination System <17–2>
SRS System <22–3>
Rear Differential Lock System <27–2>
Engine Control System <5–2><6–3>
Oil Monitor System <4–3>
ECT System <10–4><11–4>
4WD System <26–3>
Glow Plug System <8–2><9–2>
ABS System <21–5>
Engine Control System <8–2>
ECT System <11–4>
Seat Belt Warning System<20–2>
Charging System <1–4><2–4>
(A/T)
(A/T)
L–Y (Gasoline)
L–Y (2L, 3L)
L–Y (∗5)
L–O (∗5)
(∗8) (∗9) (1RZ)
IJ1 IJ6 IJ3
IA1
EF2
IJ7
O 1 Oil Pressure SW
G–O (∗11)
F10 Fuel Sedimentary SW
W–B (∗10)
W–B (∗5)
J 1(A), J 2(B) Junction Connector
W–B
EB
Front Left Fender Apron