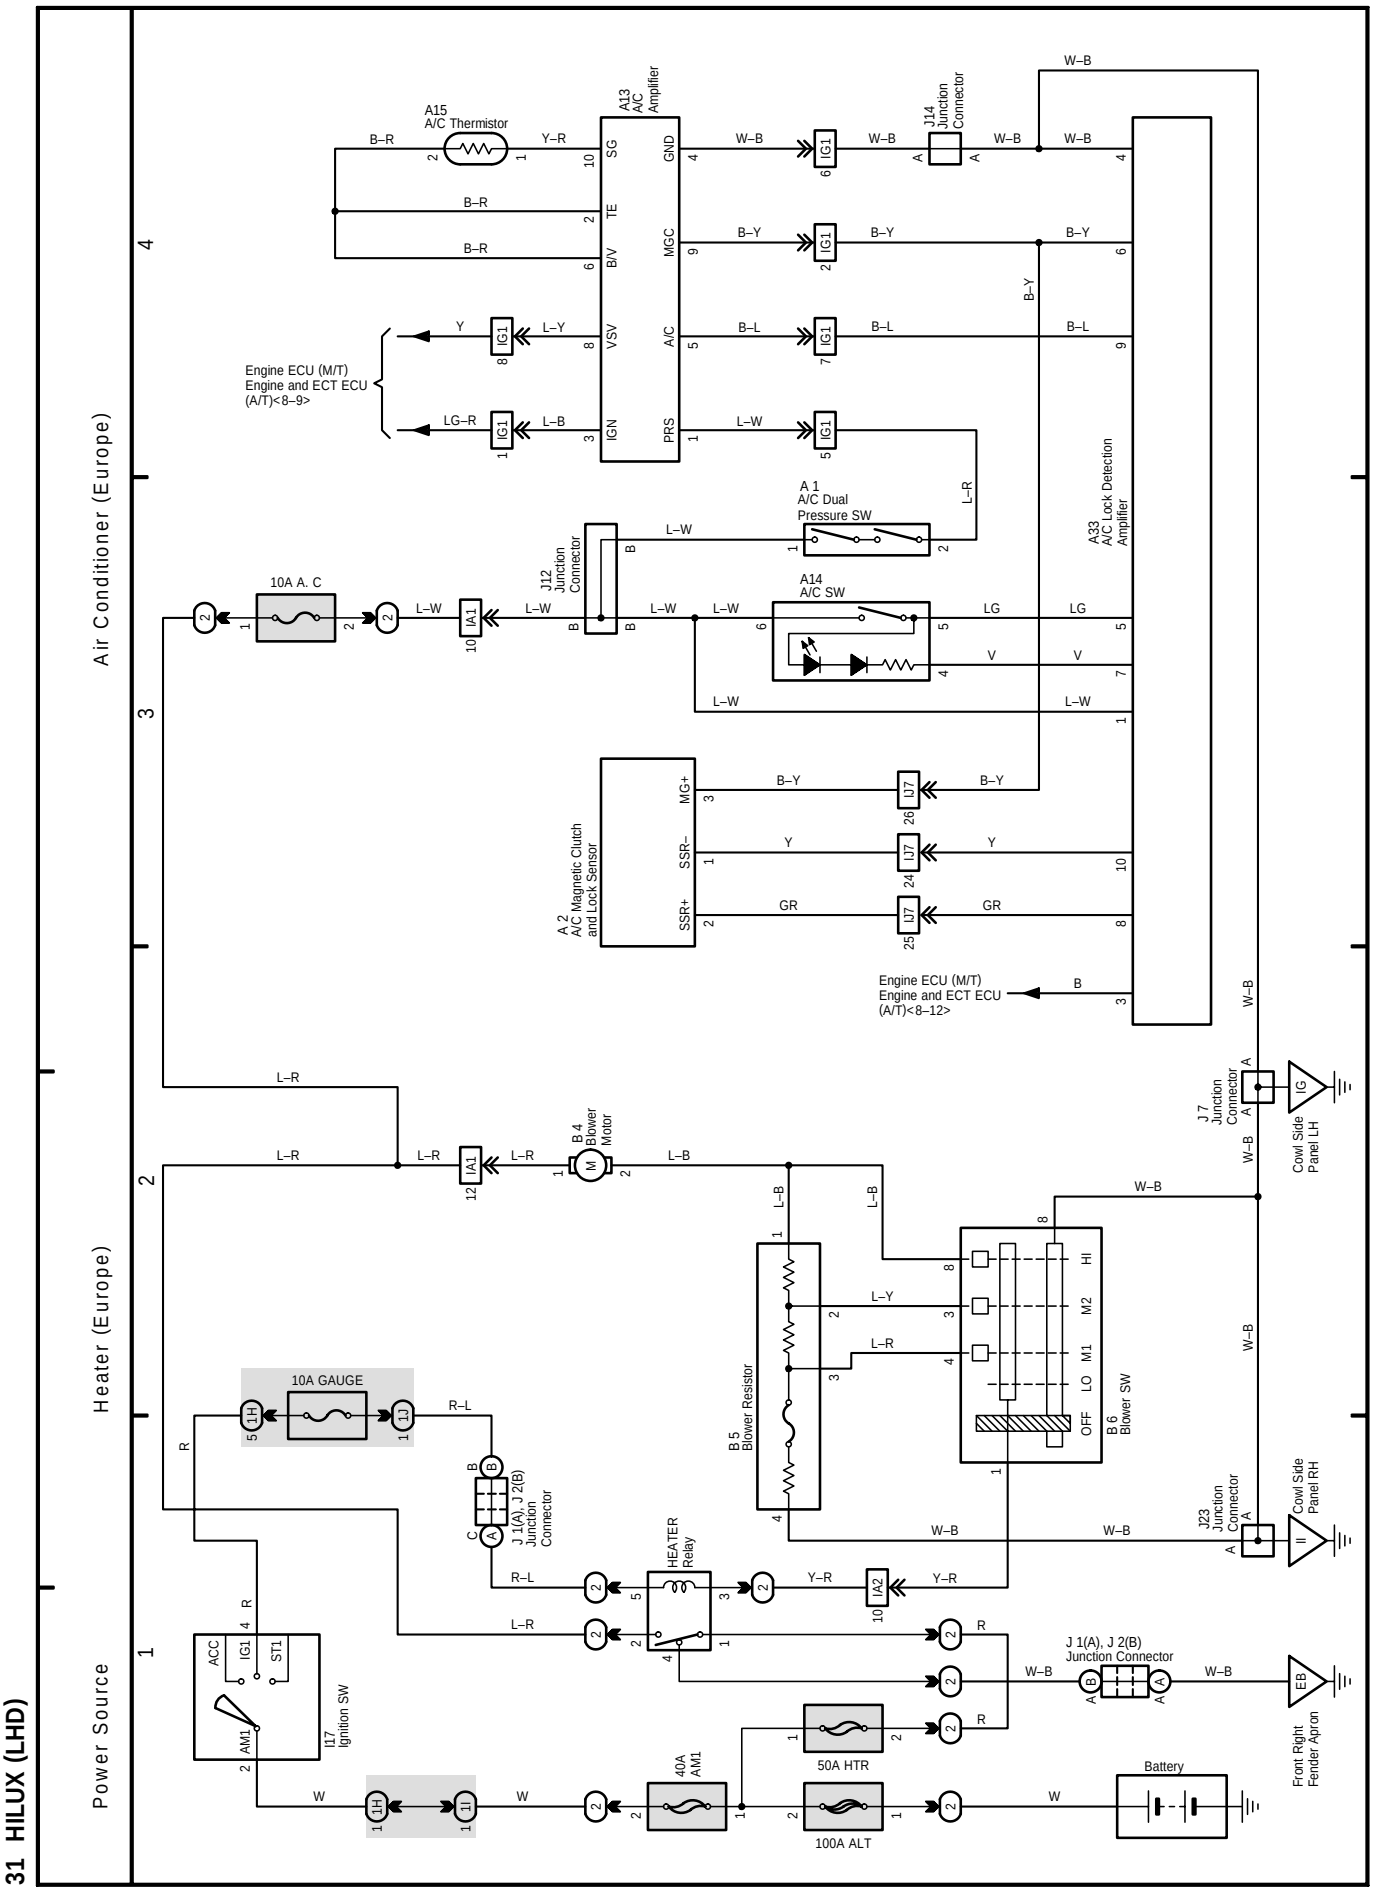

31 HILUX (LHD)
Power Source
Heater (Europe)
Air Conditioner (Europe)
A15 A/C Thermistor
A13 A/C Amplifier
J14 Junction Connector
A 1 A/C Dual Pressure SW
A14 A/C SW
A33 A/C Lock Detection Amplifier
J12 Junction Connector
A 2 A/C Magnetic Clutch and Lock Sensor
Engine ECU (M/T) Engine and ECT ECU (A/T)<8–9>
Engine ECU (M/T) Engine and ECT ECU (A/T)<8–12>
10A A. C
10A GAUGE
B 4 Blower Motor
B 5 Blower Resistor
B 6 Blower SW
HEATER Relay
J 1(A), J 2(B) Junction Connector
J 7 Junction Connector
J23 Junction Connector
Cowl Side Panel LH
Cowl Side Panel RH
Front Right Fender Apron
I17 Ignition SW
50A HTR
40A AM1
100A ALT
Battery