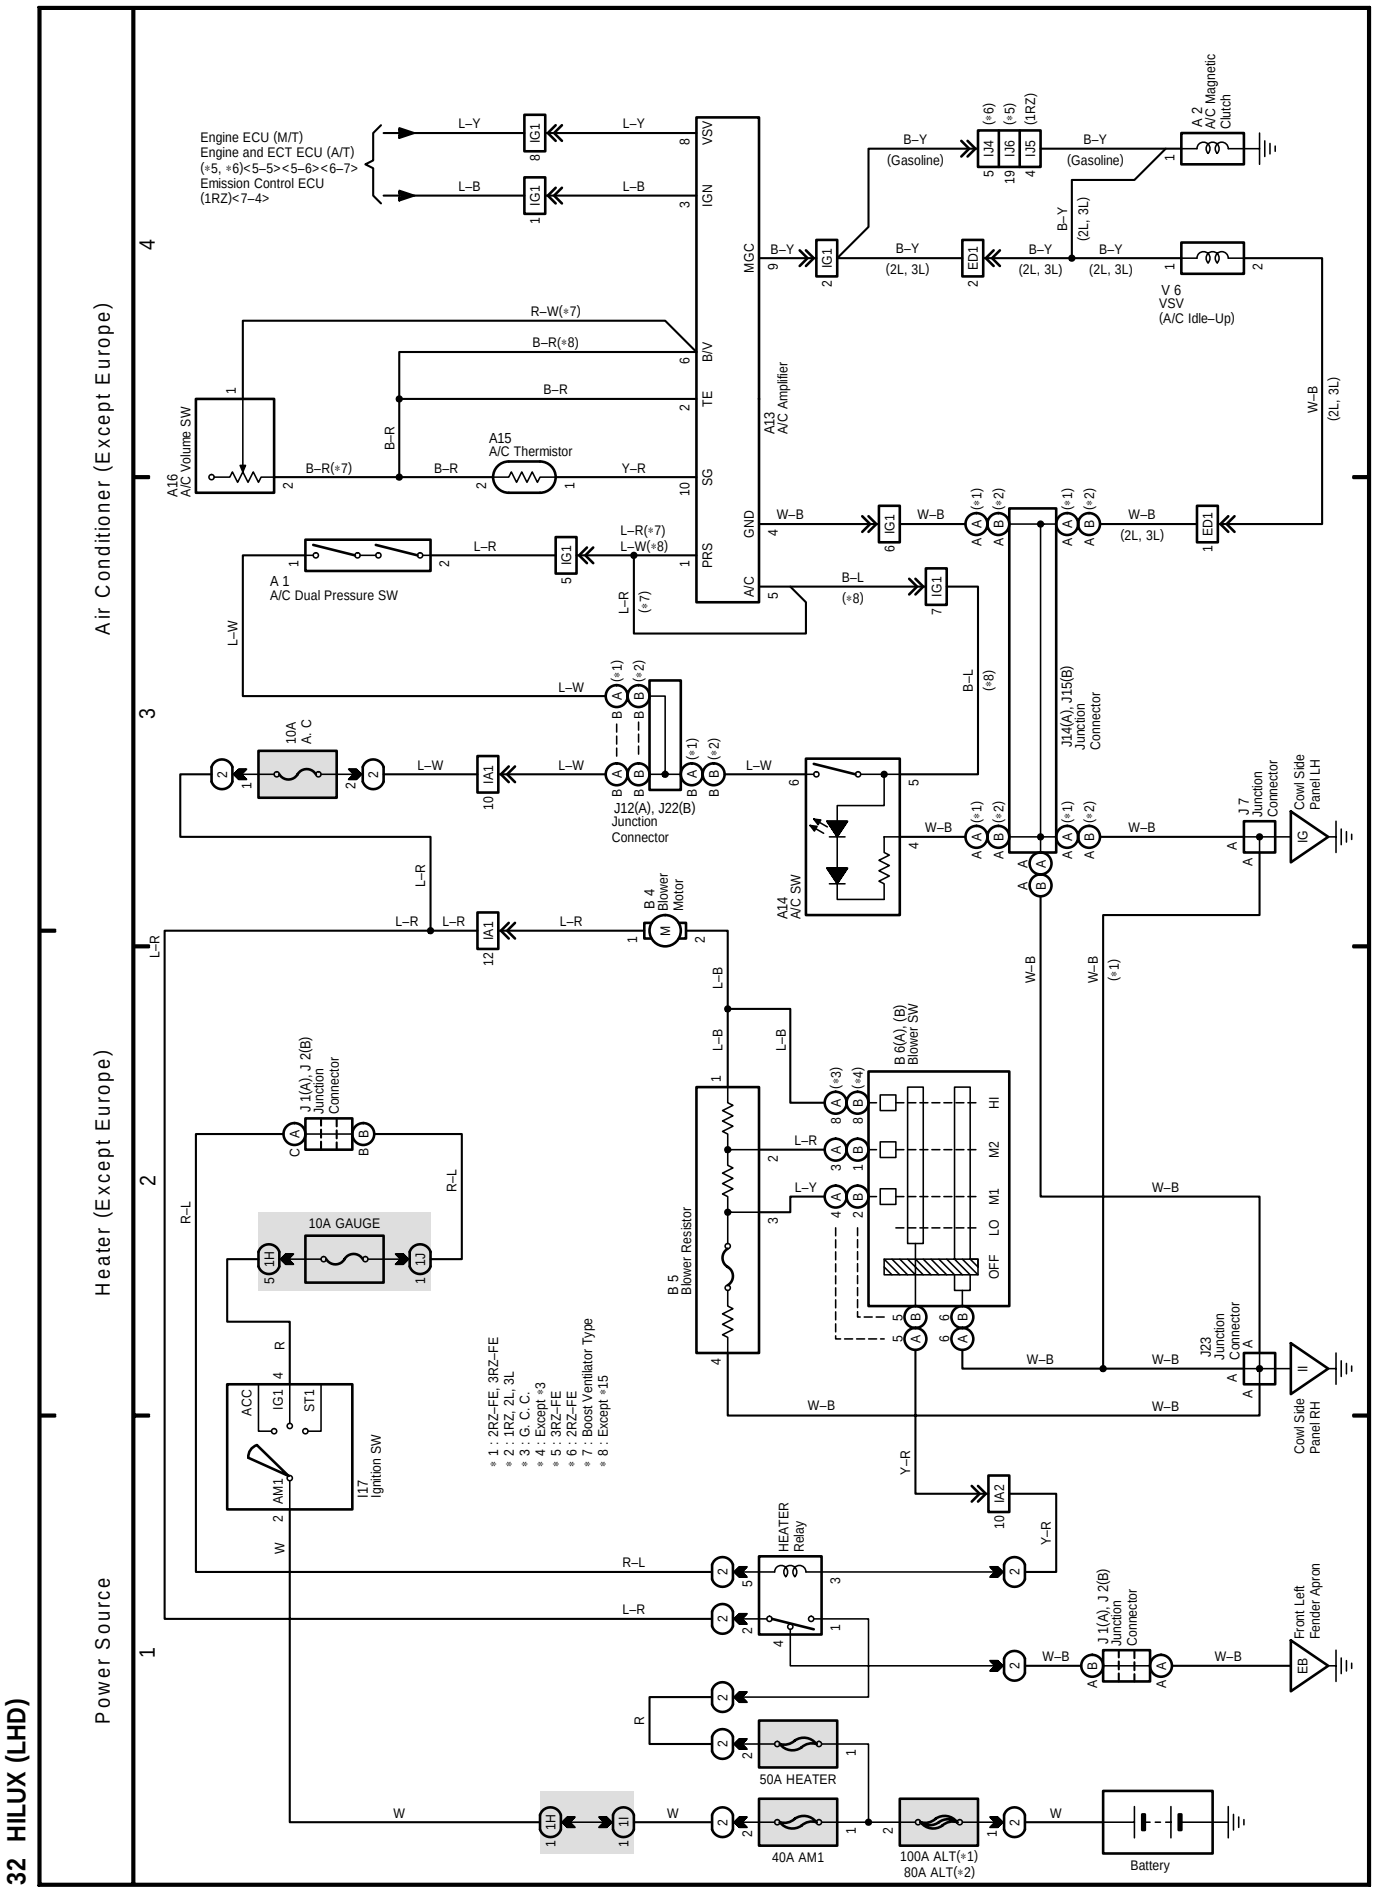

Air Conditioner (Except Europe)
Heater (Except Europe)
Power Source
Engine ECU (M/T)
Engine and ECT ECU (A/T)
(*5, *6)<5–5><5–6><6–7>
Emission Control ECU
(1RZ)<7–4>
A16 A/C Volume SW
A15 A/C Thermistor
A13 A/C Amplifier
A 1 A/C Dual Pressure SW
A14 A/C SW
A 2 A/C Magnetic Clutch
V 6 VSV (A/C Idle–Up)
B 4 Blower Motor
B 5 Blower Resistor
B 6(A), (B) Blower SW
J12(A), J22(B) Junction Connector
J14(A), J15(B) Junction Connector
J1(A), J2(B) Junction Connector
J7 Junction Connector
J23 Junction Connector
I17 Ignition SW
HEATER Relay
10A A. C
10A GAUGE
50A HEATER
40A AM1
100A ALT(*1)
80A ALT(*2)
Battery
Cowl Side Panel LH
Cowl Side Panel RH
Front Left Fender Apron
* 1 : 2RZ–FE, 3RZ–FE
* 2 : 1RZ, 2L 3L
* 3 : G. C. C.
* 4 : Except *3
* 5 : 3RZ–FE
* 6 : 2RZ–FE
* 7 : Boost Ventilator Type
* 8 : Except *15