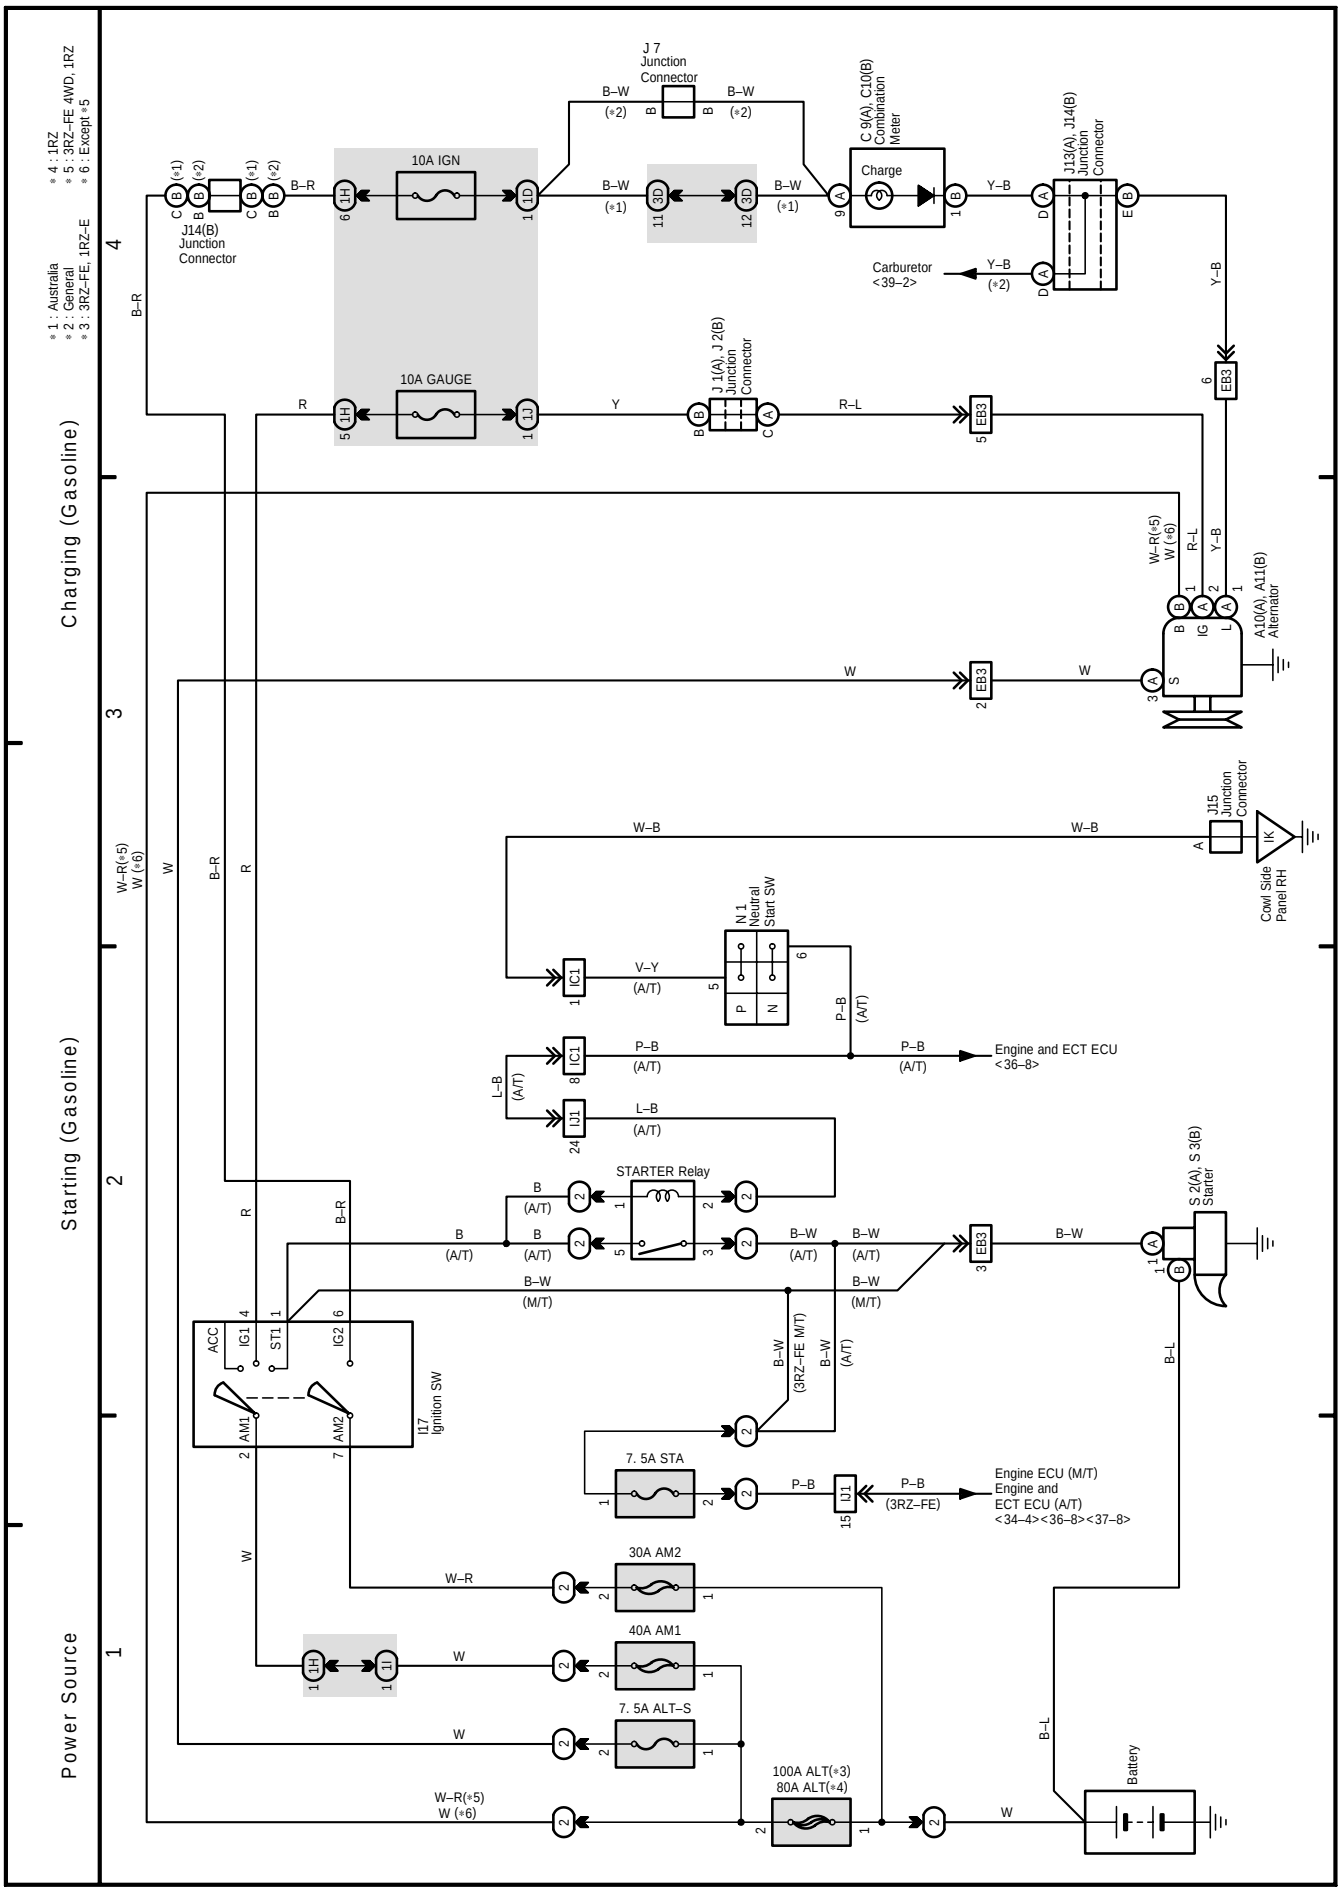

33 HILUX (RHD)
Power Source
Starting (Gasoline)
Charging (Gasoline)
1
2
3
4
*1 : Australia
*2 : General
*3 : 3RZ–FE, 1RZ–E
*4 : 1RZ
*5 : 3RZ–FE 4WD, 1RZ
*6 : Except *5
J14(B) Junction Connector
10A IGN
10A GAUGE
J 7 Junction Connector
C 9(A), C10(B) Combination Meter
Charge
Carburetor <39–2>
J13(A), J14(B) Junction Connector
J 1(A), J 2(B) Junction Connector
A10(A), A11(B) Alternator
J15 Junction Connector
Cowl Side Panel RH
N 1 Neutral Start SW
Engine and ECT ECU <36–8>
STARTER Relay
S 2(A), S 3(B) Starter
I17 Ignition SW
7. 5A STA
Engine ECU (M/T) Engine and ECT ECU (A/T) <34–4><36–8><37–8>
30A AM2
40A AM1
7. 5A ALT–S
100A ALT(*3) 80A ALT(*4)
Battery