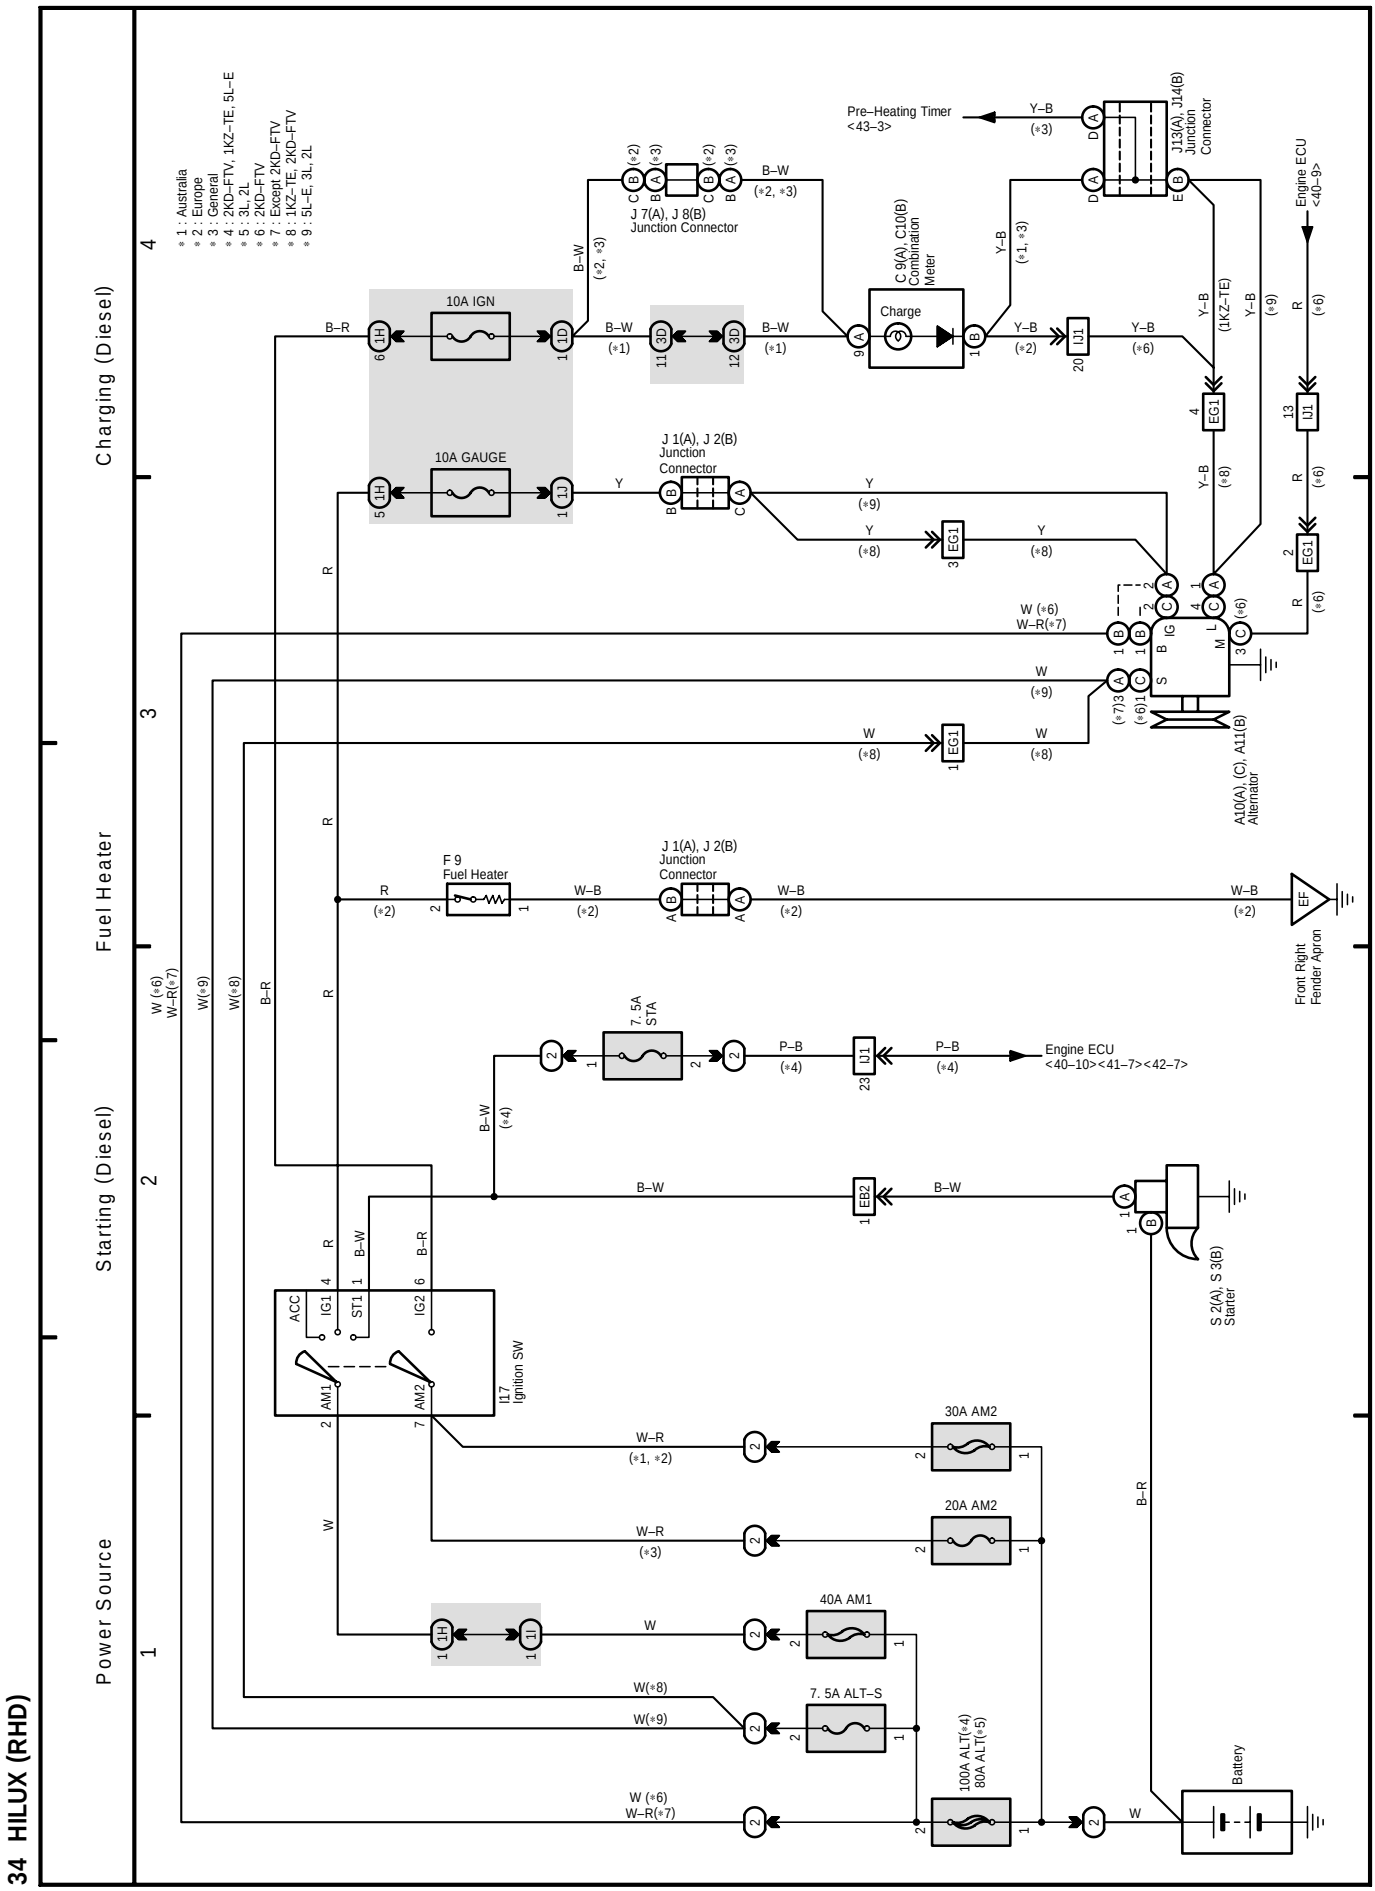

34 HILUX (RHD)
Power Source
Starting (Diesel)
Fuel Heater
Charging (Diesel)
1
2
3
4
* 1 : Australia
* 2 : Europe
* 3 : General
* 4 : 2KD–FTV, 1KZ–TE, 5L–E
* 5 : 3L, 2L
* 6 : 2KD–FTV
* 7 : Except 2KD–FTV
* 8 : 1KZ–TE, 2KD–FTV
* 9 : 5L–E, 3L, 2L
Pre–Heating Timer <43–3>
J13(A), J14(B) Junction Connector
Engine ECU <40–9>
J 7(A), J 8(B) Junction Connector
C 9(A), C10(B) Combination Meter
Charge
10A IGN
10A GAUGE
J 1(A), J 2(B) Junction Connector
F 9 Fuel Heater
A10(A), (C), A11(B) Alternator
Front Right Fender Apron
7. 5A STA
Engine ECU <40–10><41–7><42–7>
S 2(A), S 3(B) Starter
i17 Ignition SW
ACC
IG1
ST1
IG2
AM1
AM2
30A AM2
20A AM2
40A AM1
7. 5A ALT–S
100A ALT(*4) 80A ALT(*5)
Battery