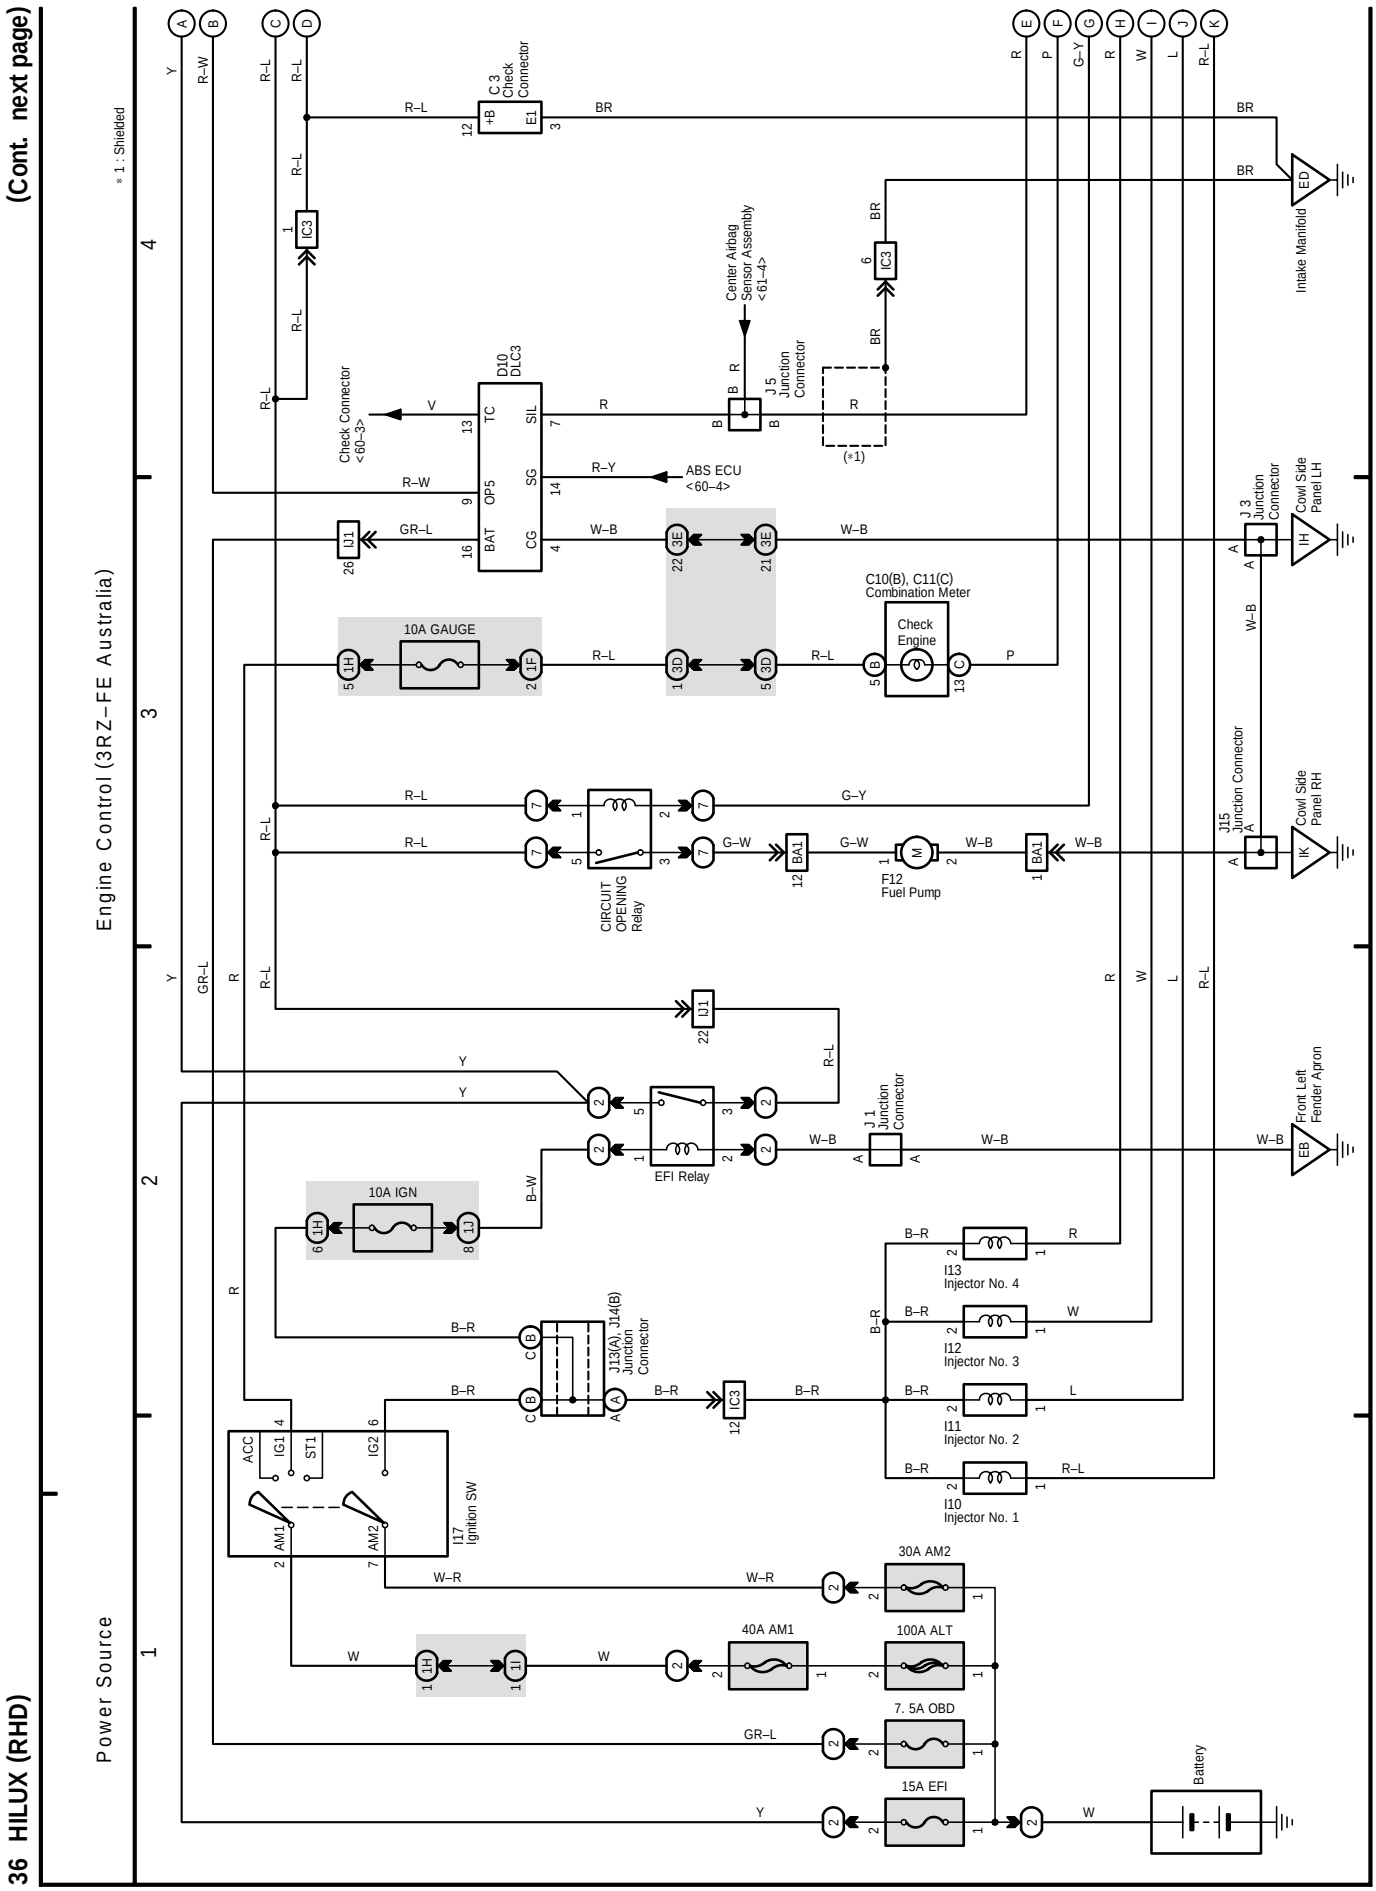

(Cont. next page)
36 HILUX (RHD)
Power Source
Engine Control (3RZ–FE Australia)
*1 : Shielded
C 3 Check Connector
D10 DLC3
Check Connector <60–3>
ABS ECU <60–4>
Center Airbag Sensor Assembly <61–4>
J 5 Junction Connector
(*1)
Intake Manifold
ED
J 3 Junction Connector
Cowl Side Panel LH
IH
C10(B), C11(C) Combination Meter
Check Engine
10A GAUGE
J15 Junction Connector
Cowl Side Panel RH
IK
CIRCUIT OPENING Relay
F12 Fuel Pump
J 1 Junction Connector
Front Left Fender Apron
EB
EFI Relay
10A IGN
I13 Injector No. 4
I12 Injector No. 3
I11 Injector No. 2
I10 Injector No. 1
J13(A), J14(B) Junction Connector
I17 Ignition SW
ACC
IG1
ST1
IG2
AM1
AM2
30A AM2
40A AM1
100A ALT
7. 5A OBD
15A EFI
Battery

36 HILUX (RHD) (Cont' d)

