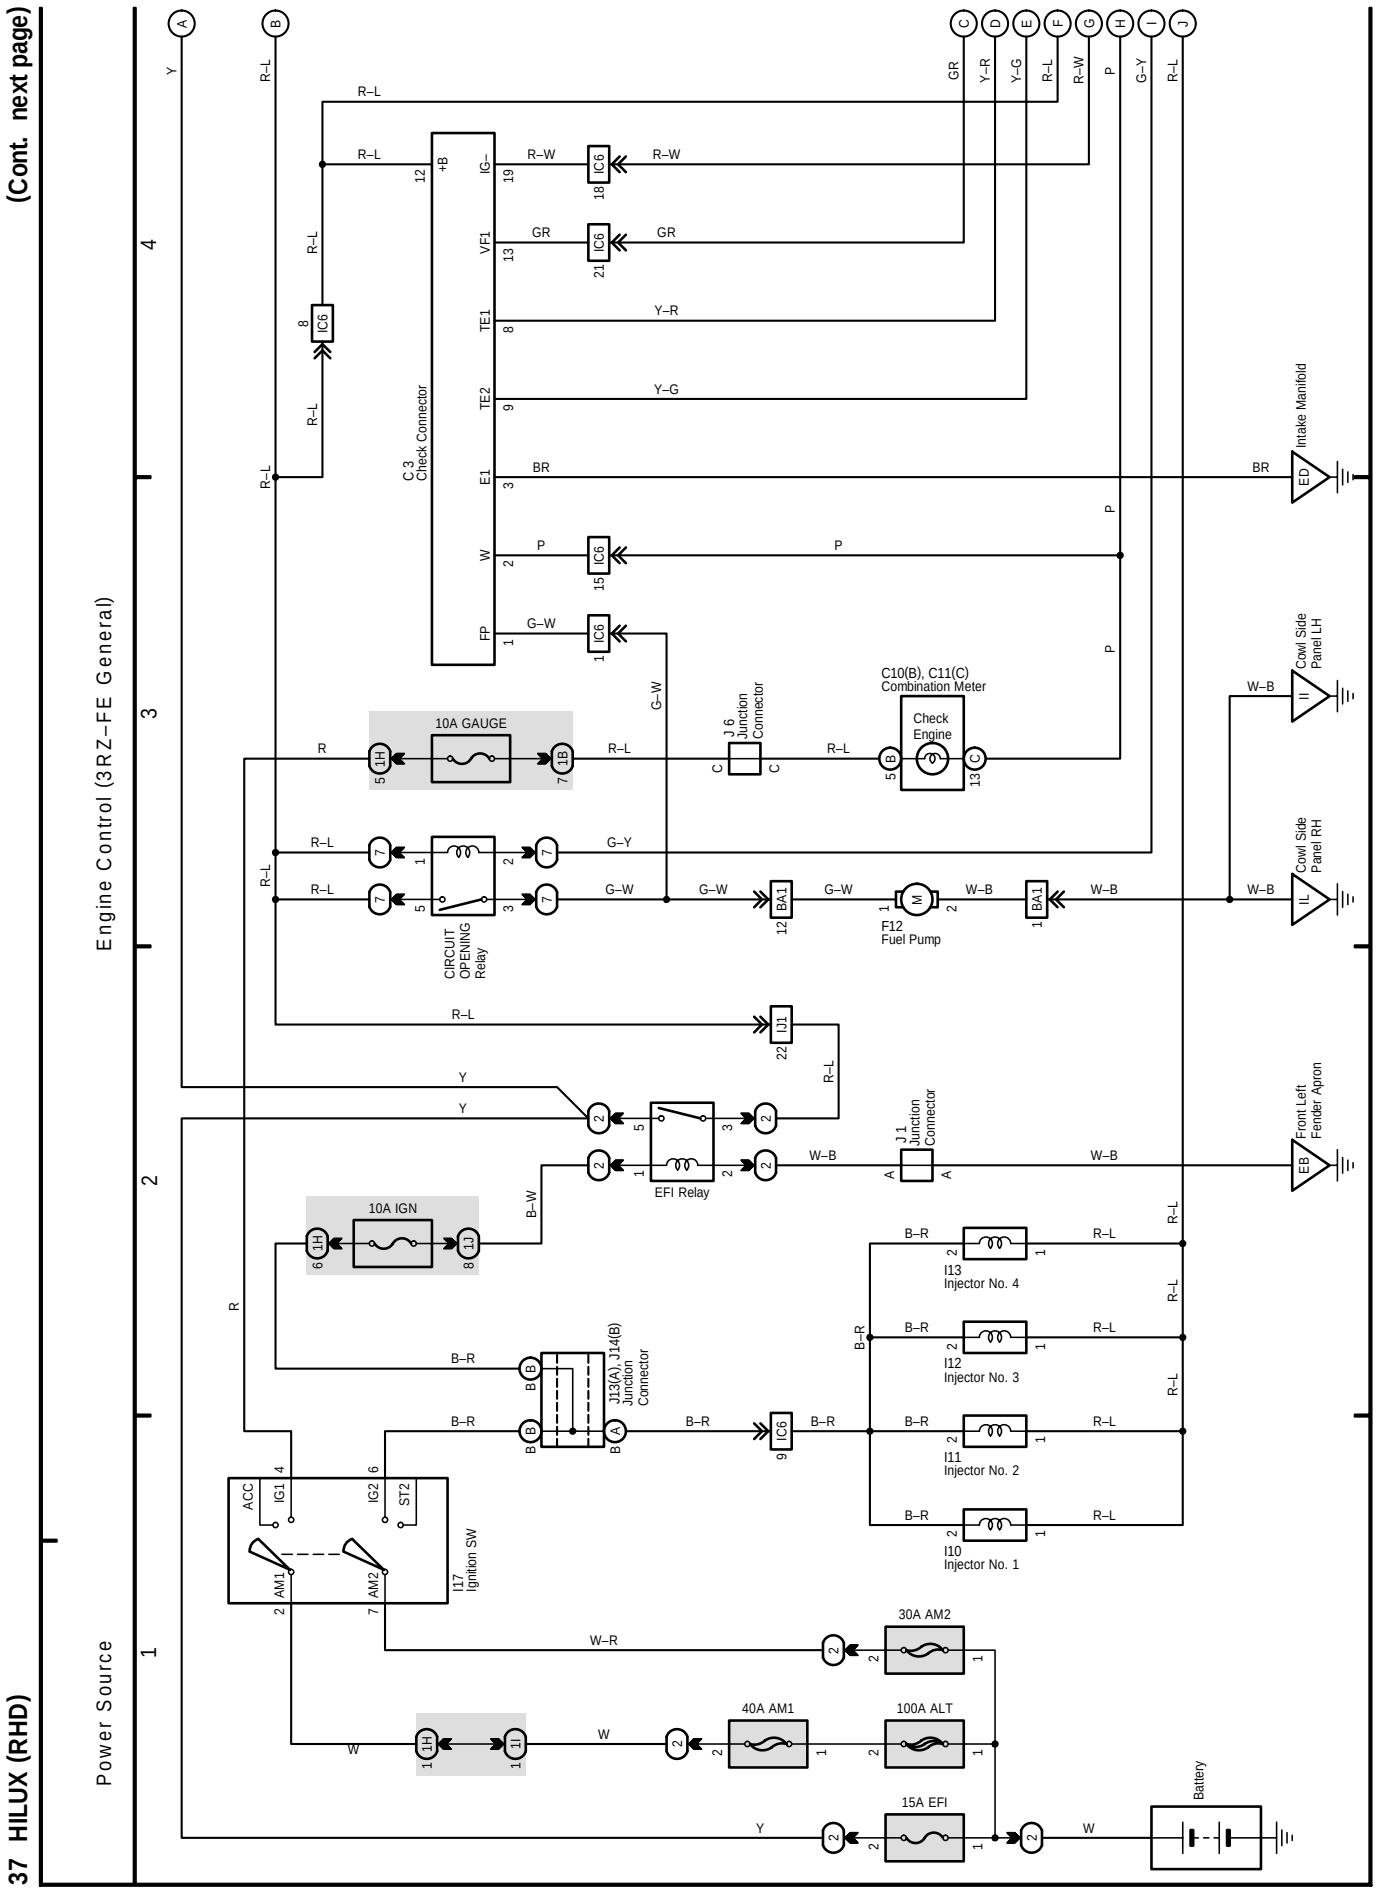

(Cont. next page)
37 HILUX (RHD)
Power Source
Engine Control (3RZ–FE General)
C.3 Check Connector
+B
IG–
VF1
TE1
TE2
E1
W
FP
IC6
10A GAUGE
CIRCUIT OPENING Relay
J6 Junction Connector
C10(B), C11(C) Combination Meter
Check Engine
F12 Fuel Pump
BA1
M
EFI Relay
J1 Junction Connector
10A IGN
J13(A), J14(B) Junction Connector
I17 Ignition SW
ACC
IG1
IG2
ST2
AM1
AM2
I10 Injector No. 1
I11 Injector No. 2
I12 Injector No. 3
I13 Injector No. 4
30A AM2
40A AM1
100A ALT
15A EFI
Battery
Intake Manifold
Cowl Side Panel LH
Cowl Side Panel RH
Front Left Fender Apron

37 HILUX (RHD) (Cont' d)

